

Kundendienst-Handbuch Service Manual

PERSONAL COMPUTER Tower AT 201/202/220





Ersatzteilliste für Tower AT 201/202/220
Parts List for Tower AT 201/202/220

Bestell-Nr. Part.-No.	Bezeichnung	Description	Zeich.-Pos. Ref.-No.	Preisgruppe
50 467 00	FK System Tower	Box system tower		C 3
50 466 00	Sty-Verp. System Tower	Polyfoam system tower		C 3
50 495 00	FK Tastatur Tower	Box keyboard tower		C 2
50 496 00	Sty-Verp. Tastatur Tower	Polyfoam keyboard tower		C 2
50 481 00	Tastatur (D)	Keyboard (D)		F 6
50 482 00	Tastatur (F)	Keyboard (F)		F 6
50 202 00	Tastatur (DK)	Keyboard (DK)		F 6
50 203 00	Tastatur (I)	Keyboard (I)		F 6
50 204 00	Tastatur (N)	Keyboard (N)		F 6
50 485 00	Tastatur (S/SF)	Keyboard (S/SF)		F 6
50 206 00	Tastatur (P)	Keyboard (P)		F 6
50 214 00	Tastatur (GR)	Keyboard (GR)		F 6
50 484 00	Tastatur (GB)	Keyboard (GB)		F 6
50 483 00	Tastatur (E)	Keyboard (E)		F 6
50 486 00	Tastatur (CH)	Keyboard (CH)		F 6
50 097 00	Netzkabel (D)	Cord AC (D)		C 0
50 562 00	Netzkabel (GB)	Cord AC (GB)		C 0
50 617 00	Netzkabel (CH)	Cord AC (CH)		C 0
50 225 00	Gehäuse Oberteil Tower	Cabinet top	1	C 3
50 226 00	Gehäuse Unterteil Tower	Cabinet bottom	2	C 9
50 493 00	Gehäusefuß	Leg	3	A 5
50 172 00	Blechchassis Tower	Chassis metal	4	D 4
50 450 00	HD Controller 220 MFM	HD Controller 220 MFM	5	G 1
50 229 00	Platine Best. (D) Tower AT CPU	PCB (D) tower AT CPU	6	*
50 293 00	Haltewinkel CPU Leiterplatte	Angle CPU	7	A 9
50 215 00	Netzteil Tower 90W	Power supply tower 90W	8	G 8
50 448 00	Kabelbaum 9pol.	Cable 9-pol.	9	B 8
50 171 00	Floppyhalter	Bracket floppy	10	B 8
50 472 00	Floppy Laufwerk	Floppy disk drive	11, 12	G 7
50 221 00	Kabelbaum Floppy 26pol.	Cable floppy 26-pol.	13	B 7
50 473 00	Hard Disk Laufwerk	Hard disc drive	14	J 9
50 220 00	Kabelbaum 20pol.	Cable 20-pol.	15	B 9
50 223 00	Kabelbaum 34pol.	Cable 34-pol.	16	C 5
50 224 00	Blindblende	Plate blind	17	A 9
50 020 00	Blindblech	Plate blind	18	B 9
50 228 00	Platine Best. (D) Tower EGA I/O	PCB (D) tower EGA I/O	19	J 1

*Preis auf Anfrage

Exploded view

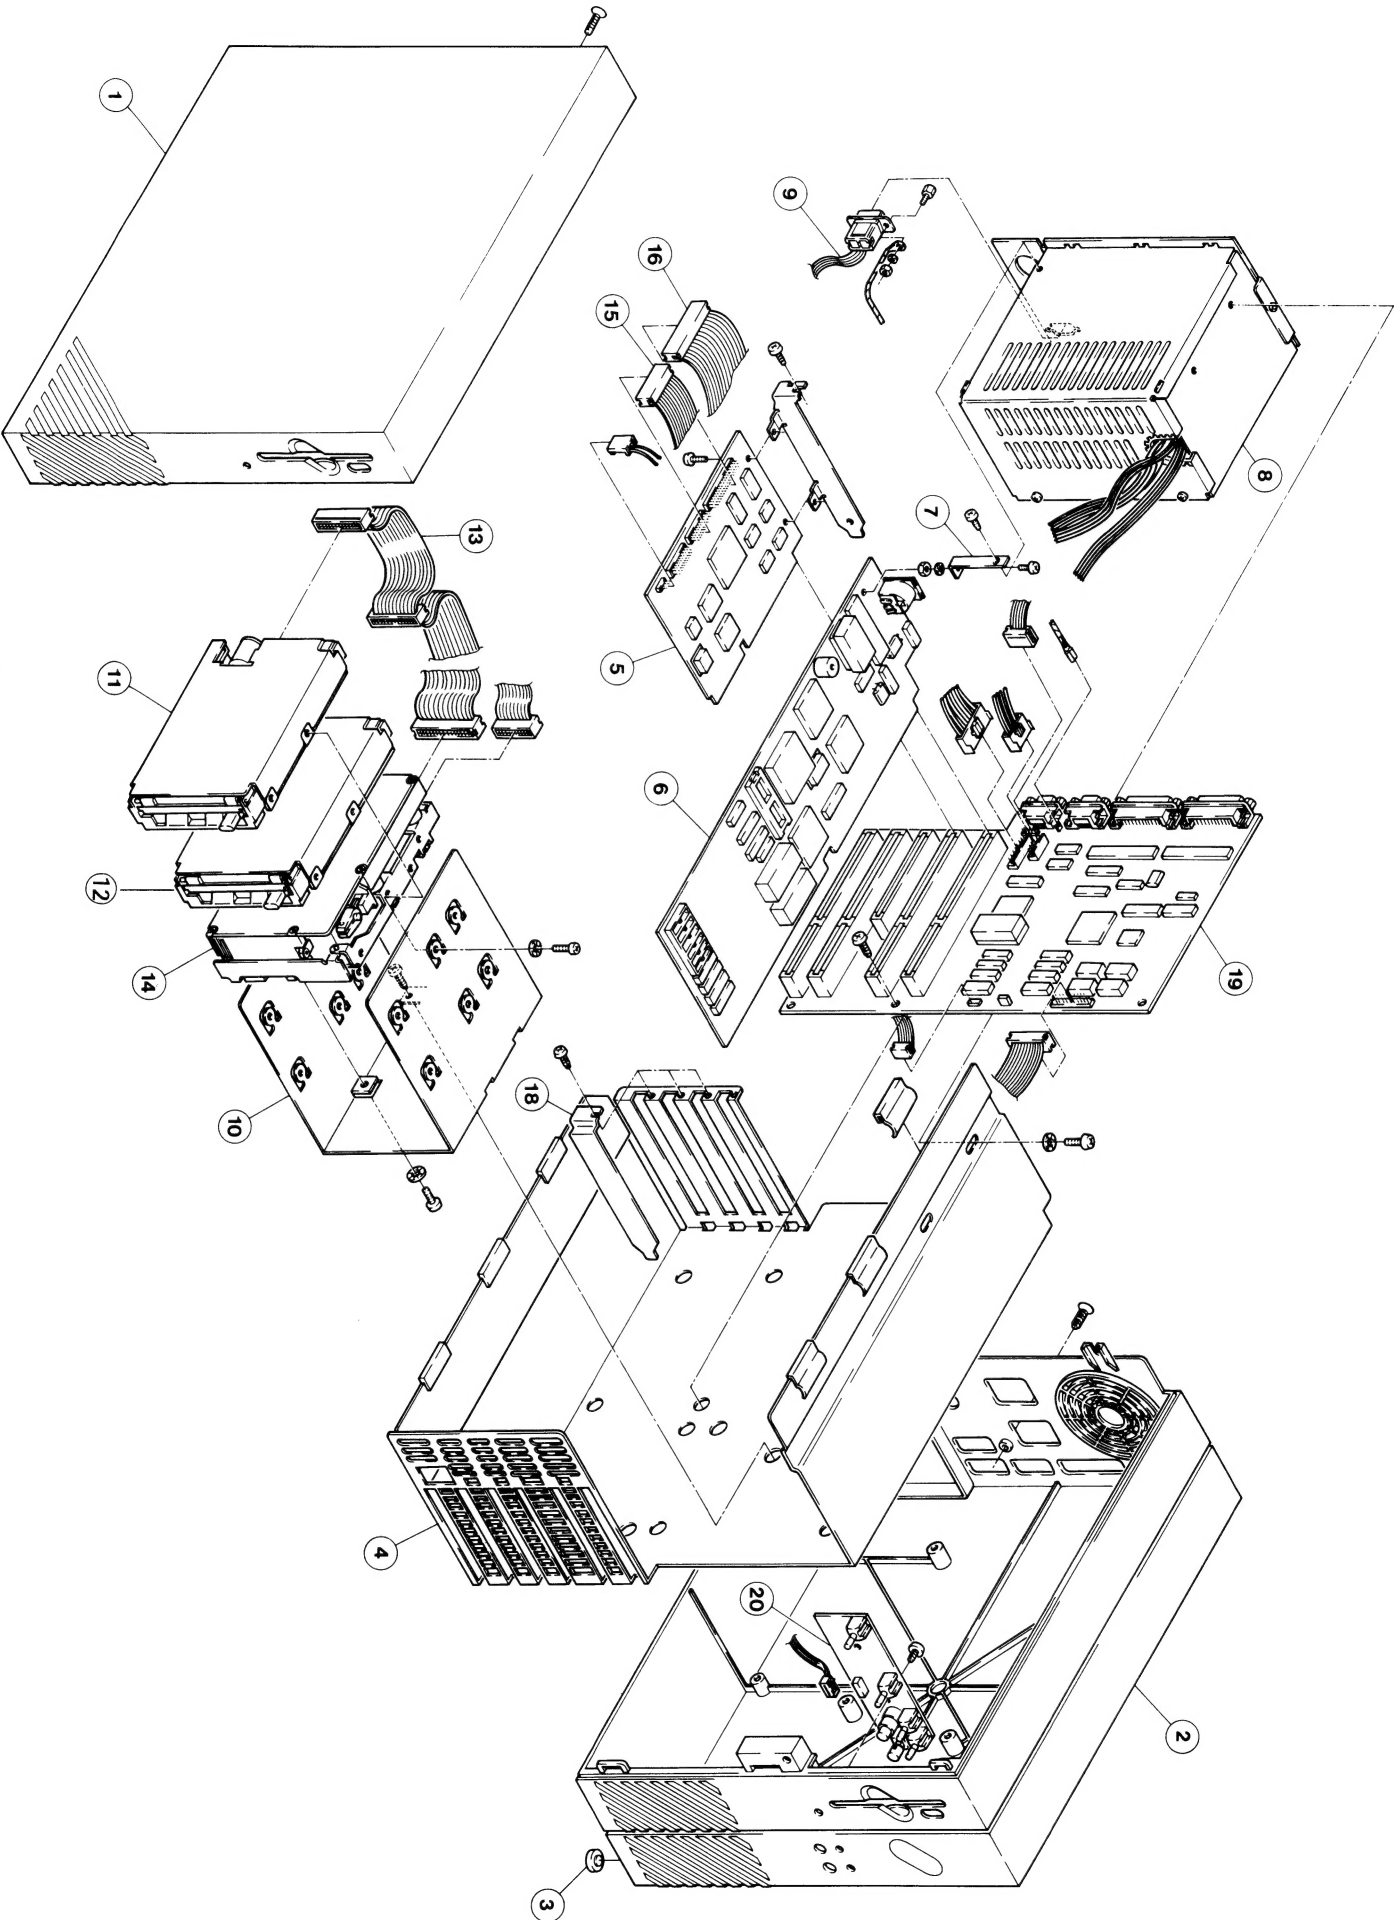


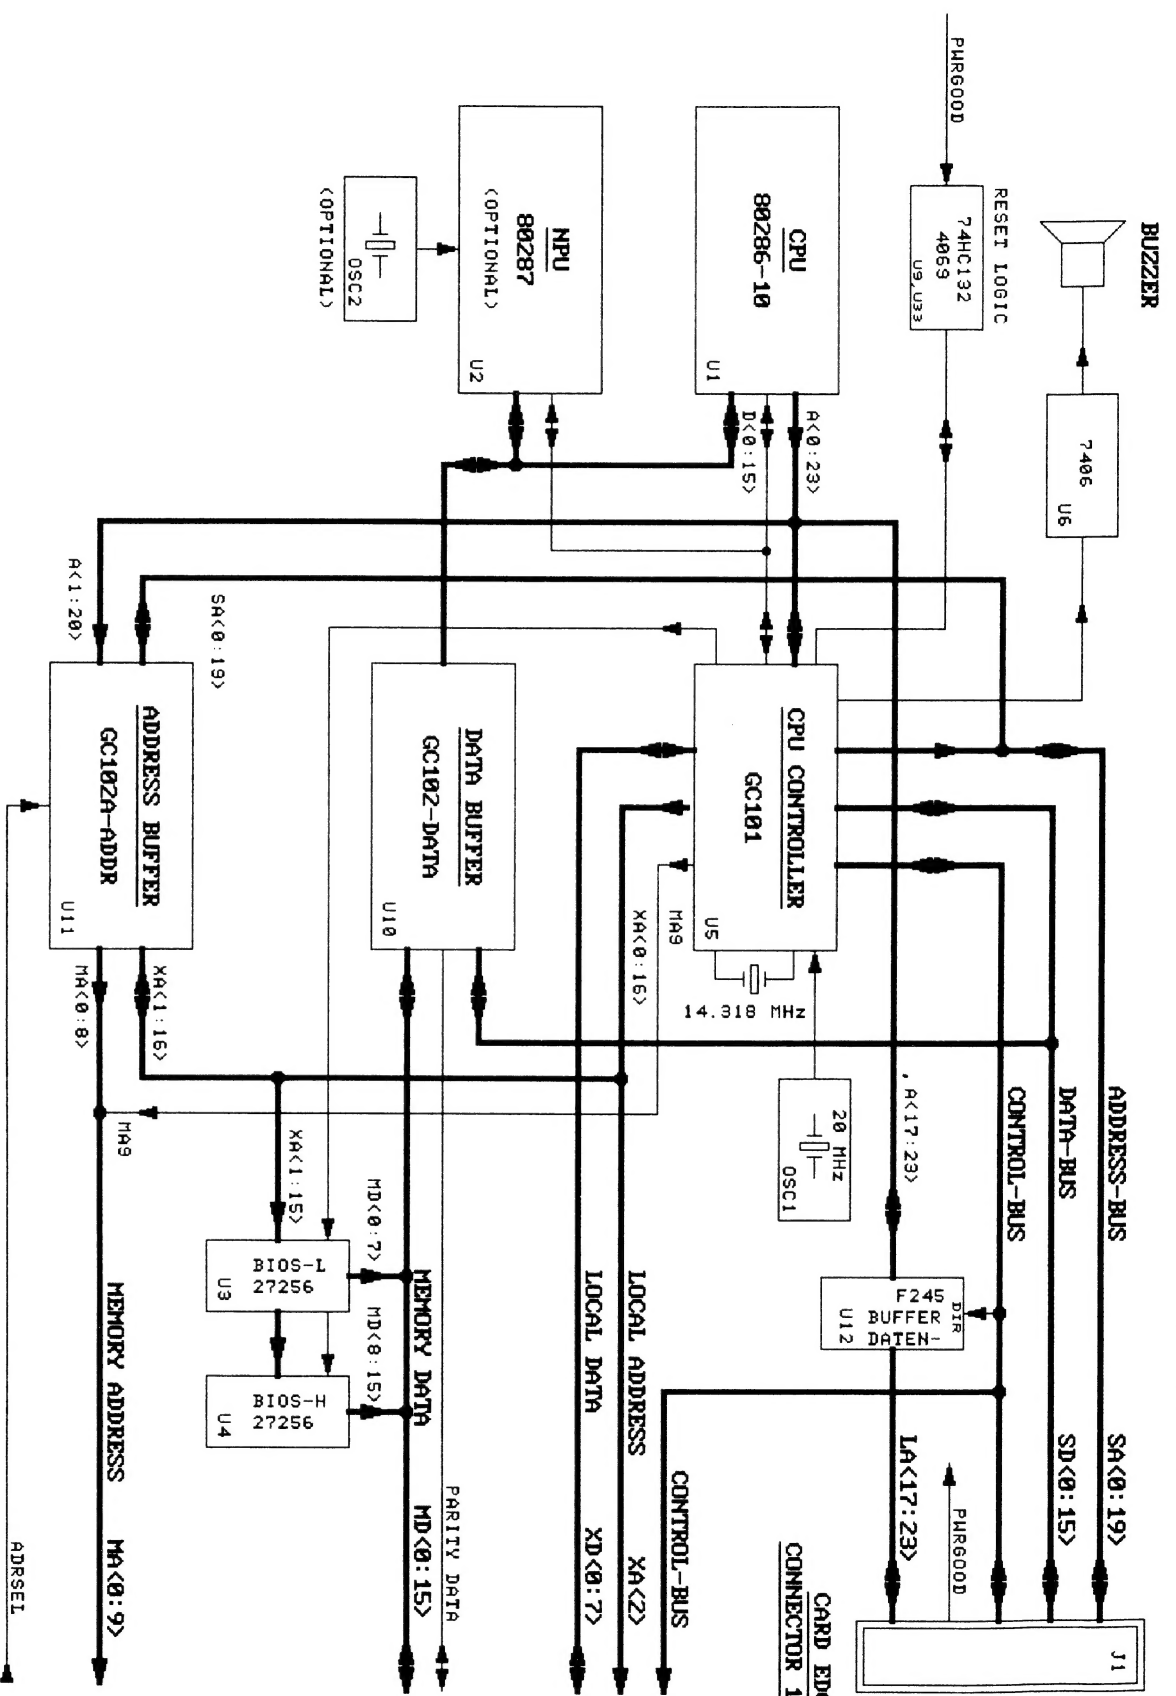

Schneider

DRAWN BY: H. ULLRICH
 APPROVED: TOWER CPU286 PCB

USED ON: TOWER AT
 SIZE: A3
 DATE: 10-05-88
 SHEET: 1 of 2

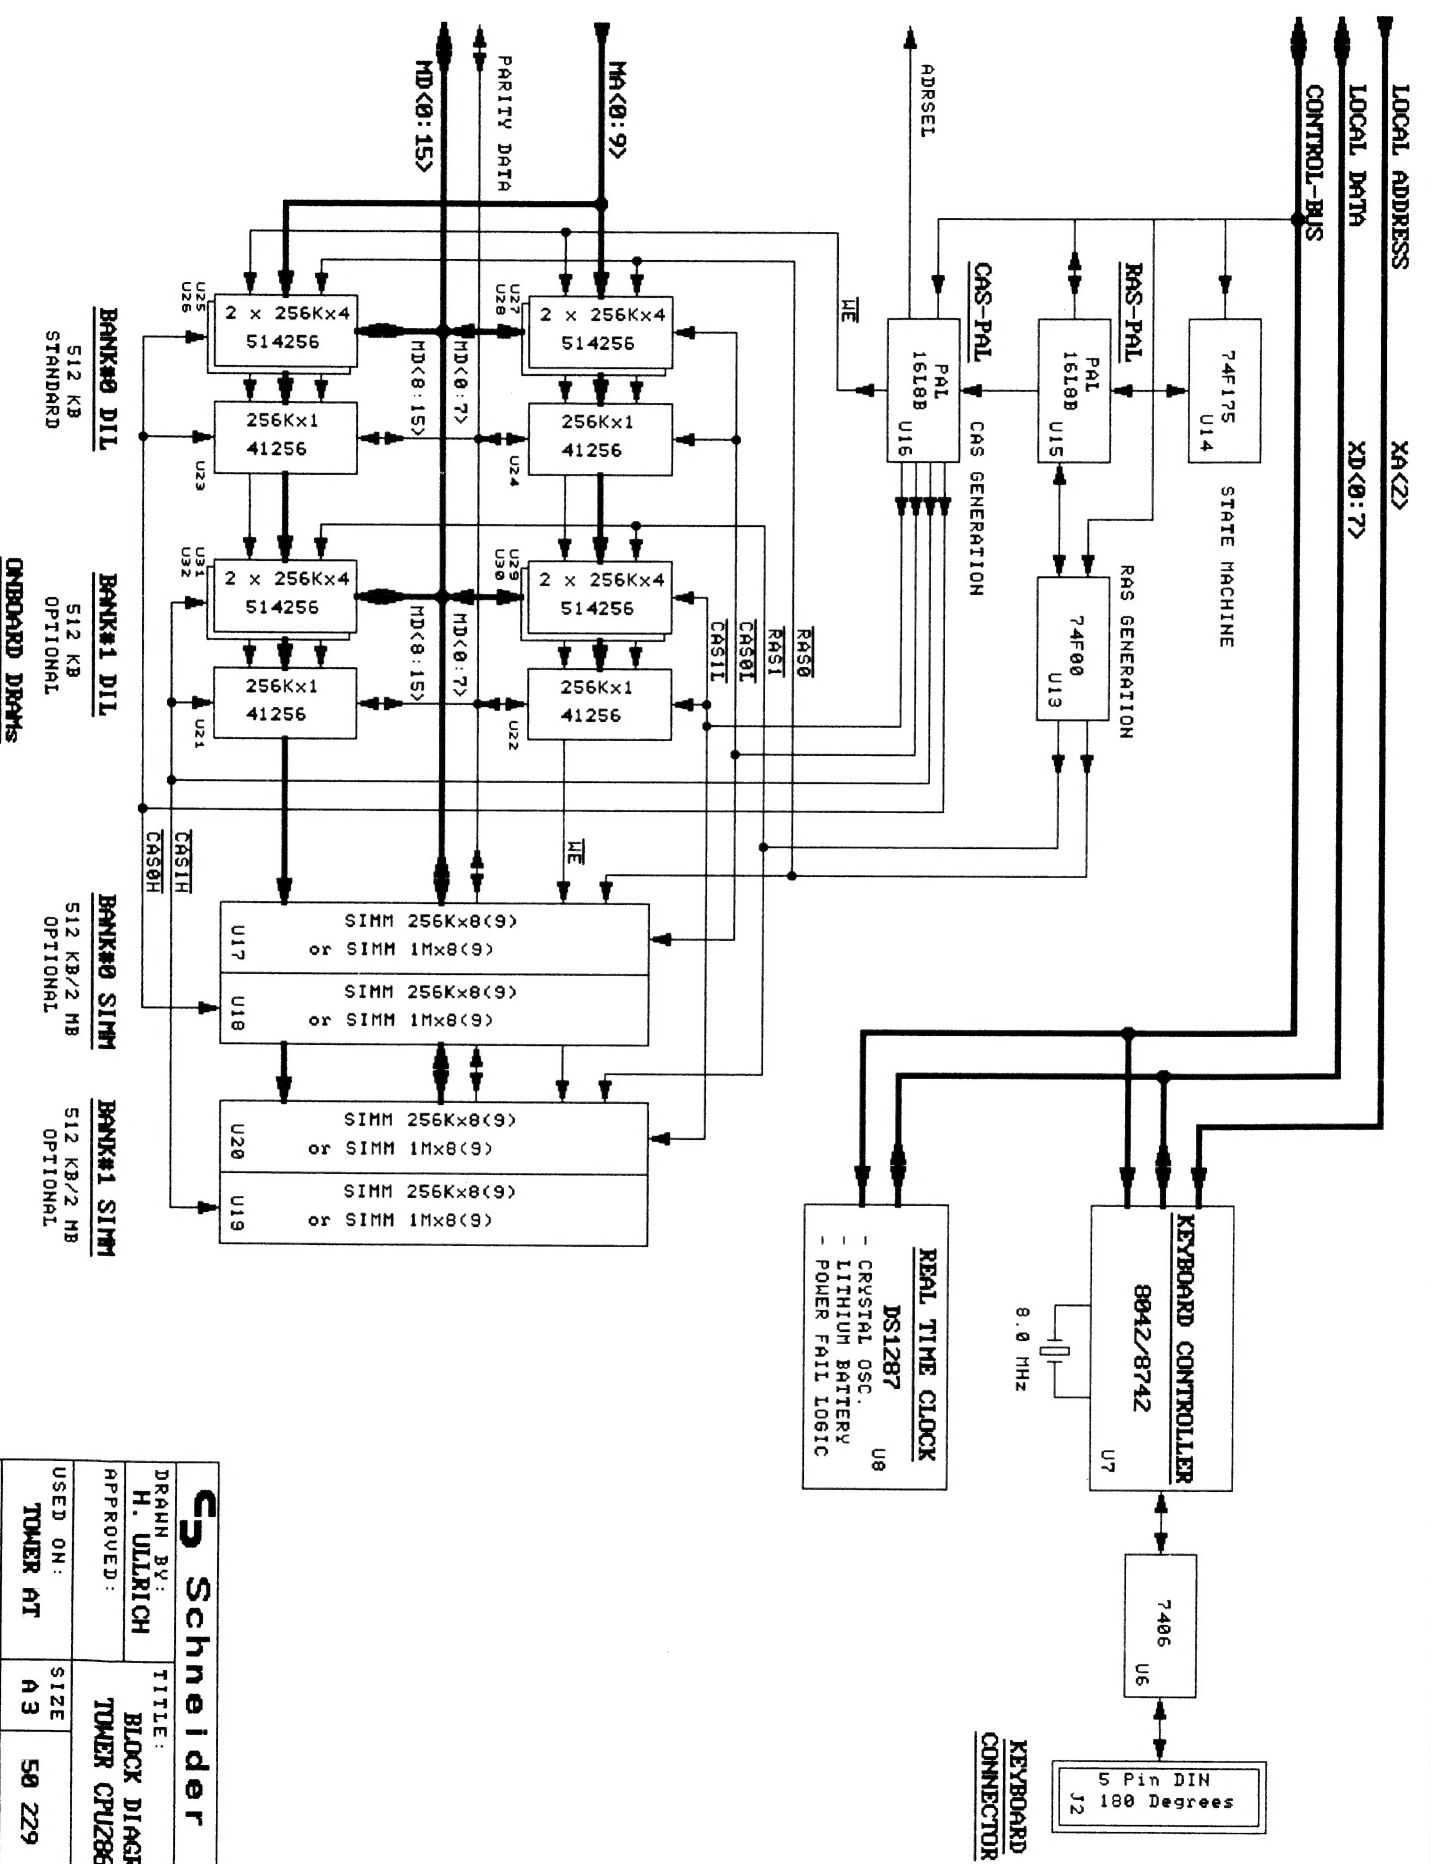

Schneider

DRAWN BY: H. ULLRICH
 APPROVED: [Signature]
 TITLE: BLOCK DIAGRAM
 TUMER CPU286 PCB

USED ON: TUMER AT
 SIZE: A3
 DATE: 10-05-88
 SHEET: 2 of 2

TOM-BLK2

REVISIONS			
LTR	DESCRIPTION	DATE	APPROVED
1	ADVANCED ENGINEERING RELEASE	05-13-88	SCHLAGE
2		05-18-88	ASSMANN
3		06-01-88	SCHLAGE
4	First Layout	06-22-88	SCHLAGE
5	Layout REV 2	08-06-88	ASSMANN
6	Layout REV 2 CORRECTIONS	08-22-88	ASSMANN
7	PCB REV 2A FIX OF BUS 'MASTER'	08-31-88	ASSMANN
8	PCB REV 4. LAYOUT: ADDITIONAL RESET LOGIC ELIMINATED	10-27-88	ULLRICH

DRAWING FILES:	CONTENTS:
TDM_81.DMG	THIS SHEET
TDM_82.DMG	CPU SECTION
TDM_83.DMG	BIOS EPROMS
TDM_84.DMG	GC101
TDM_85.DMG	KEYBOARD / CLOCKS
TDM_86.DMG	REAL TIME CLOCK
TDM_87.DMG	ADDRESS / DATA BUFFERS
TDM_88.DMG	TIMING FOR MEMORY
TDM_89.DMG	MEMORY ON SIL- MODULE
TDM_810.DMG	MEMORY ON BOARD
TDM_811.DMG	CONNECTORS
TDM_812.DMG	BLOCK CAPS

Schneider

DRAWN BY:
H. ULLRICH

APPROVED:

TITLE:
SCHEMATICS
Tower- CPU286

USED ON:

Tower-AT

SIZE

A3

50 229


REV

8

DATE: 11-02-88

SHEET: 1 of 12

TDM_81

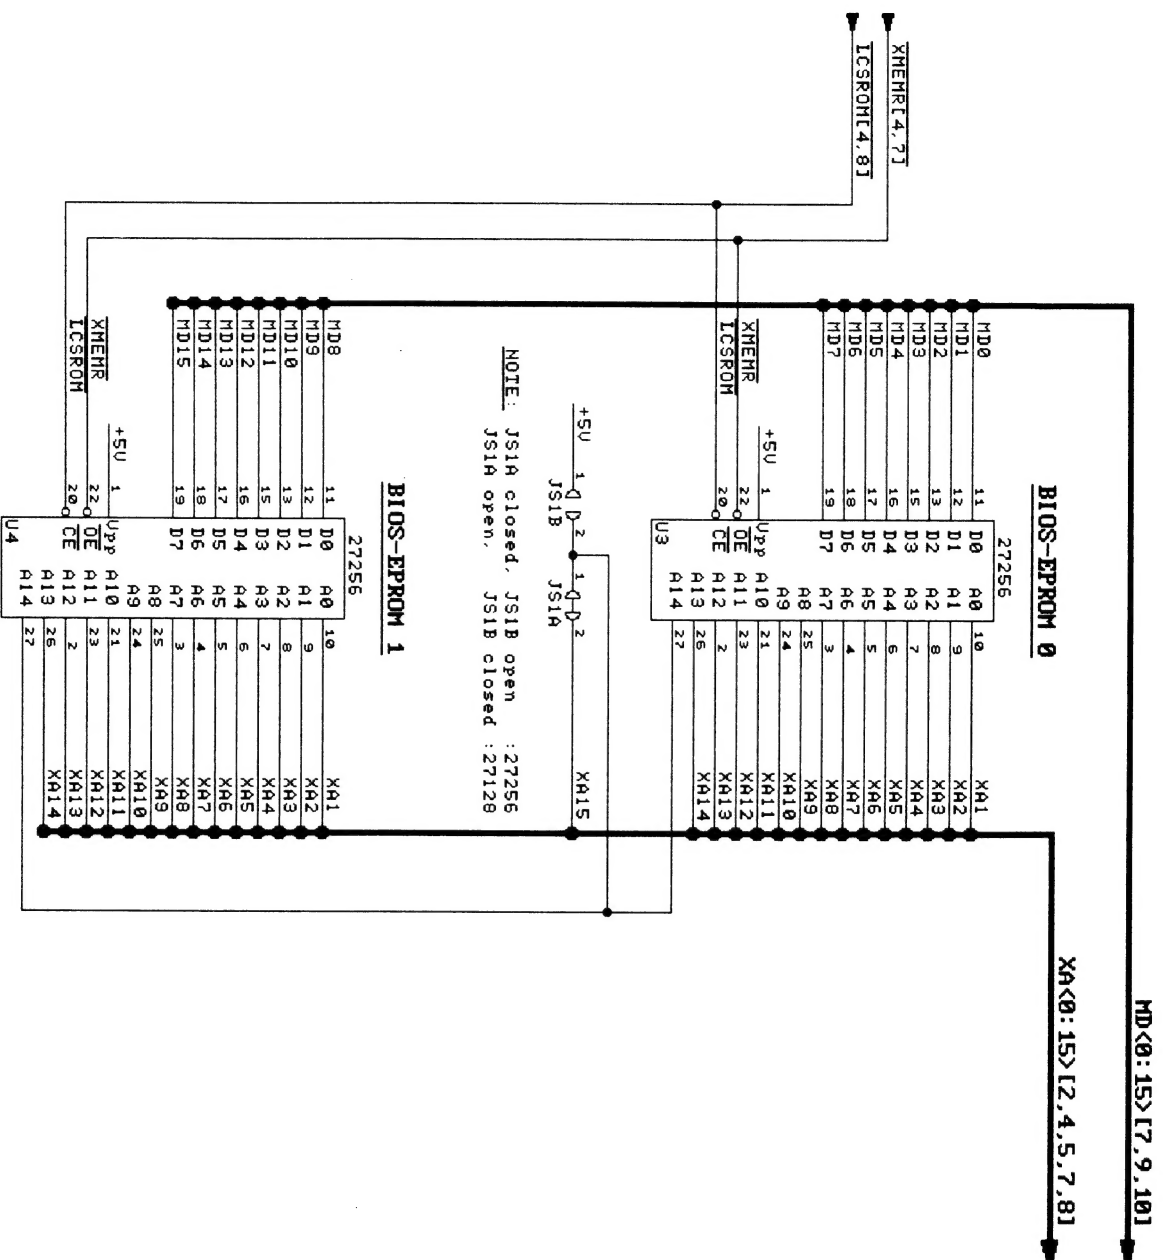

Schneider

DRAWN BY:

B. ASSMANN

APPROVED:

TITLE:
SCHEMATIC
Tower-- CPU286

USED ON:

Tower--AT

SIZE

A3

50 229



REV

8

DATE: 11-02-88

SHEET: 3 of 12


XA<0:16>[2,3,5,7,8]
CPU-ADDR<0:23>[2,7]

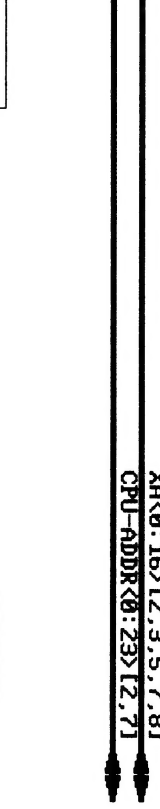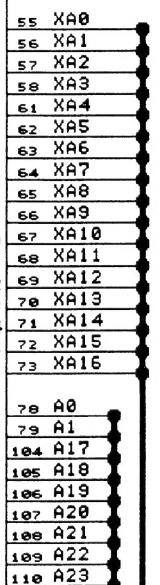

GC101-160 P-FP

US

VSS = 19, 20, 42, 59, 60
100, 101, 140, 141
VDD = 40, 80, 120, 160

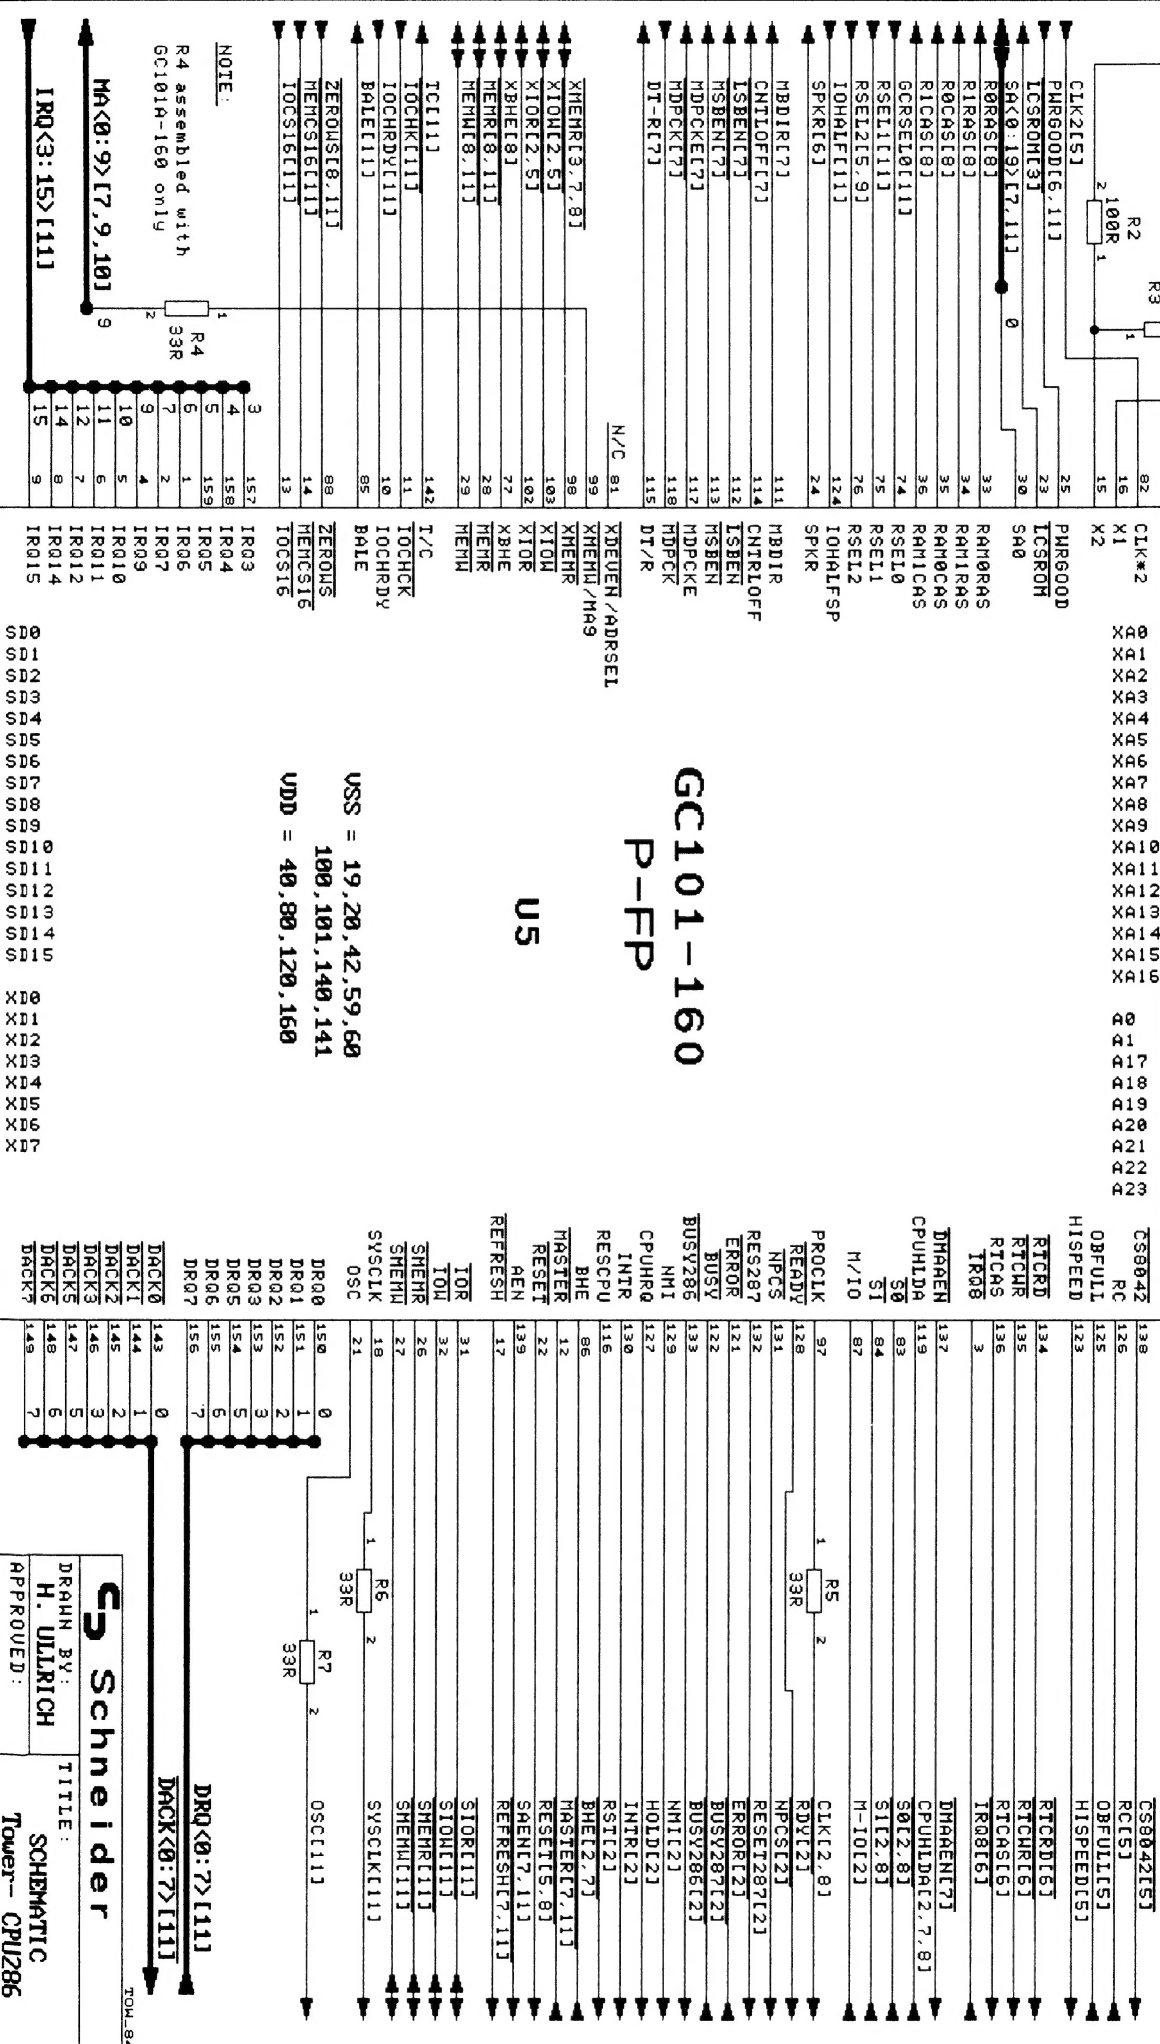

Cy Schneider

DRAWN BY: H. ULRICH
APPROVED: Tower-AT


TITLE: SCHEMATIC
Tower-CPU286

USED ON: Tower-AT
DATE: 11-02-88

SIZE: A3
SHEET: 4 of 12

REV: 8

NOTE:
 For use with U8=MC146818, omit R13 and assemble Q3, R14, R16-R18, D4, T1, T2, C105, and C302.
 D2 and D3 for optionally external battery.
 For use with U8=DS1287, omit Q3, R14, R16-R18, D2, D3, D4, T1, T2, C105, and C302 and assemble R13.

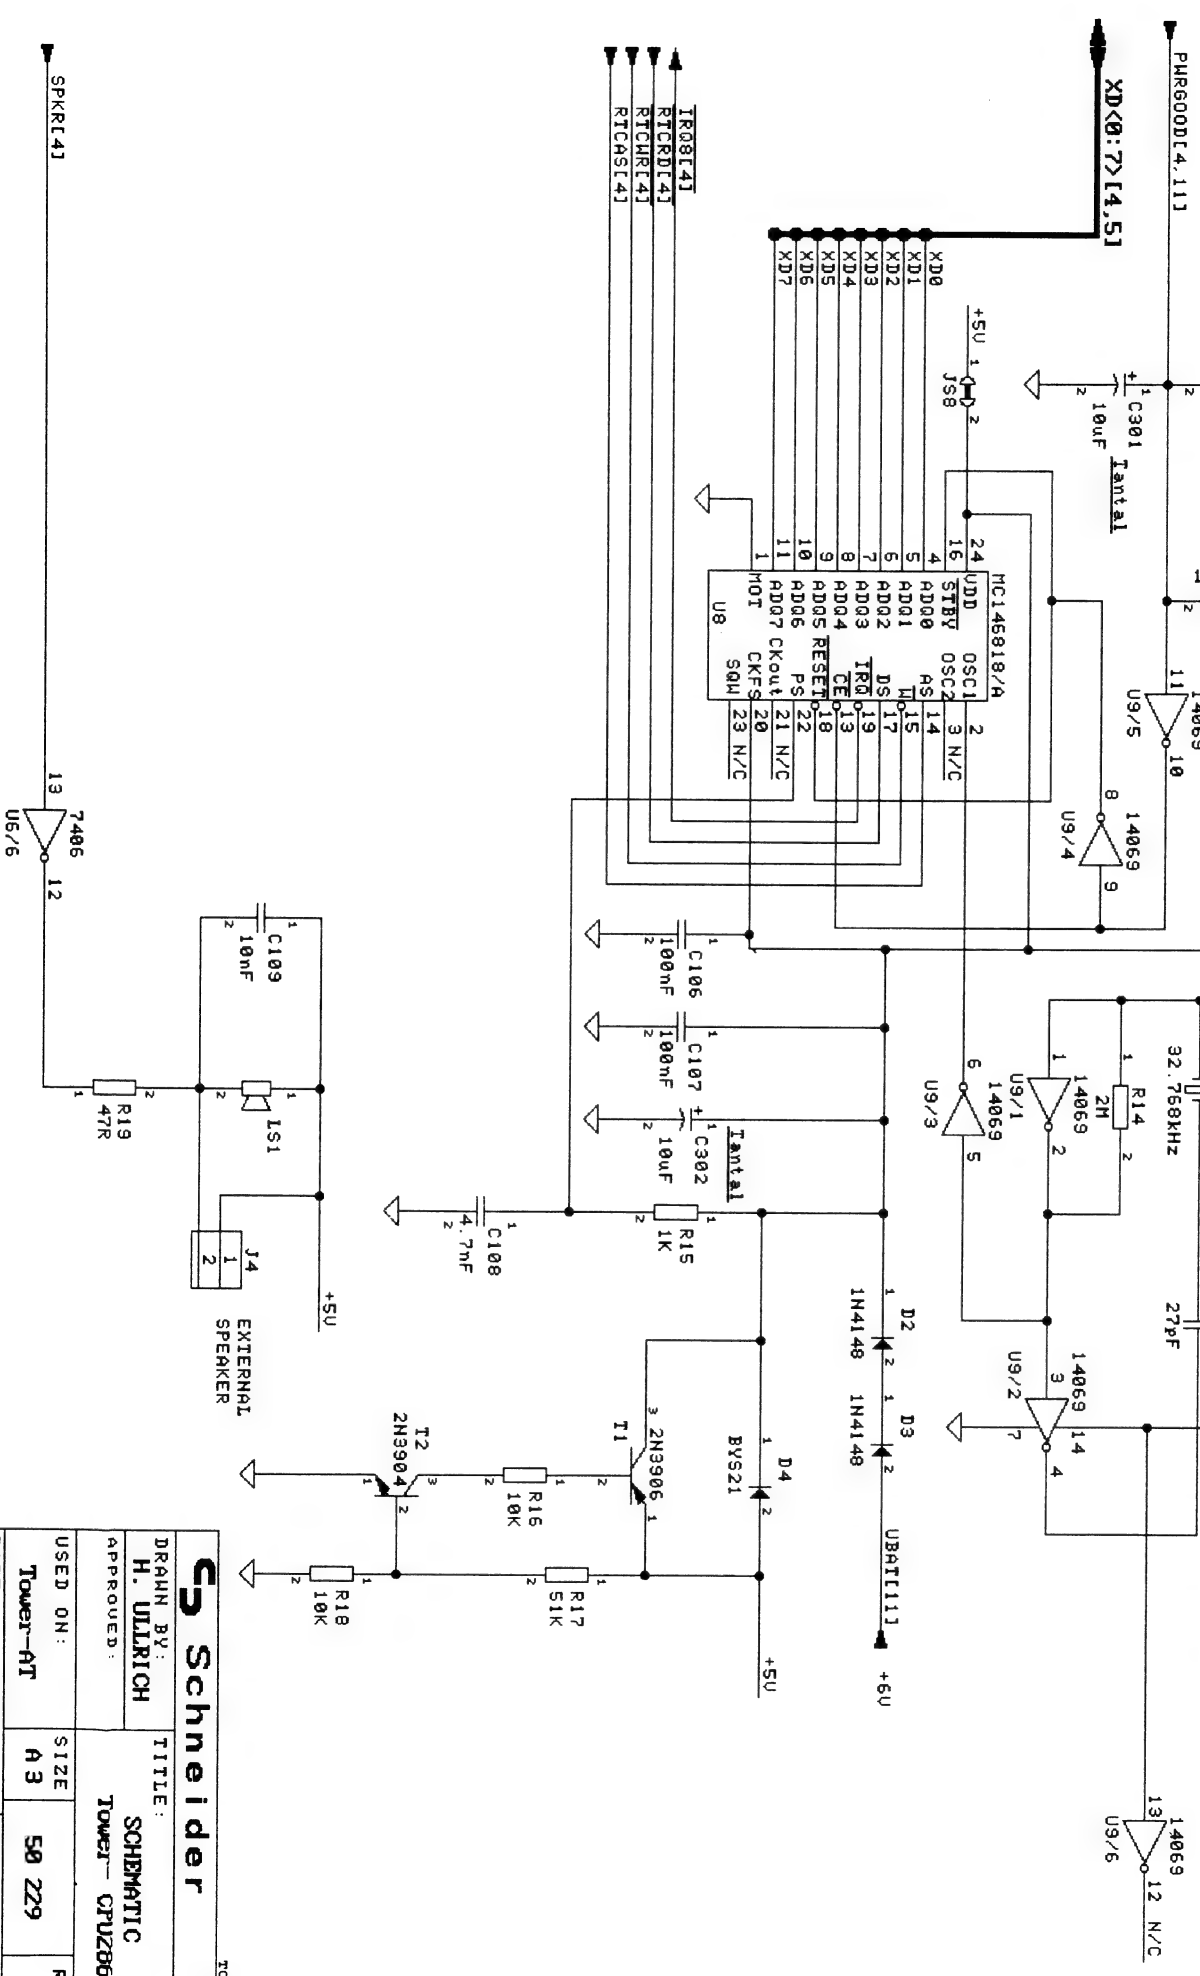



Schneider
 TITLE: SCHEMATIC
 Tower-AT
 Tower-AT

DRAWN BY: H. ULLRICH
 APPROVED: Tower-AT

USED ON: Tower-AT
 SIZE: A3
 50 229
 REV: 8

DATE: 11-02-88
 SHEET: 6 of 12

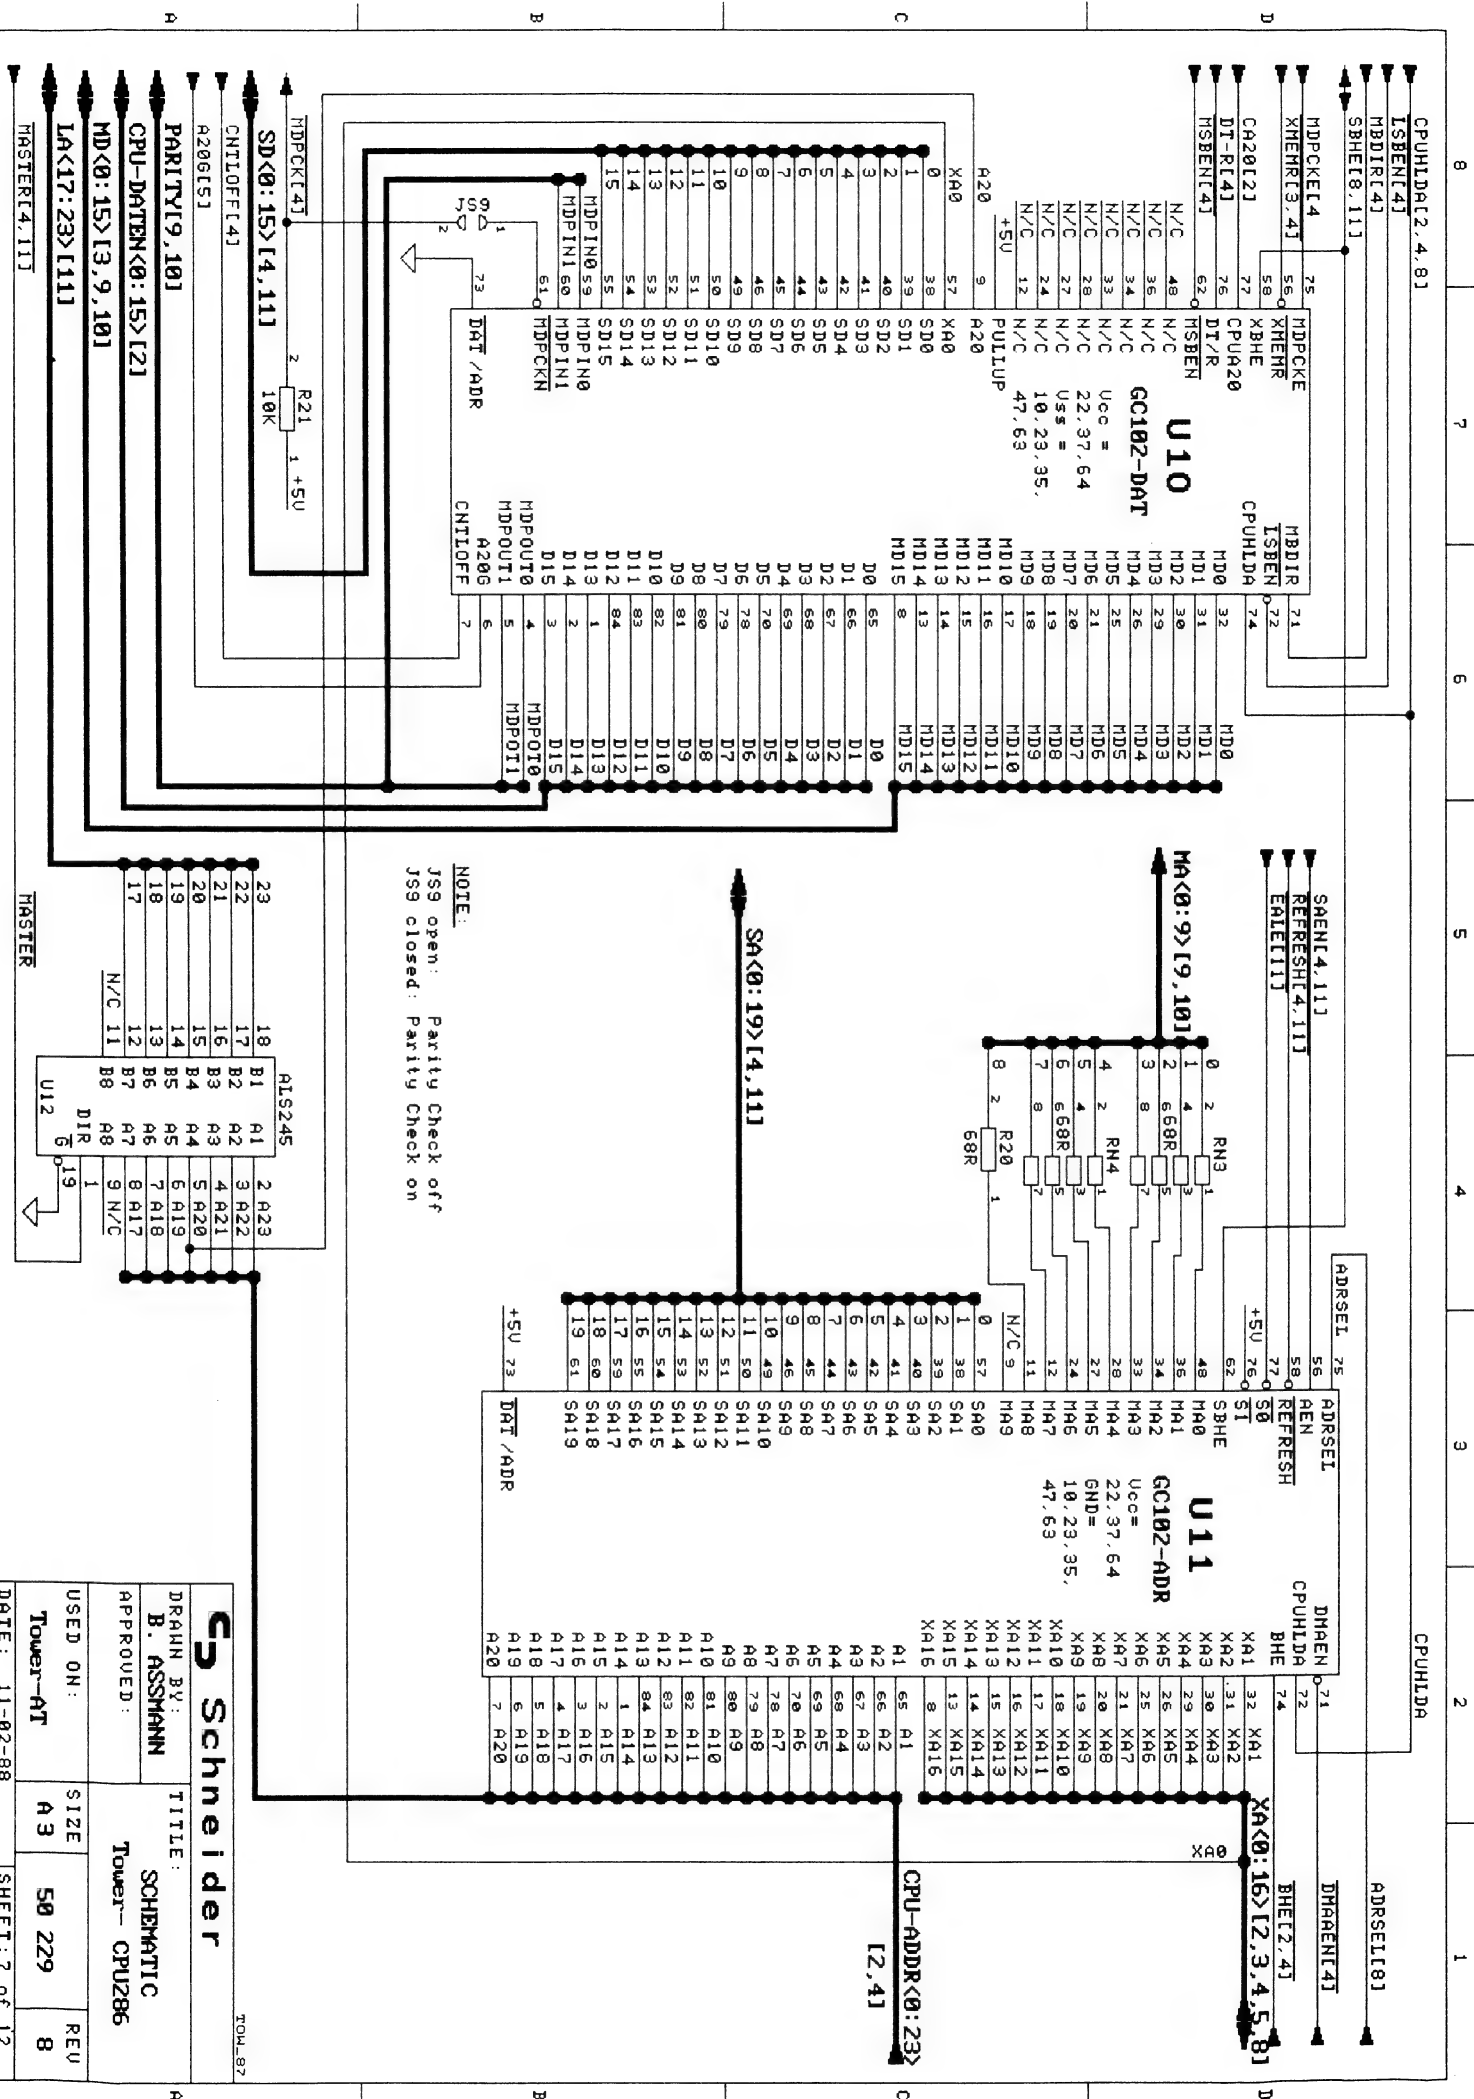

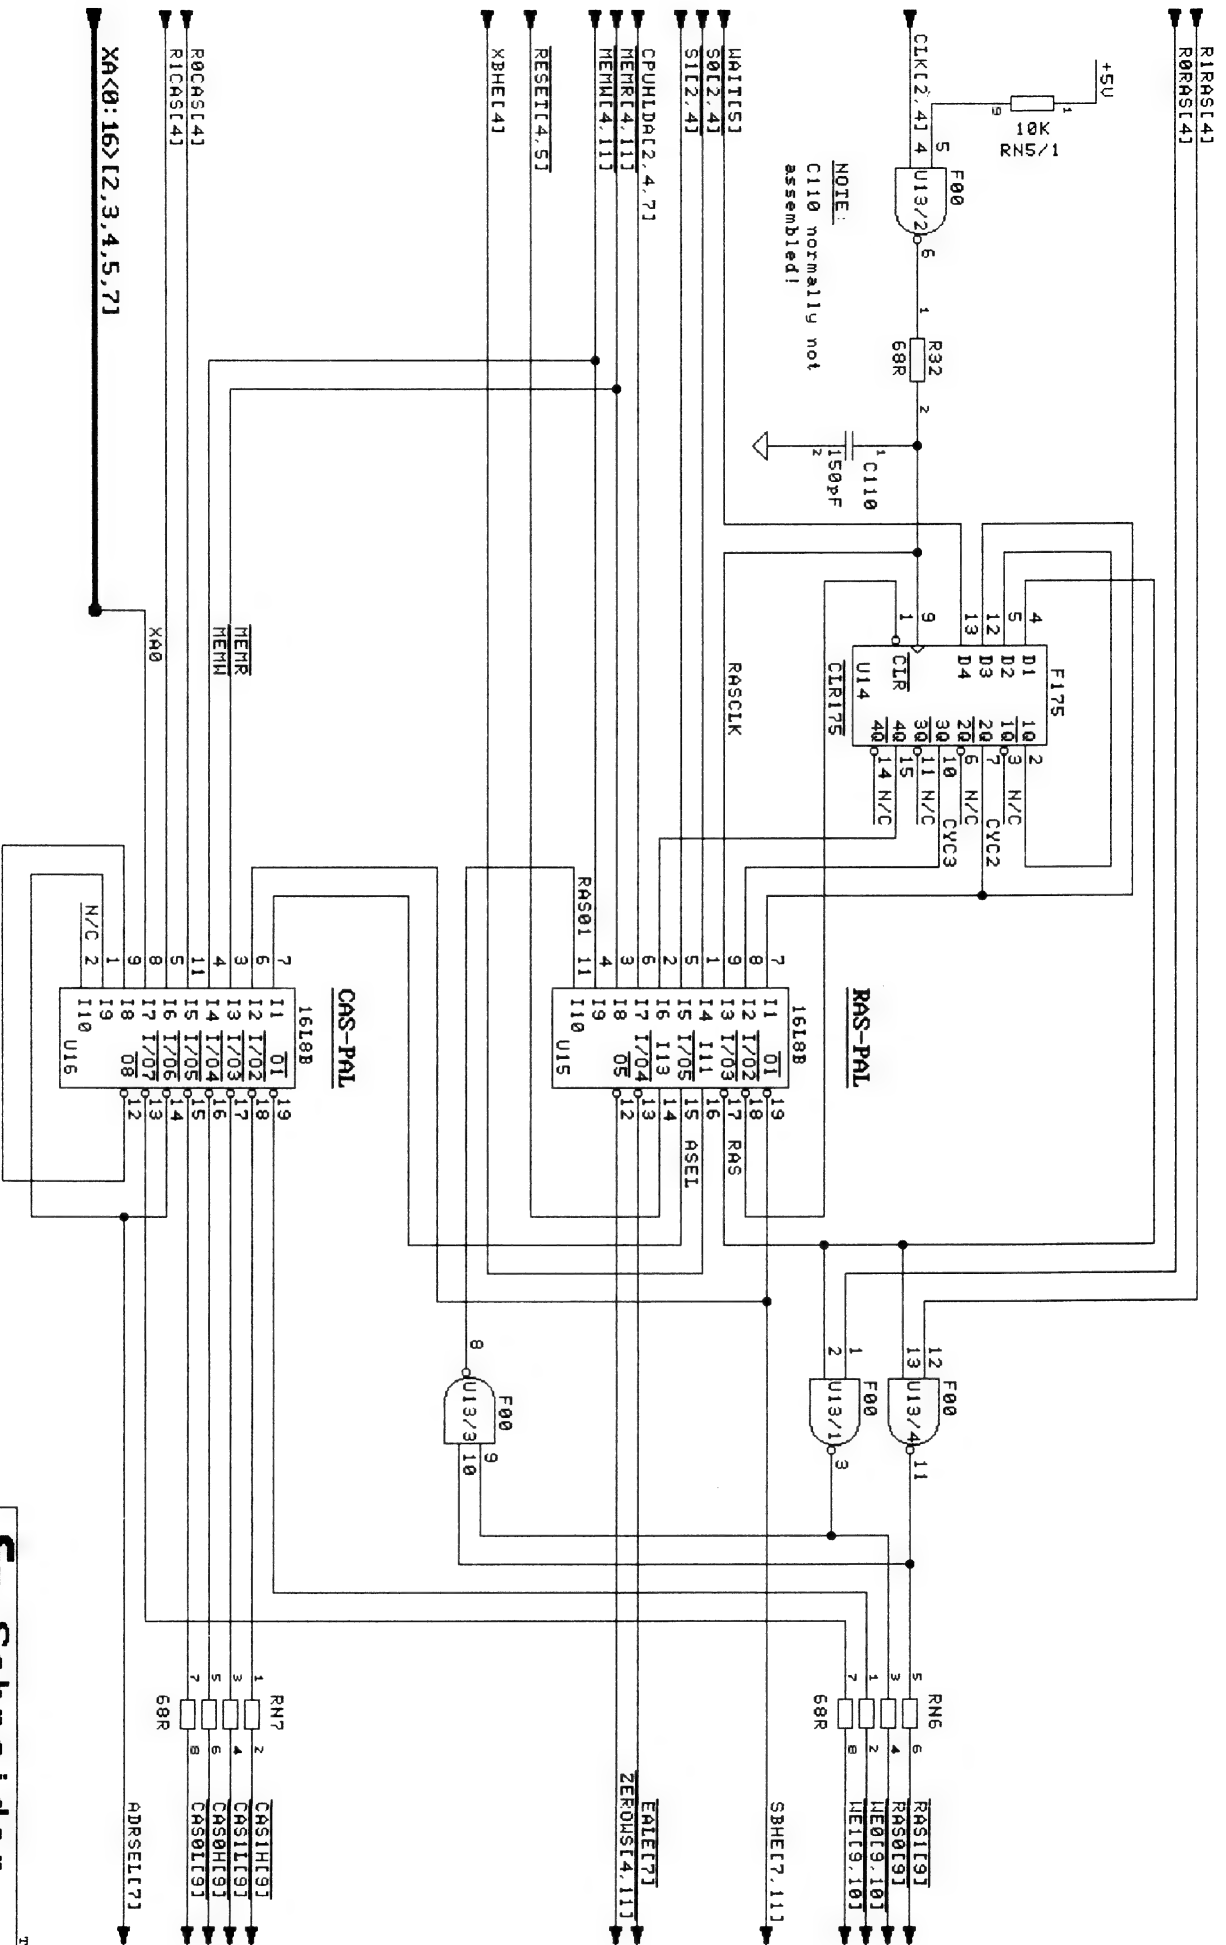


Schneider

DRAWN BY: **B. ASSMANN**
 TITLE: **SCHEMATIC**
 APPROVED: **TOWER CPU 80286**


USED ON: **TOWER-AT**
 SIZE: **A3**
 REV: **8**

DATE: **11-02-88**
 SHEET: **8 of 12**


AT - Bus, 104 Pin Card Edge Connector

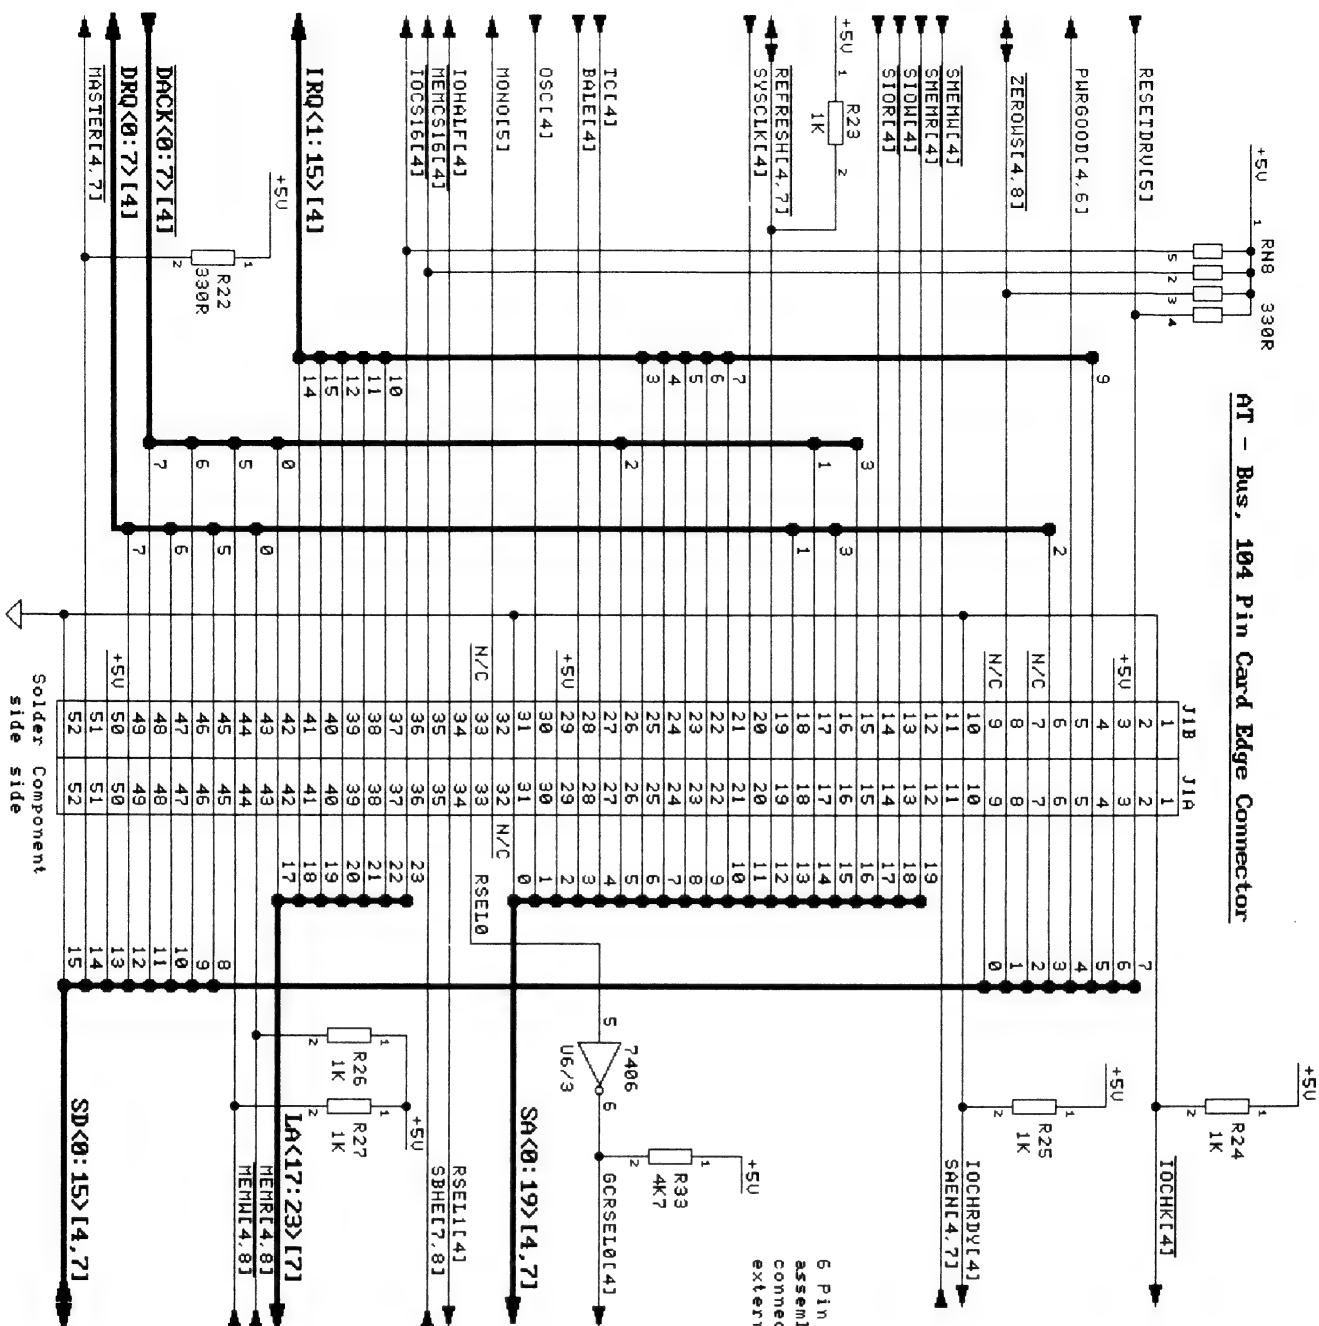

Battery- Connector +6V

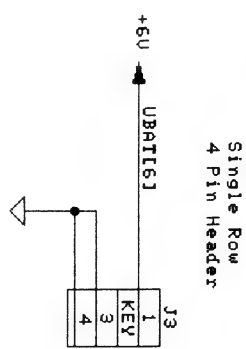


Keyboard- Connector

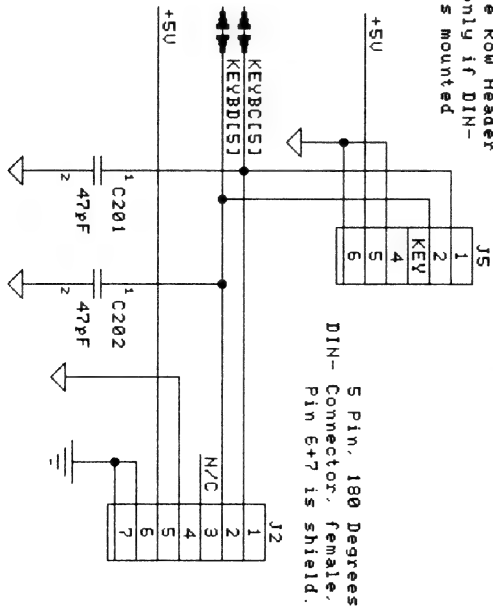

Schneider

DRAWN BY: H. ULRICH
 APPROVED: SCHEMATIC
 Tower-AT
 Tower- CPU286

USED ON:	SIZE	REV
Tower-AT	A3	50 229
DATE: 11-02-88		8

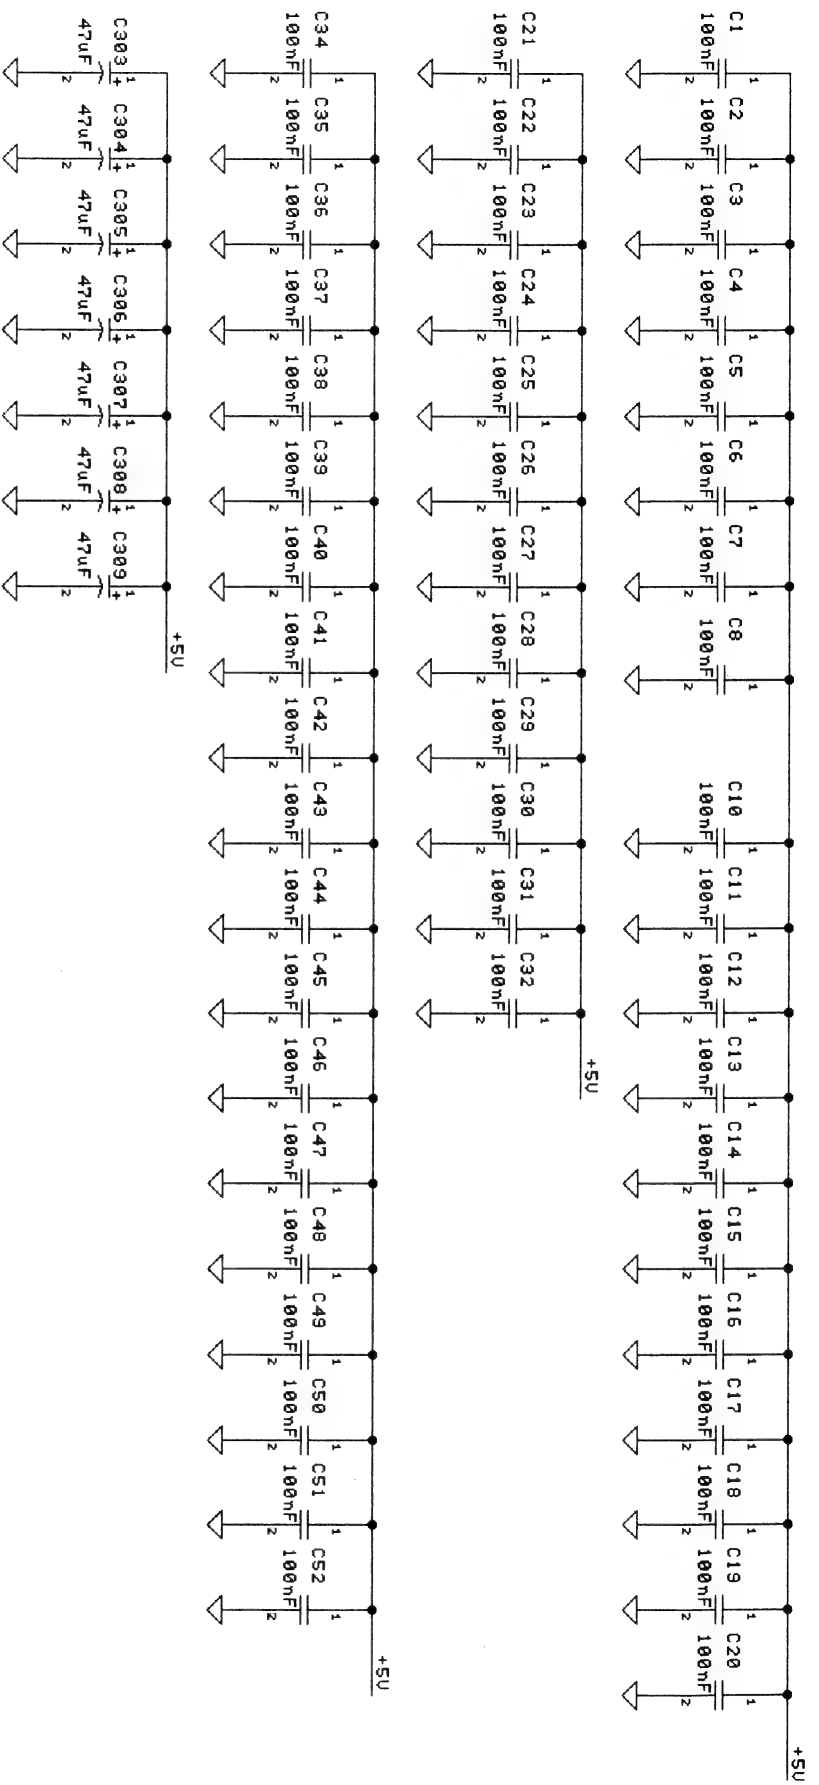

Schneider

DRAWN BY:
B. ASSMANN

APPROVED:

TITLE:
**SCHEMATIC
Tower- CPU286**

USED ON:

Tower-AT

SIZE

A3

50 229

REV

8

1


DATE: 11-02-88

SHEET: 12 of 12

Ersatzteilliste für Platine Best. (D) Tower AT CPU
Parts List PCB (D) Tower AT CPU


Bestell-Nr. Part.-No.	Bezeichnung	Description	Zeich.-Pos. Ref.-No.	Preisgruppe
50 115 00	IC 80286	IC 80286	U 1	F 4
50 444 00	IC EPROM 256K prog.	IC EPROM 256K prog.	U 3	C 9
50 445 00	IC EPROM 256K prog.	IC EPROM 256K prog.	U 4	C 9
50 047 00	IC GC 101C CPU Contr. (Rev. 4)	IC GC 101C CPU Contr. (Rev. 4)	U 5	F 5
50 776 00	IC GC 101D CPU Contr. (Rev. 5)	IC GC 101D CPU Contr. (Rev. 5)	U 5	F 5
50 122 00	IC 7406	IC 7406	U 6	A 7
50 243 00	IC 8042 prog.	IC 8042 prog.	U 7	C 3
50 177 00	IC DS 1287	IC DS 1287	U 8	D 4
50 323 00	IC MC 14069	IC MC 14069	U 9	A 3
50 045 00	IC GC 102 Data	IC GC 102 Data	U 10	D 7
50 046 00	IC GC 102A Address	IC GC 102A Address	U 11	D 7
50 249 00	IC 74 ALS 245	IC 74 ALS 245	U 12	B 1
50 123 00	IC 74 F 00	IC 74 F 00	U 13	A 3
50 242 00	IC 74 F 175	IC 74 F 175	U 14	A 8
50 334 00	IC PAL 16L8BCN RAS-PAL	IC PAL 16L8BCN RAS-PAL	U 15	B 8
50 333 00	IC PAL 16L8BCN CAS-PAL	IC PAL 16L8BCN CAS-PAL	U 16	B 8
50 160 00	IC DRAM 256x4	IC DRAM 256x4	U 25-28	F 4
50 379 00	IC 74 HC 132	IC 74 HC 132	U 33	A 5
50 338 00	Diode 1 N 4148	Diode 1 N 4148	D 1,5	A 0
50 325 00	Quarz 14,31818 MHz	Quarz 14.31818 MHz	Q 1	B 3
50 326 00	Quarz 8,0 MHz	Quarz 8.0 MHz	Q 2	B 0
50 327 00	Osz. 20,0 MHz	Osc. 20.0 MHz	OSC 1	C 0
50 345 00	Elko rad. 47µF/16V	CE 47µF/16V	C 303-309	A 2
50 344 00	Tantal 10µF/16V	CE 10µF/16V	C 301	A 4
50 381 00	Tantal 1µF/16V	CE 1µF/16V	C 310	A 3
50 316 00	R-Netzwerk 8x10K	Network 8x10K	RN 1,5	A 3
50 319 00	R-Netzwerk 8x4K7	Network 8x4K7	RN 2	A 3
50 382 00	R-Netzwerk 4x68R	Network 4x68R	RN 3, 4, 6, 7	A 2
50 331 00	R-Netzwerk 4x330R	Network 4x330R	RN 8	A 2
50 332 00	Summer	Buzzer	LS 1	A 8
50 181 00	Buchse Dioden 5 Pin	Socket Diode 5 Pin	J 2	A 5

Soldering side

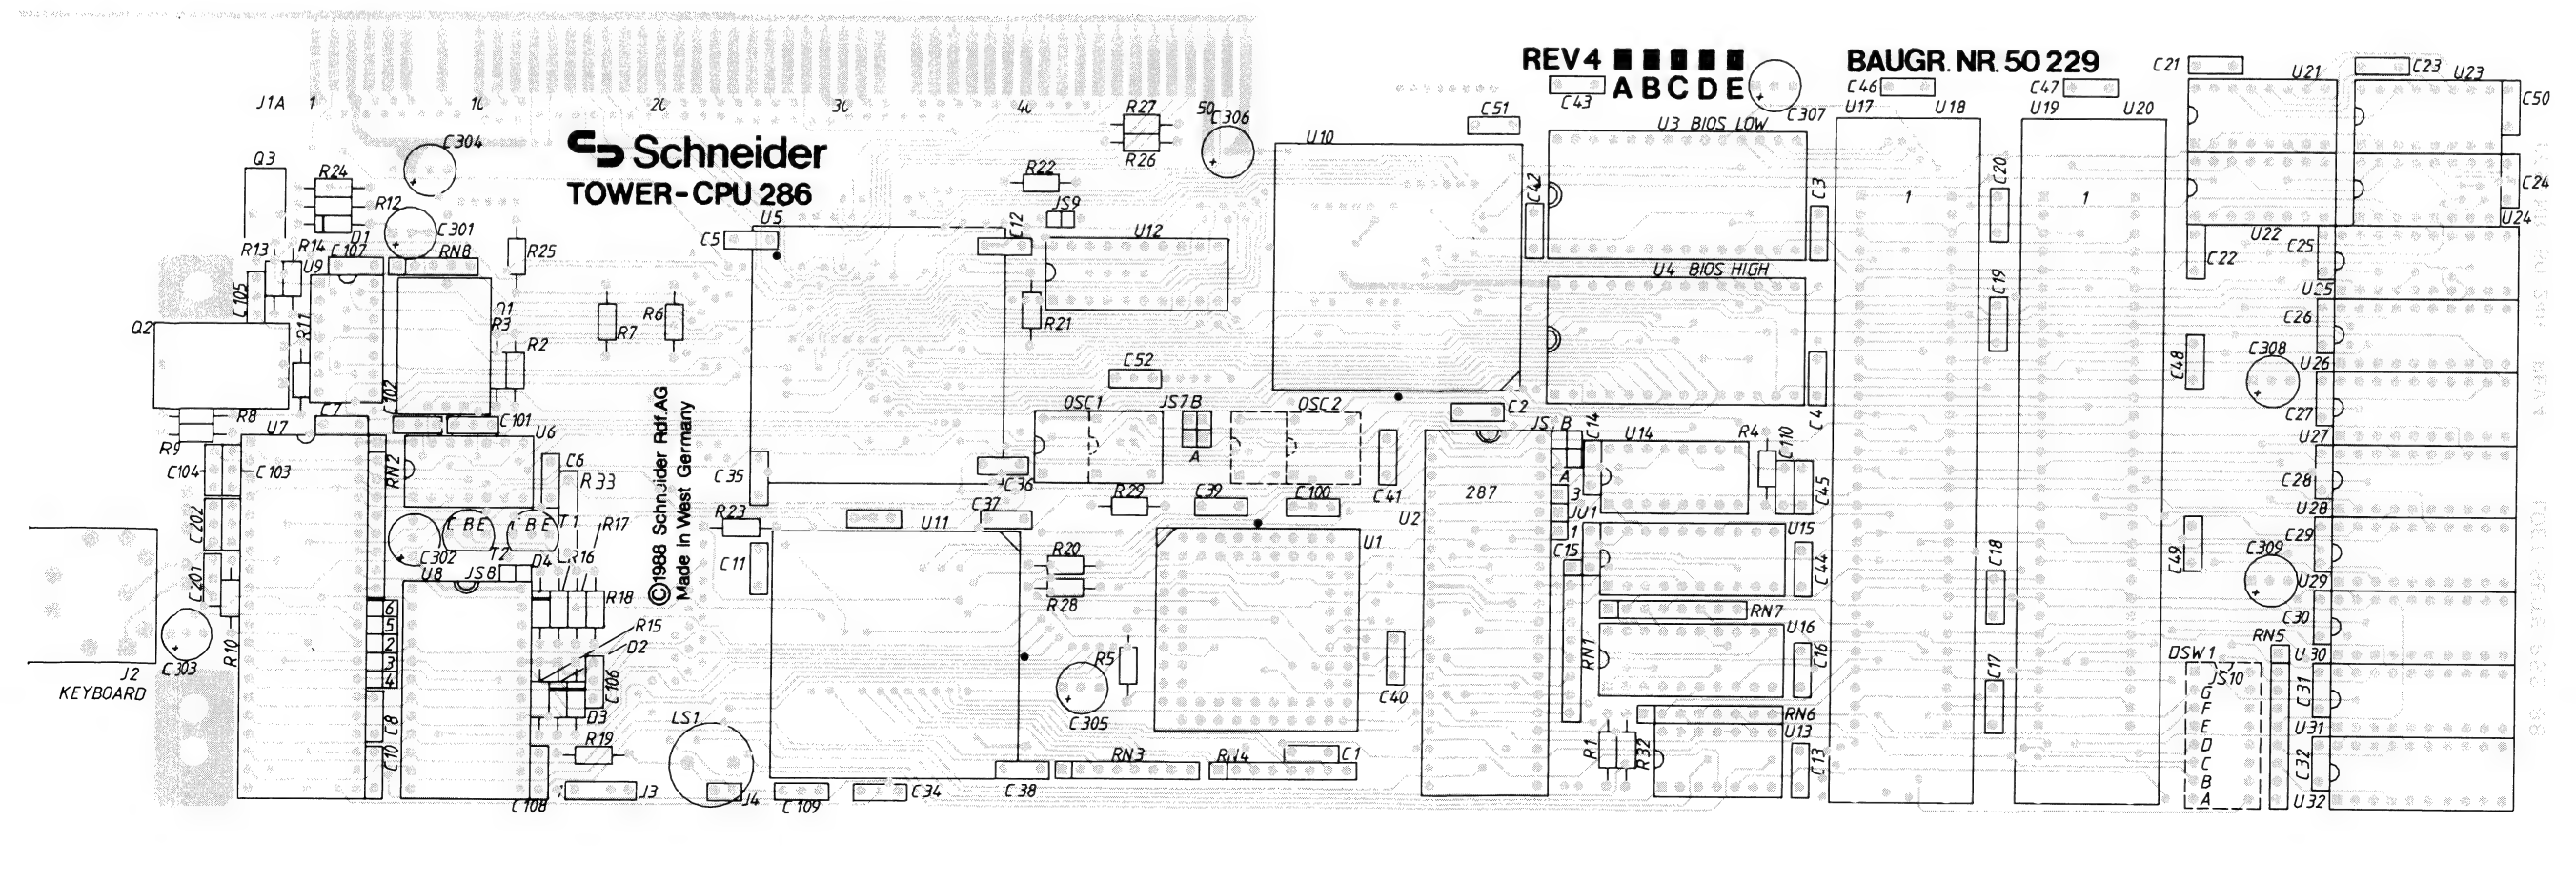


The diagram is a top-down view of a Schneider Tower-CPU 286. Key components and their locations include:

- Central Processor:** U5 (Intel 286) is located in the upper right quadrant.
- Memory:** U12 (RAM) is to the right of the CPU. U14 (RAM) is below the CPU. U7 (RAM) is at the bottom left.
- Input/Output:** J2 (Keyboard) is at the bottom left. J4 (Mouse) is at the bottom center.
- Power and Timing:** OSC1 (Oscillator) is on the right side. Various capacitors (C1-C109) and resistors (R1-R29) are distributed throughout the board.
- Connectors:** J1A (Power) is at the top left. J5 (Floppy) is on the left side.
- Branding:** The Schneider logo and 'TOWER-CPU 286' are in the center. Below it, it says '© 1988 SCHNEIDER R&D', 'MADE IN WEST GERMANY', and 'RDF'.









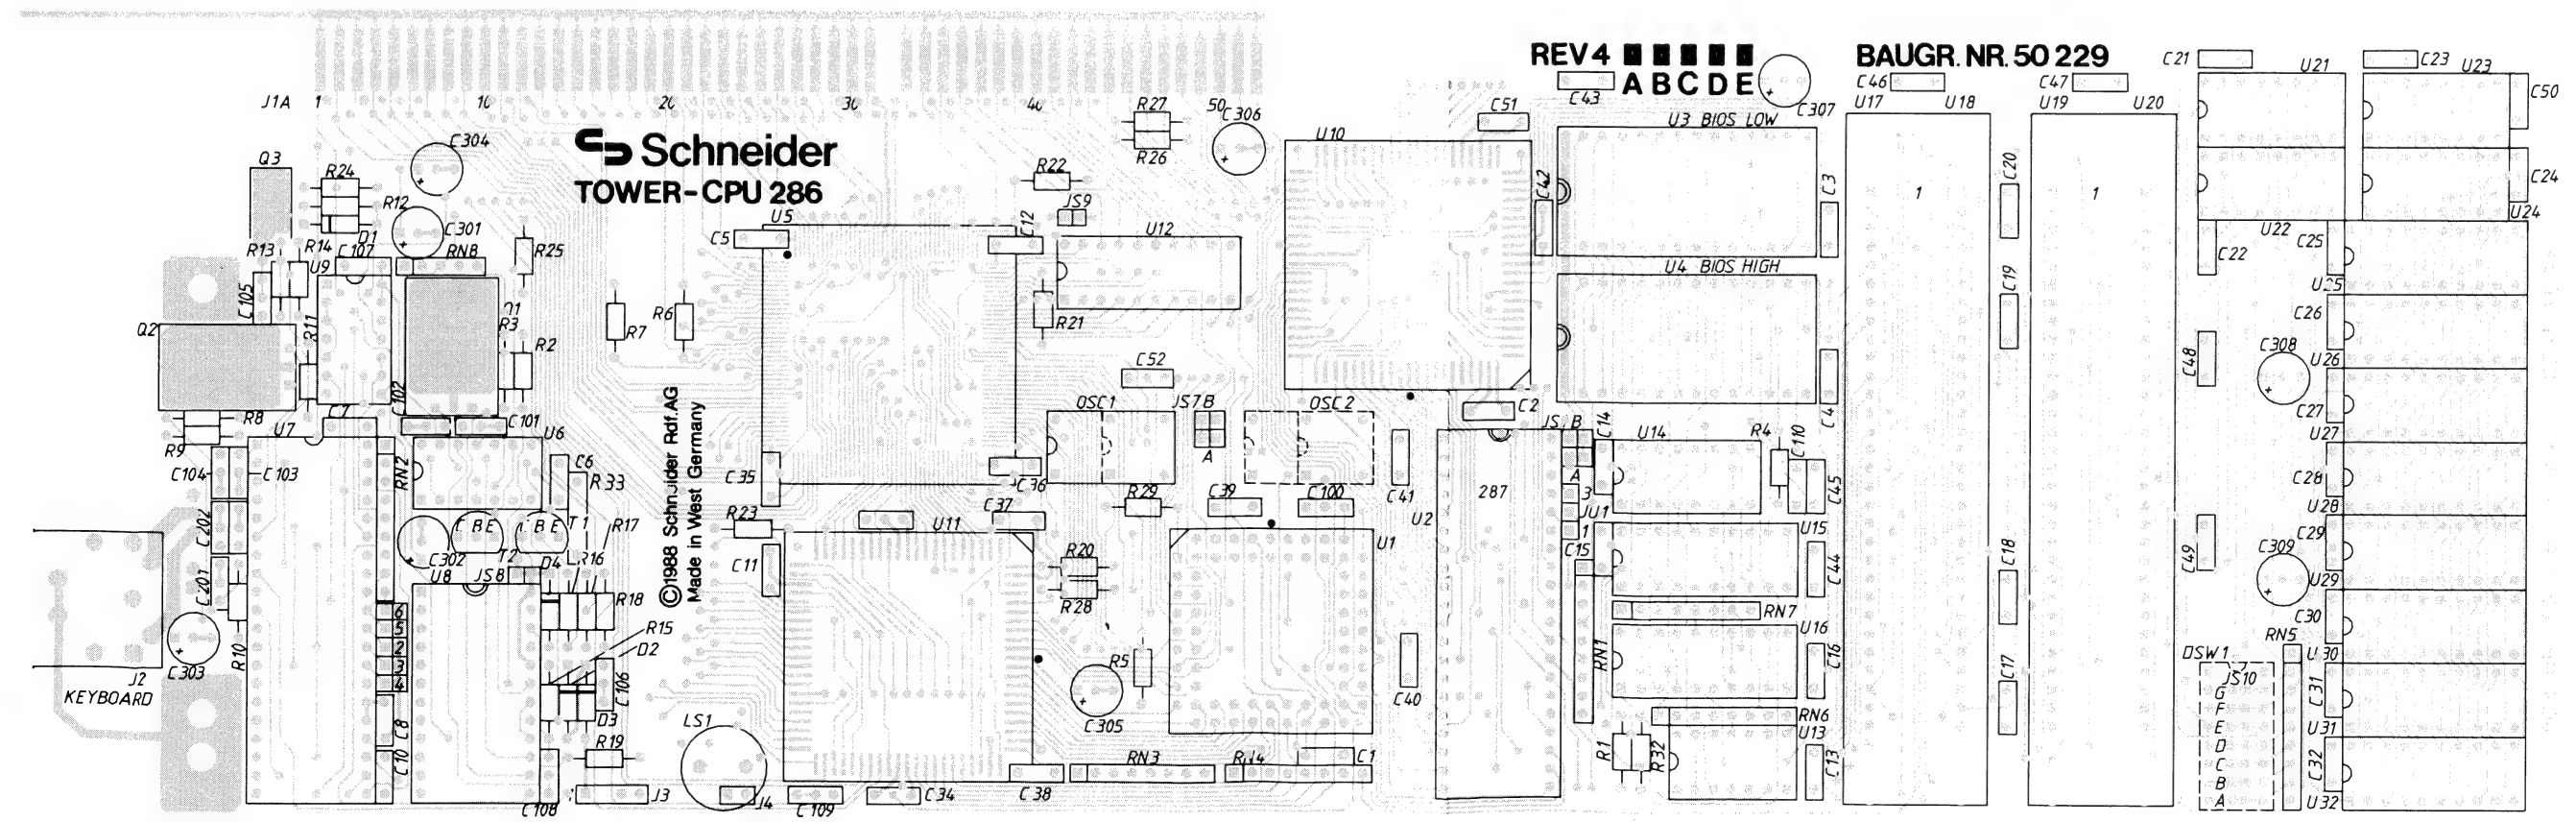


Soldering side

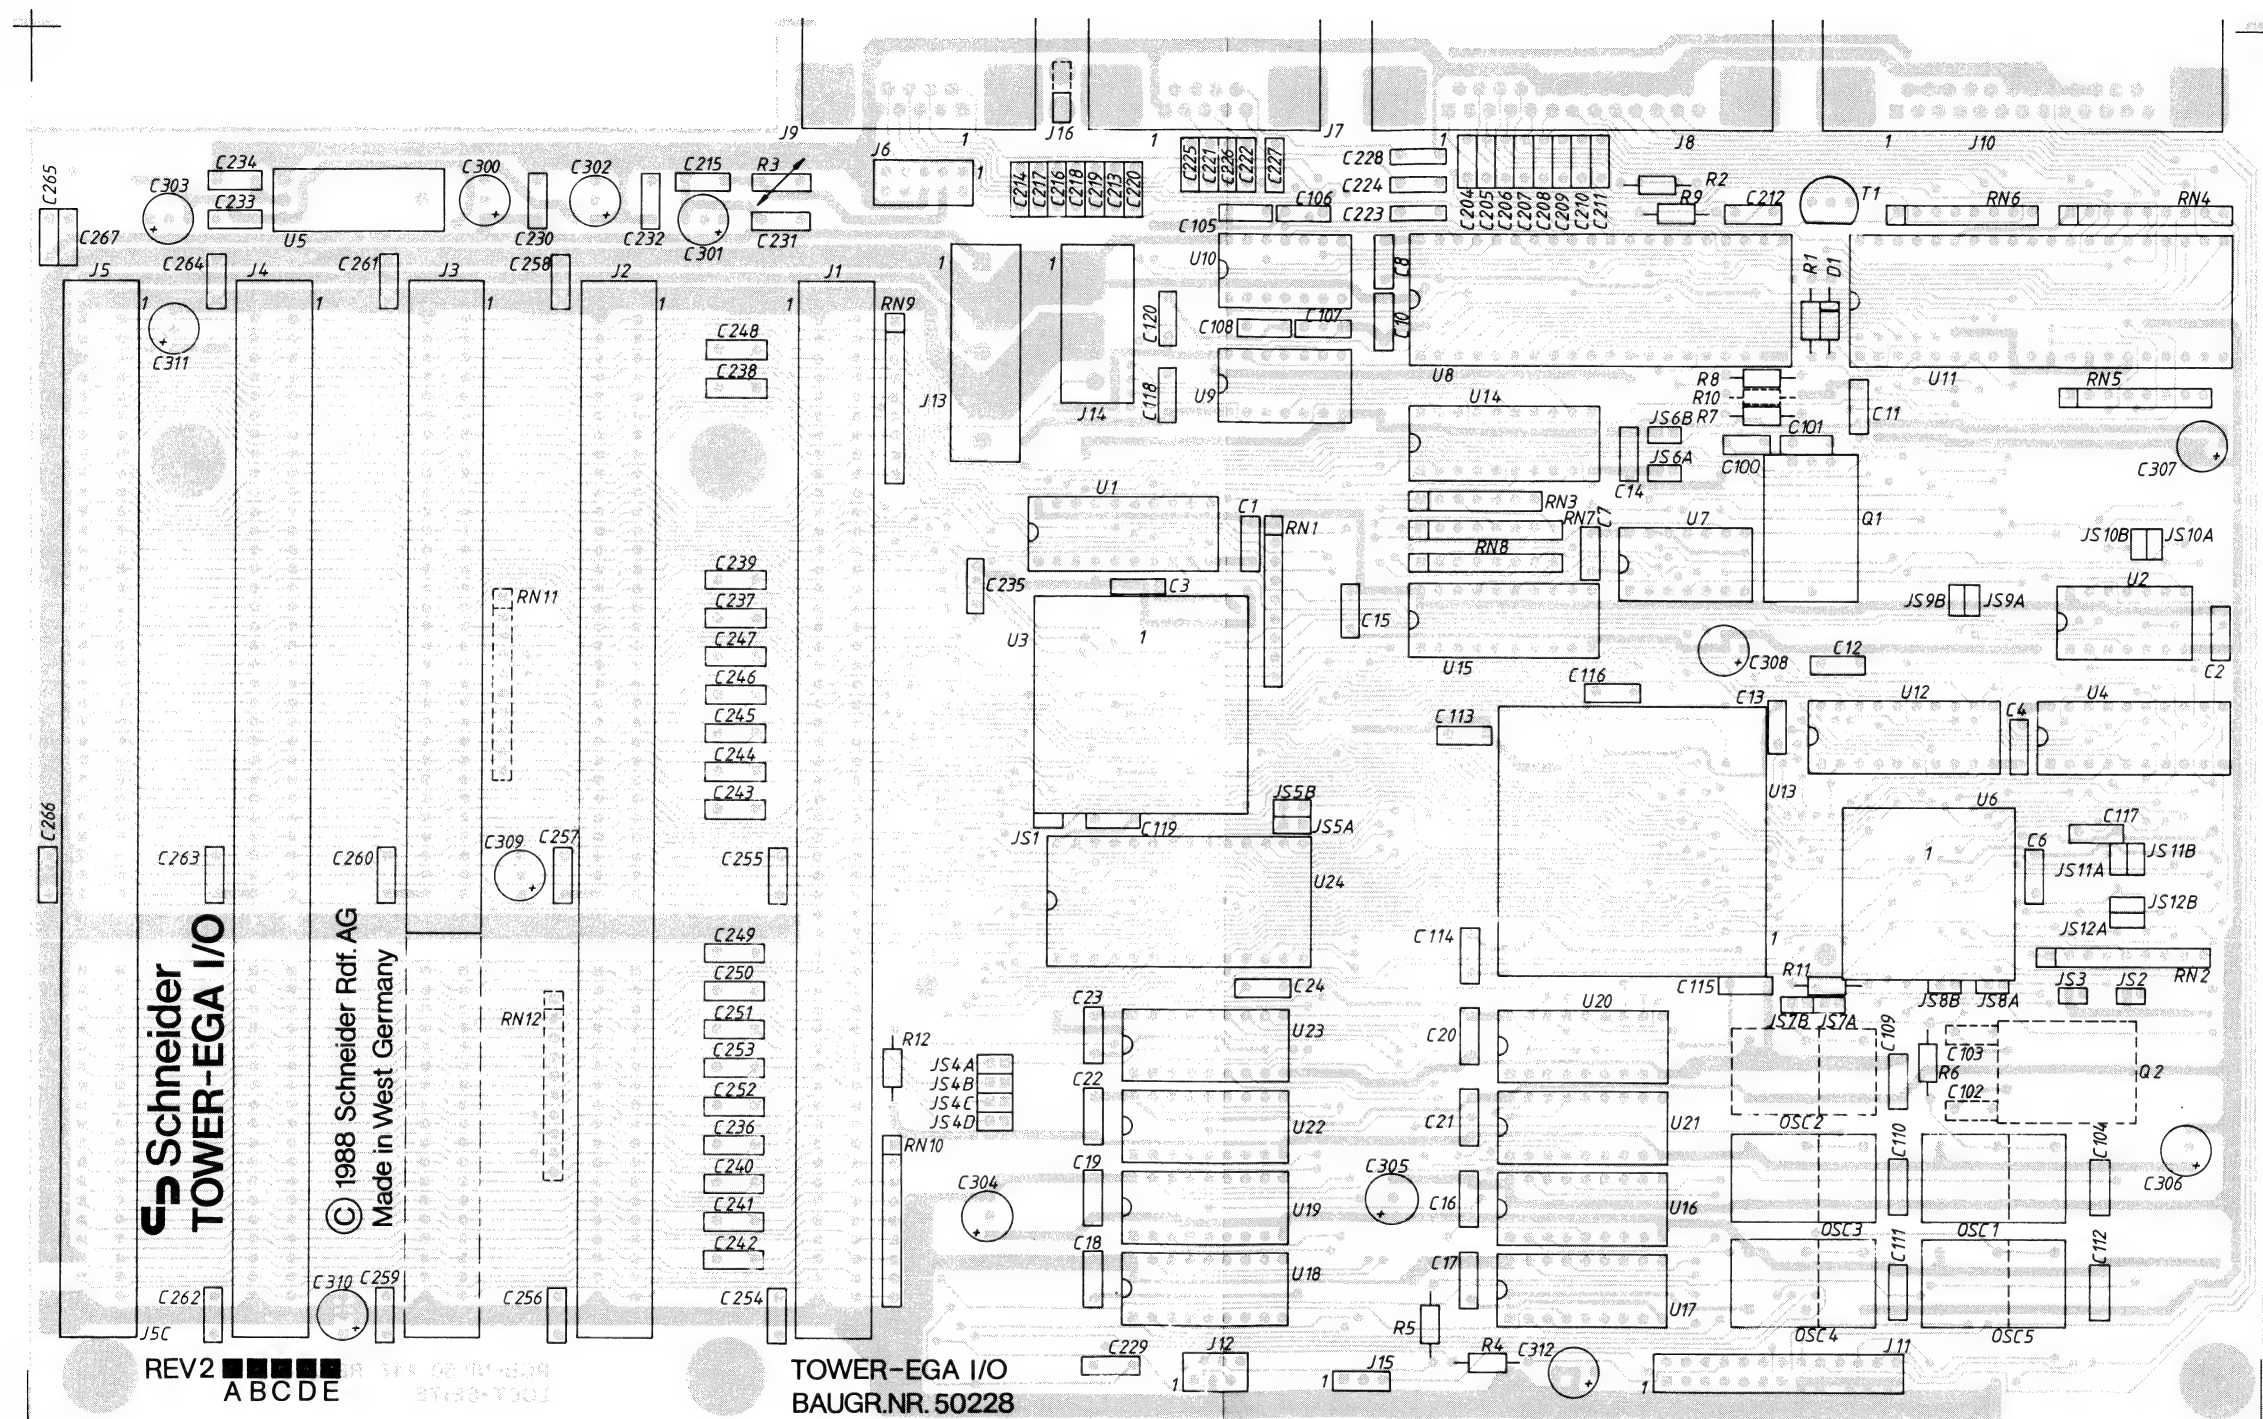

Ersatzteilliste für Platine Best. (D) Tower EGA I/O
Parts List P.C.B (D) Tower EGA I/O


Bestell-Nr. Part.-No.	Bezeichnung	Description	Zeich.-Pos. Ref.-No.	Preisgruppe
50 129 00	IC 74LS245	IC 74LS245	U 1	A 7
50 237 00	IC 7407	IC 7407	U 2	A 8
50 101 00	IC JIM TC17 GO 22AT	IC JIM TC17 GO 22AT	U 3	C 7
50 311 00	IC PAL 16 L8A Peog.	IC PAL 16 L8A Prog.	U 4	B 4
50 238 00	IC 7905 (TO220)	IC 7905 (TO220)	U 5	A 6
50 105 00	IC WD 37 C65A-JM00	IC WD 37 C65A-JM00	U 6	D 5
50 240 00	IC 74 F 126	IC 74 F 126	U 7	A 9
50 169 00	IC 16 C 450 PC	IC 16 C 450 PC	U 8	C 9
50 120 00	IC MC 1488	IC MC 1488	U 9	A 4
50 121 00	IC MC 1489	IC MC 1489	U 10	A 4
50 106 00	IC PPC 1	IC PPC 1	U 11	C 2
50 239 00	IC 74 LS 237	IC 74 LS 237	U 12	A 6
50 147 00	IC GC-201	IC GC-201	U 13	F 2
50 125 00	IC 74 HC 373	IC 74 HC 373	U 14	A 8
50 241 00	IC 74 F 244	IC 74 F 244	U 15	B 0
50 110 00	IC DRAM 64Kx4 120ns	IC DRAM 64Kx4 120ns	U 16-23	D 4
50 447 00	IC EPROM 256K prog.	IC EPROM 256K prog.	U 24	C 9
50 338 00	Diode 1 N 4148	Diode 1 N 4148	D 1	A 0
50 358 00	Trans BC 337 B	Trans BC 337 B	T 1	A 2
50 312 00	Quarz 1,8432 MHz	Quarz 1.8432 MHz	Q 1	B 6
50 313 00	Osz. 16,0 MHz	Osc. 16.0 MHz	OSC 1	C 0
50 337 00	Osz. 34,0 MHz	Osc. 34.0 MHz	OSC 3	C 0
50 315 00	Osz. 24,0 MHz	Osc. 24.0 MHz	OSC 4	C 0
50 314 00	Osz. 19,2 MHz	Osc. 19.2MHz	OSC 5	C 0
50 365 00	Elko rad. 10µF/25V	CE 10µF/25V	C 300-303	A 2
50 345 00	Elko rad. 47µF/16V	CE 47µF/16V	C 304-312	A 2
50 316 00	R-Netzwerk 8x10K	R-Network 8x10K	RN 1	A 3
50 317 00	R-Netzwerk 8x1K	R-Network 8x1K	RN 2	A 3
50 320 00	R-Netzwerk 6x680K	R-Network 6x680K	RN 3	A 2
50 319 00	R-Netzwerk 8x4K7	R-Network 8x4K7	RN 4, 9, 10	A 3
50 318 00	R-Netzwerk 4x33R	R-Network 4x33R	RN 5-8	A 2
50 372 00	R-Netzwerk 9x10K	R-Network 9x10K	RN 11, 12	A 2
50 321 00	Widerstand PTC 0R75	Resistor PTC 0R75	R 3	B 0
50 178 00	Buchse Cardedge 104 Pin	Socket Cardedge 104 Pin	J 1	B 5
50 179 00	Buchse Cardedge 98 Pin	Socket Cardedge 98 Pin	J 2, 4, 5	B 3
50 180 00	Buchse Cardedge 62 Pin	Socket Cardedge 62 Pin	J 3	B 1
50 252 00	Stiftleiste RM 2,54 10pol.	Connector RM 2.54 10-pol.	J 6	A 2
50 132 00	Buchse SUB D 9 Pin	Socket SUB D 9 Pin	J 7	A 9
50 133 00	Buchse SUB D 25 Pin	Socket SUB D 25 Pin	J 8, 10	B 2
50 131 00	Buchse SUB D 9 Pin	Socket SUB D 9 Pin	J 9	A 9
50 139 00	Stiftleiste RM 2,54 26pol.	Connector RM 2.54 26-pol.	J 11	A 4

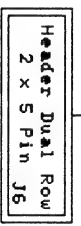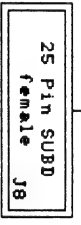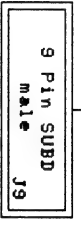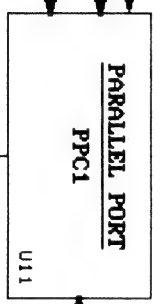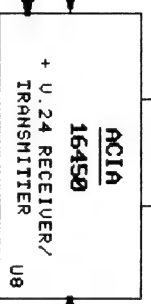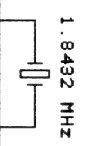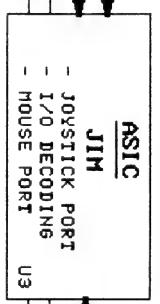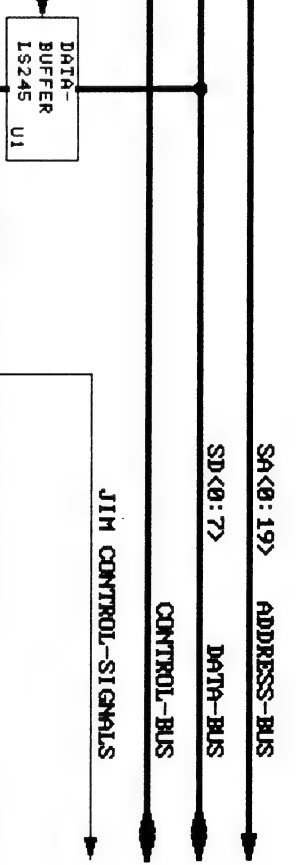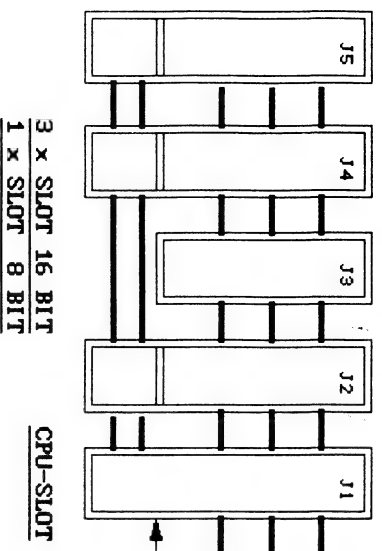

SERIAL PORT
CONNECTOR

PARALLEL PORT
CONNECTOR

INTERNAL MOUSE
CONNECTOR

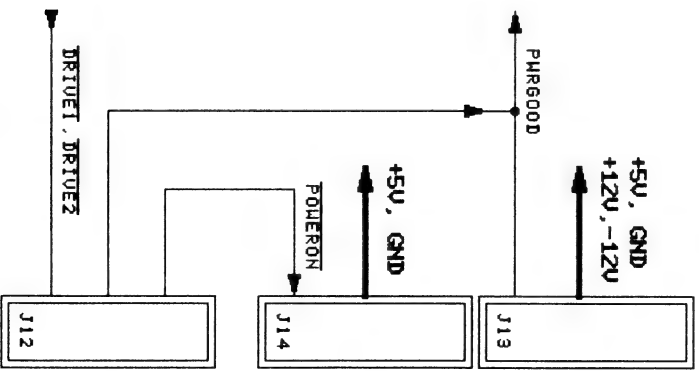


Schneider

DRAWN BY: H. ULLRICH
APPROVED: [Signature]
TITLE: BLOCK DIAGRAM
TOWER EGA-I/O PCB

USED ON: TOWER AT
SIZE: A3
SHEET: 50 228
REV: 2

DATE: 09-29-88
SHEET: 1 of 2

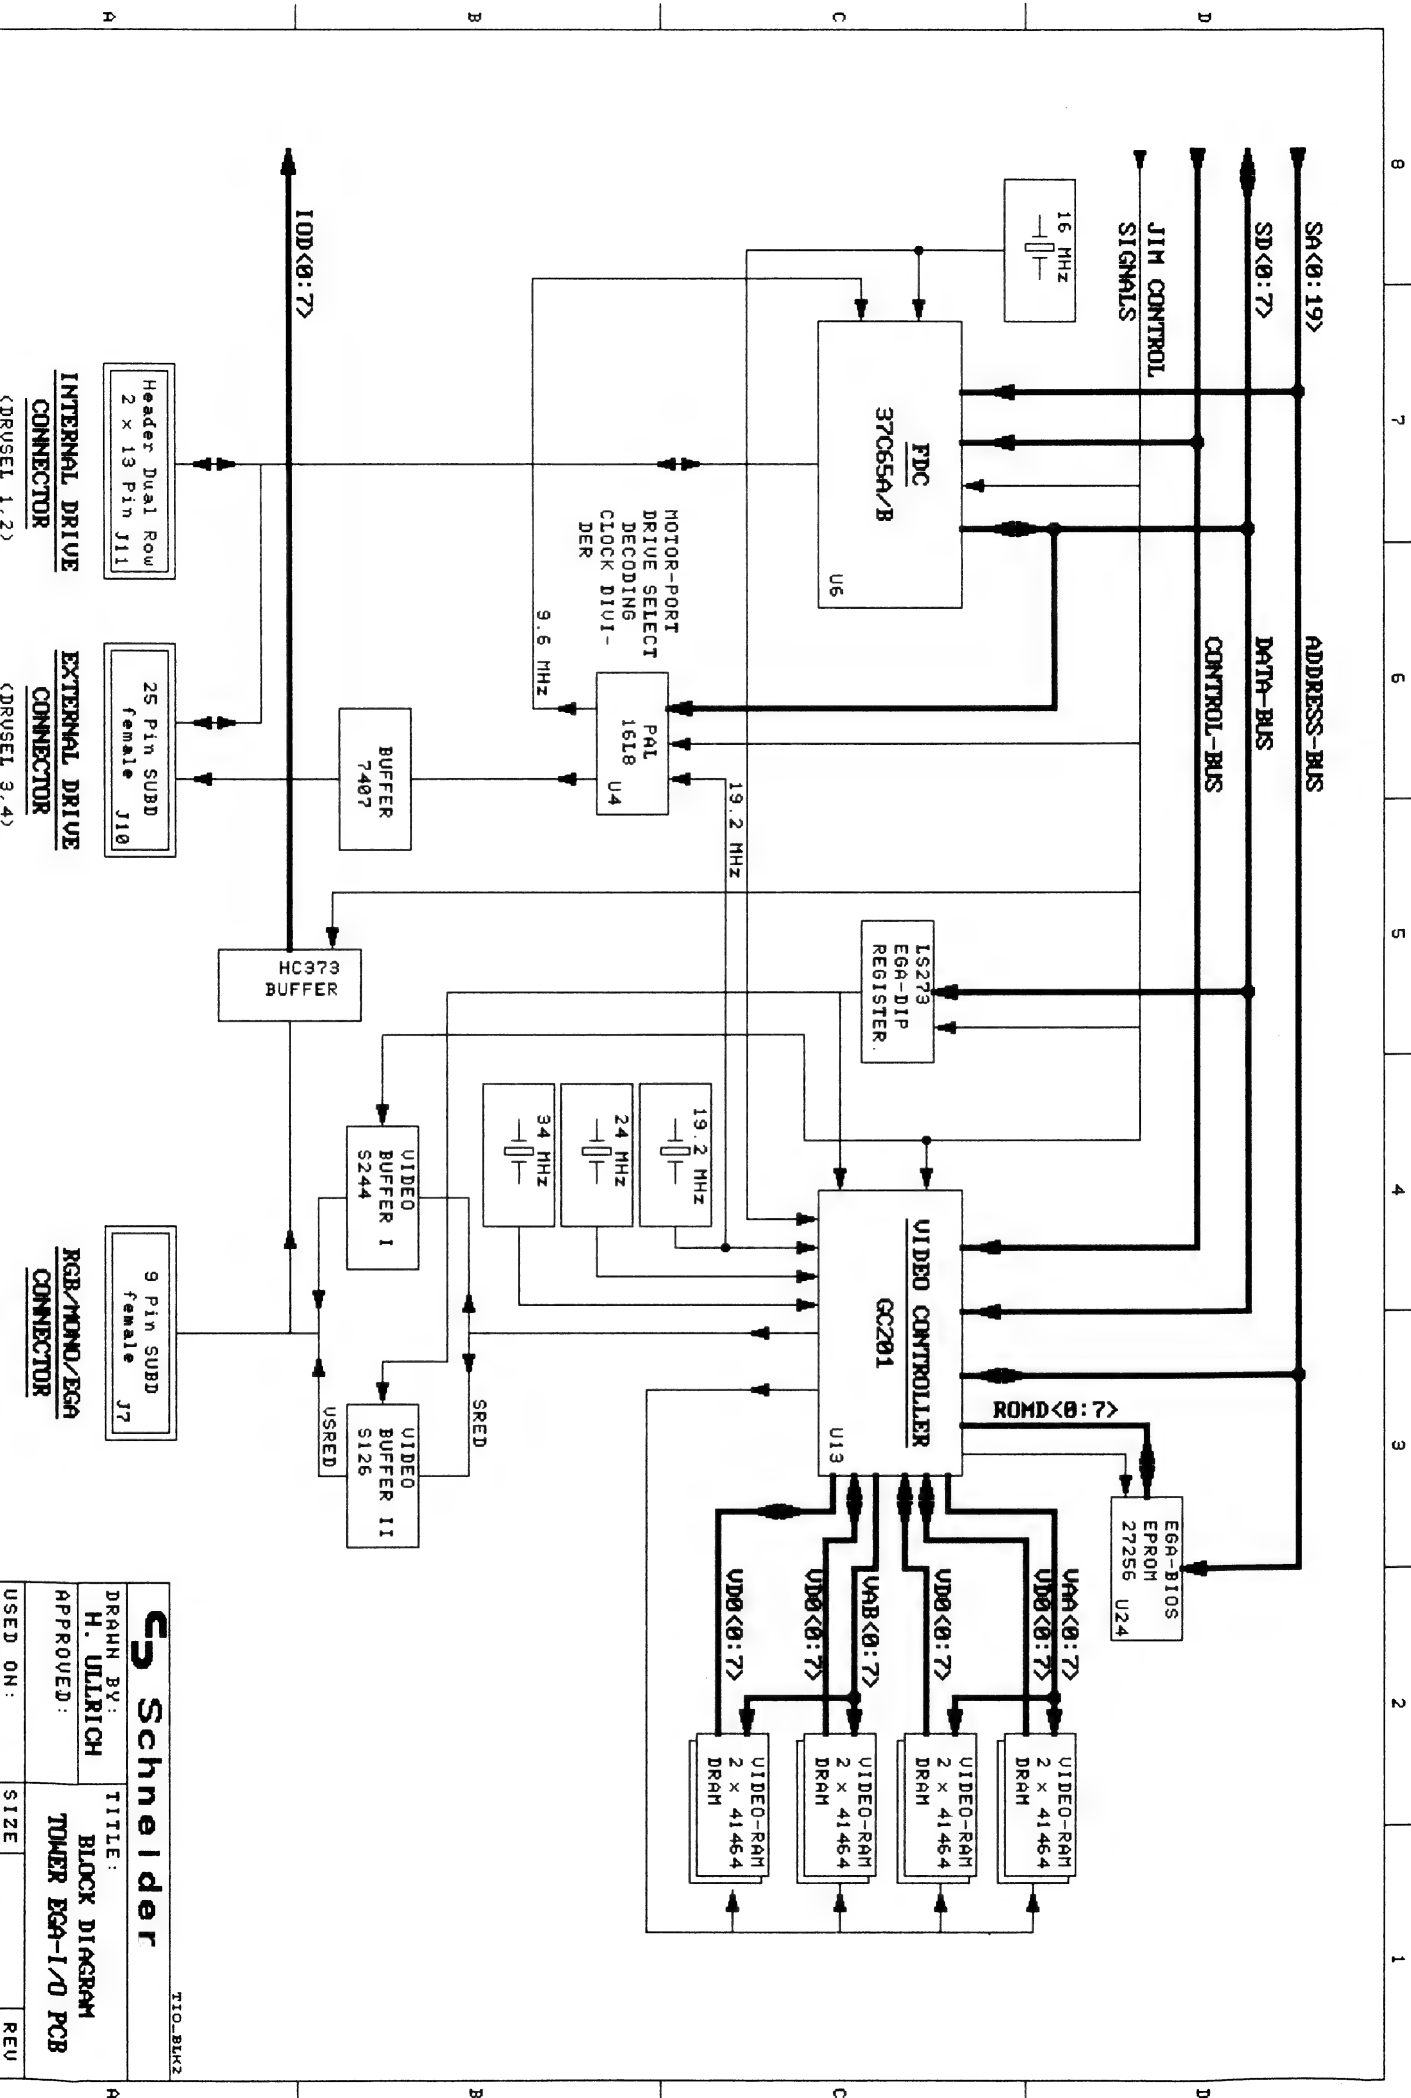

Schneider

DRAWN BY: H. ULLRICH

APPROVED: TUMER AT

TITLE: BLOCK DIAGRAM
TUMER EGA-1/0 PCB

USED ON: TUMER AT

SIZE: A3
SHEET: 50 228
REV: 2

DATE: 09-29-88

SHEET: 2 of 2

REVISIONS			
LTR	DESCRIPTION	DATE	APPROVED
1	ADVANCED ENGINEERING RELEASE	04-27-88	RME
2	UPDATE	05-04-88	RME
3	UPDATE	05-24-88	RME
4	UPDATE, CORRECTIONS, ADDED BLOCK CAPS	06-22-88	H. ULLRICH
5	NEW LAYOUT (PCB REV.2)	07-11-88	RME
6	CHANGED 2 SIGNAL NAMES, ADDED PAGE REFERENCES	08-10-88	H. ULLRICH
7	CHANGED R8 VALUE TO 1K, ADDED C268 (C268 IS NOT INCLUDED IN THE LAYOUT OR SILSCREEN BUT AN ADDON REMARK!)	09-15-88	H. ULLRICH
8	ADDED C121 (NOT INCLUDED IN LAYOUT OR SILSCREEN - ADD-ON REMARK!) BUG FIX FOR VC-001 VIDEO CHIP	11-18-88	B. ASSMANN

DRAWING FILES: CONTENTS:

TI0_81.DWG	THIS SHEET
TI0_82.DWG	ASIC JIM
TI0_83.DWG	FLOPPY INTERFACE
TI0_84.DWG	SERIAL INTERFACE
TI0_85.DWG	PARALLEL INTERFACE
TI0_86.DWG	VIDEO CONTROLLER
TI0_87.DWG	VIDEO RAM, CHAR. ROM
TI0_88.DWG	VIDEO INTERFACE
TI0_89.DWG	CONNECTORS I
TI0_810.DWG	CONNECTORS II
TI0_811.DWG	CPU SLOT
TI0_812.DWG	NORMAL SLOT
TI0_813.DWG	NORMAL SLOT
TI0_814.DWG	NORMAL SLOT
TI0_815.DWG	NORMAL SLOT
TI0_816.DWG	BLOCK CAPS, SPARE GATES

Schneider

TI0-81

DRAWN BY:
B. ASSMANN

APPROVED:

TITLE:

SCHEMATIC
TOWER-BGA/10

USED ON:

TOWER-AT

SIZE

A3

REV

8

DATE: 11-18-88


SHEET: 1 of 16

I/O-CHIP SELECT GENERATION, JOYSTICK/MOUSE INTERFACE


SA<0:9>[3-7,11-15]

IOB<0:7>[4-6,8]

SD<0:7>[3,6,11-15]

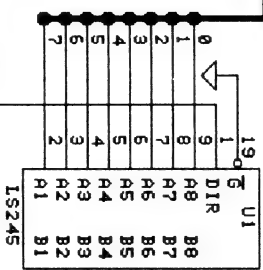

STOR3,11-15]
STOR3,11-15]
SAEN16,11-15]
RESETDRU
[3,4,11-15]
SYSCLK11-15]

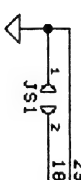

TODIR

BACK<2>[11-15]

REFRESH16,11-15]


IRQ<3,4,9>[11-16]

COMINT14]

COMOUT14]

JIM

U3

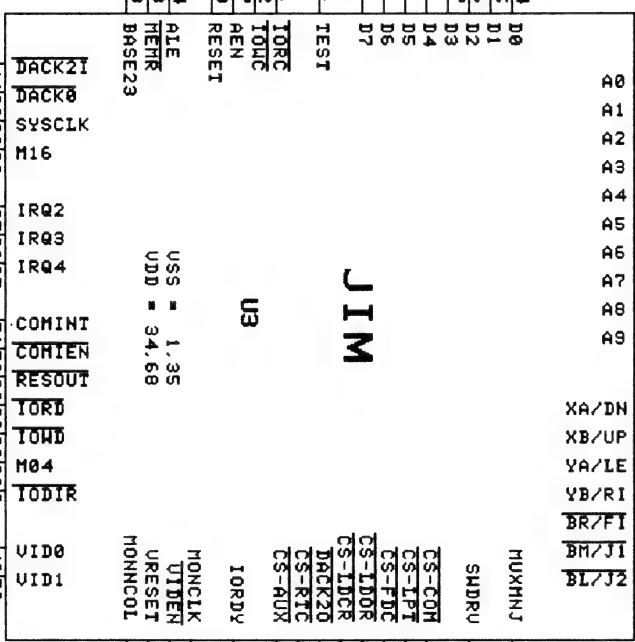

XA/DN
XB/UP
YA/LE
YB/RI
BR/FI
BR/JI
BR/LI

MUXHJ

SUDRU

CS-COM

CS-LPT

CS-FDC

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR

CS-LDOR



CS-LDOR

CS-LDOR

CS-LDOR



NOTE: C119 IS A BLOCK CAP FOR U3

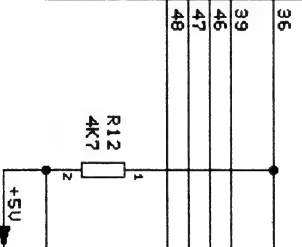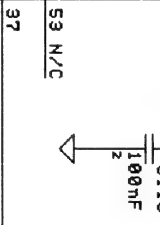

Schneider


DRAWN BY: B. ASSMANN

APPROVED: TOWER-EGA/10

USED ON: TOWER-AT

DATE: 11-10-88

SHEET: 2 of 16

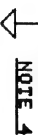


```
JS2 OPEN : 125 ns
JS2 CLOSED: 187 ns
```

- ## IED

11-18-88


SERIAL INTERFACE

COMOUT[2]
COMINT[2]

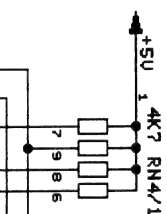


RESETDRU[2,3,11-15]
RESOUT[2,5,6]



10D<0:7>[2,5,6,8]

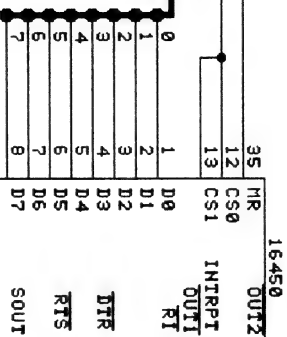

SA<0:2>[2,3,5-7,11-15]

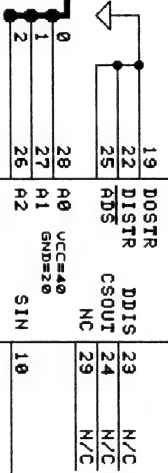


CS-COM[2]
10H-DIV[2]
10R-DIV[2]

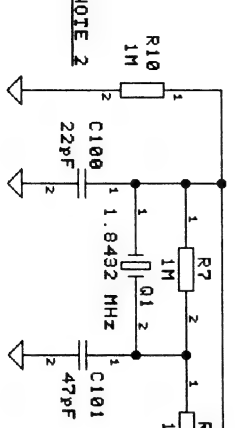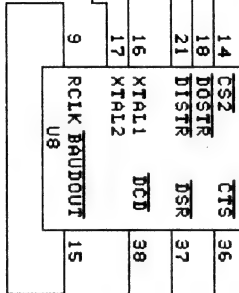

NOTE 2

NOTES: 1) C118 AND C120 ARE
BLOCK CAPS FOR U9

2) R10 ASSEMBLED ONLY IF
REQUIRED

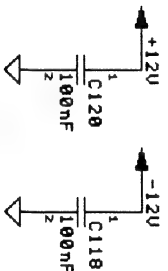

NOTE 1

Schneider

DRAWN BY:
H. ULLRICH

APPROVED:

TITLE:
SCHEMATIC
TOWER-BGA/10

USED ON:
TOWER-AT

SIZE
A3

NO
50 228


REV
8

DATE: 11-18-88

SHEET: 4 OF 16

TIO-84

PARALLEL INTERFACE

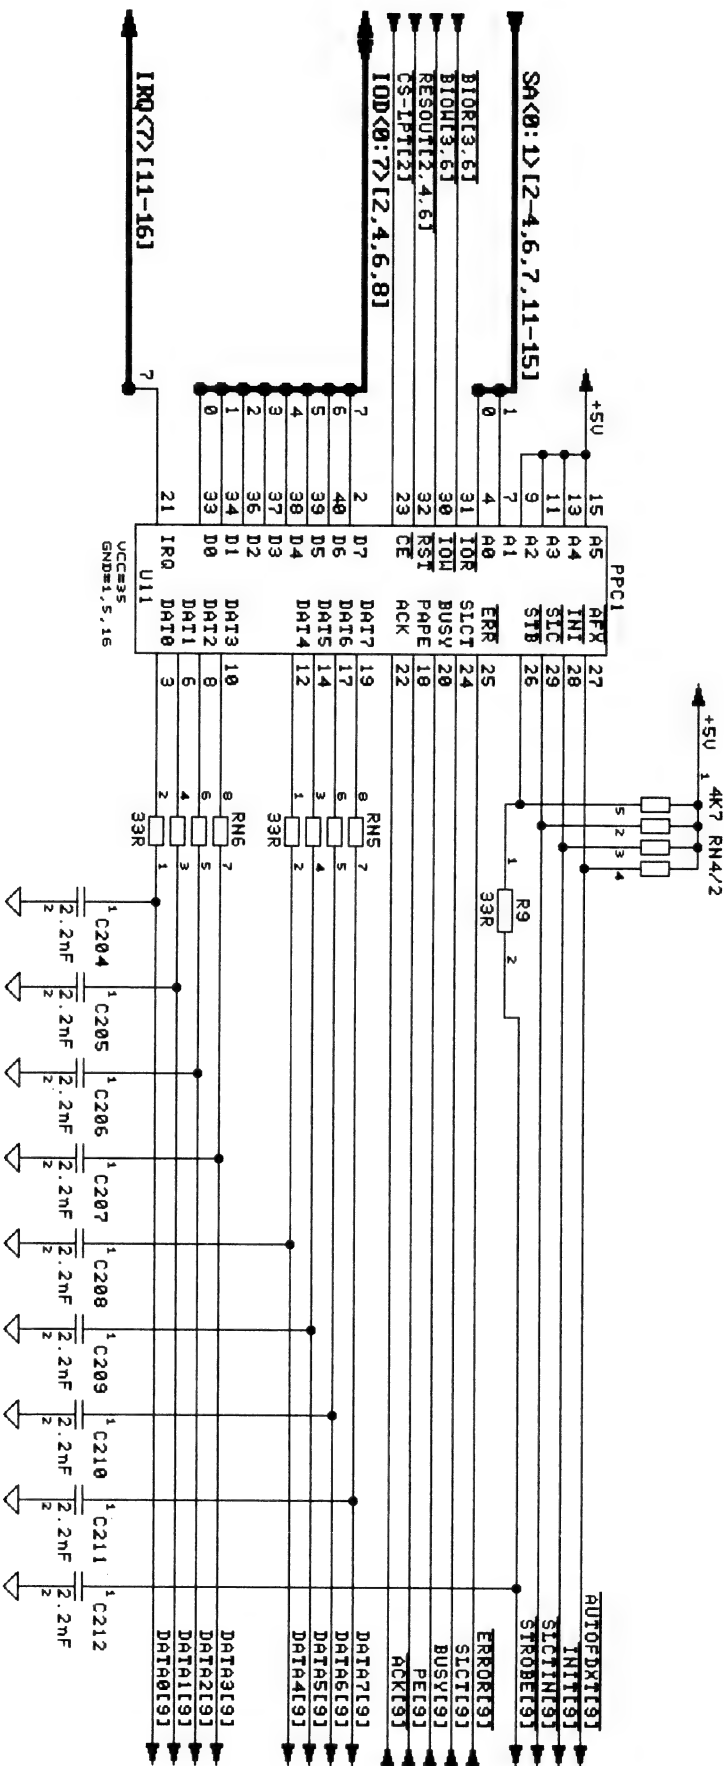

Schneider


**DRAHN BY:
H. ULLRICH**

APPROVED: _____
TOWER-EXA/10

USED ON:	SIZE	REV
TOWER-AT	A 3	50 228 8

DATE: 11-18-88

SHEET: 5 of 16

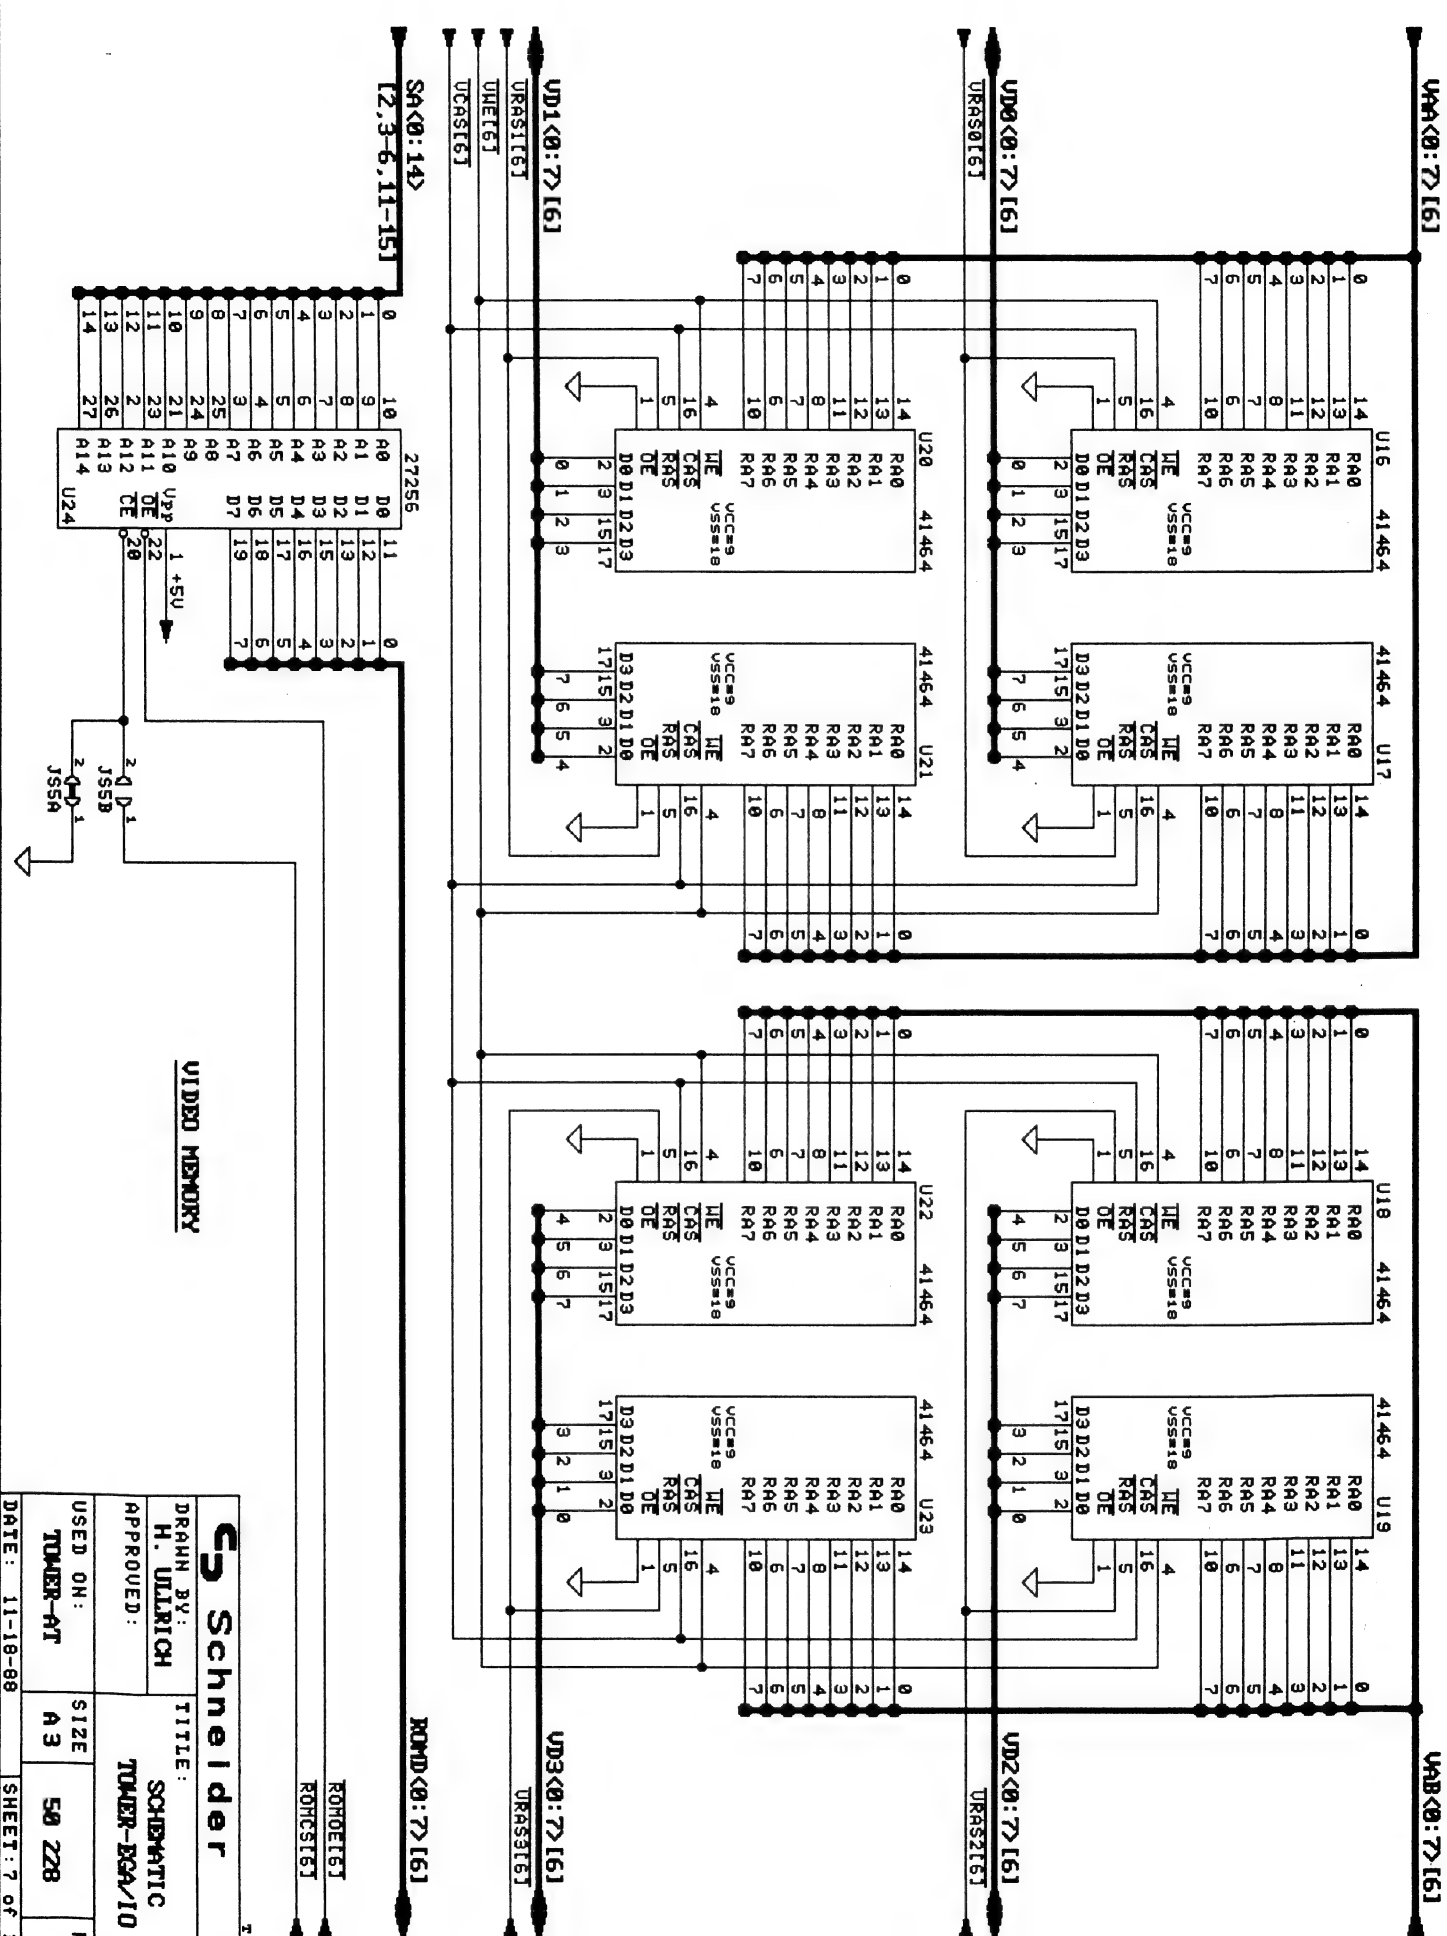

VIDEO MEMORY


Schneider

DRAWN BY: H. ULLRICH
TITLE: SCHNITTSTELLE
APPROVED: TUMER-EGA/10

USED ON: SIZE A3
TUMER-AT 50 228
REV 8

DATE: 11-18-88
SHEET: 7 of 16

VIDEO INTERFACE

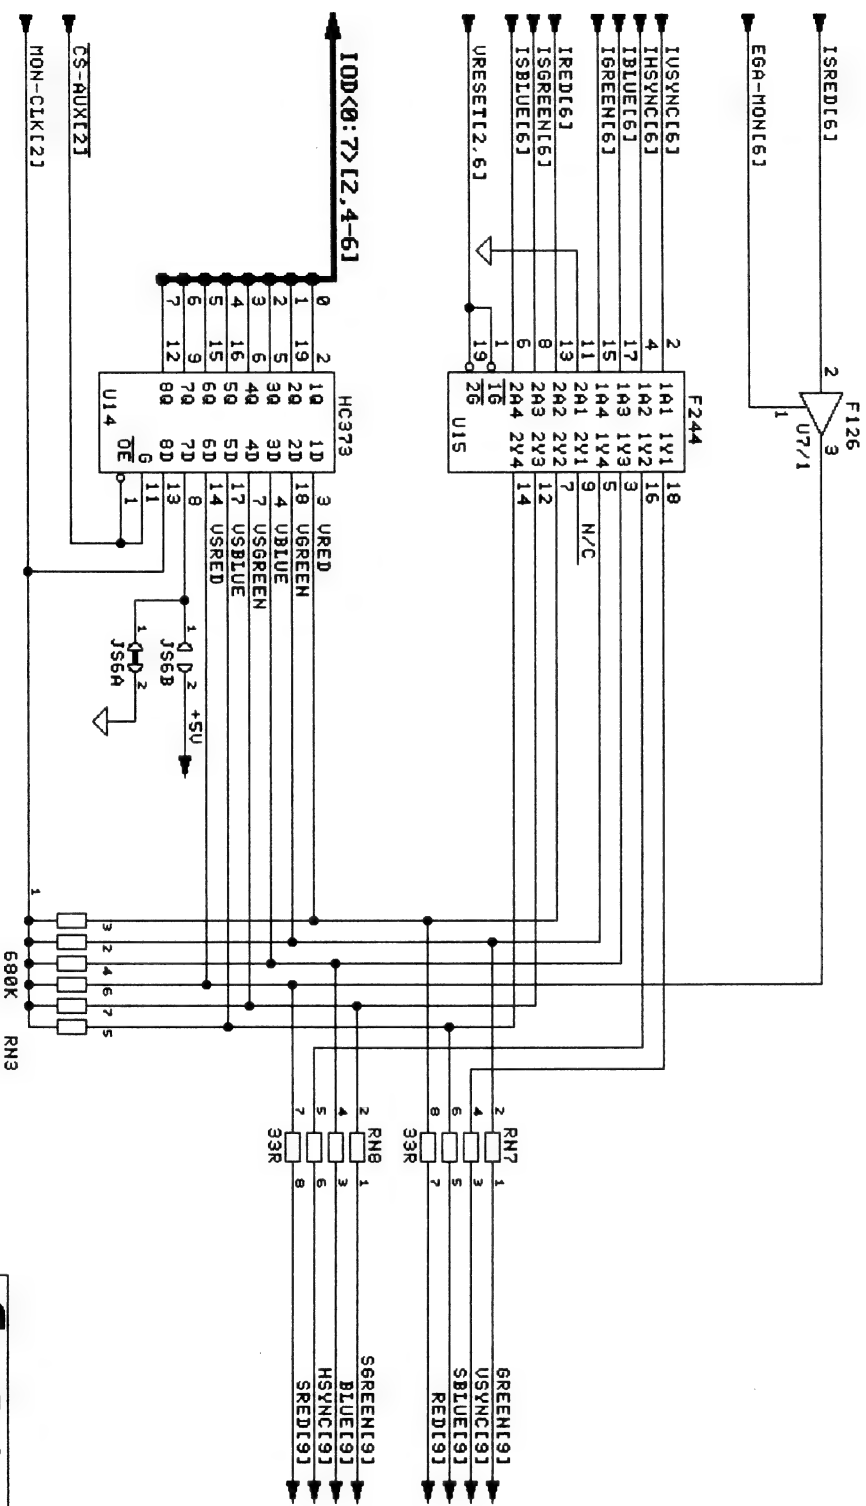

Schneider

DRAWN BY:
H. ULRICH

APPROVED:

TITLE:
SCHEMATIC
TOWER-EGA/10

USED ON:
TOWER-AT

SIZE
A3

REV
8

DATE: 11-18-88

SHEET: 8 OF 16

T10-88

HEADER DUAL ROW 2x5 PIN



HEADIES FASTON 2,8 x 0.8 mm



25 PIN SUBD CONN. FEMALE



9 PIN SUBD CONN. MALE



9 PIN SUBD CONN. FEMALE




Schematic diagram of the J7 connector pinout. The diagram shows a 9-pin connector with pins labeled 1 through 9. Pin 1 is connected to RED[8], pin 2 to SR, pin 3 to GREEN[8], pin 4 to BLUE[8], pin 5 to SGREEN[8], pin 6 to SBLUE[8], pin 7 to HSYNC[8], pin 8 to USYNC[8], and pin 9 to GND. Each signal line is terminated with a 47pF capacitor to ground.

HEADIES FASTON 2,8 x 0.8 mm


FLOPPY EXTERN

25 PIN SUBD CONN. FEMALE


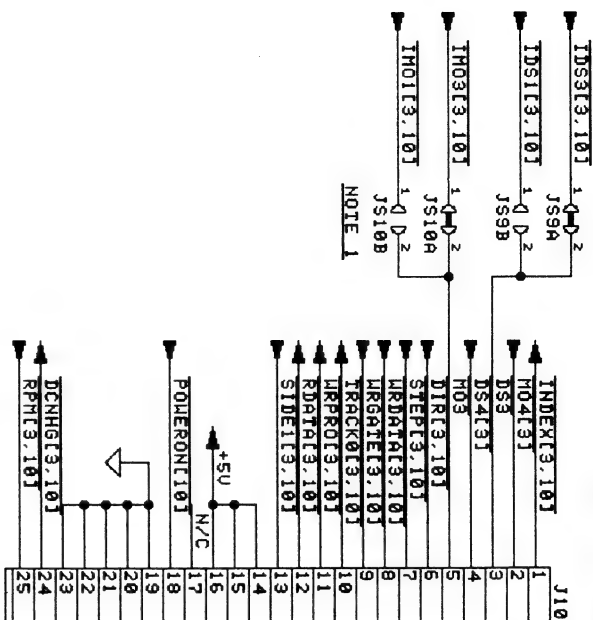


FLOPPY INTERN


HEADER DUAL ROM 26 PIN

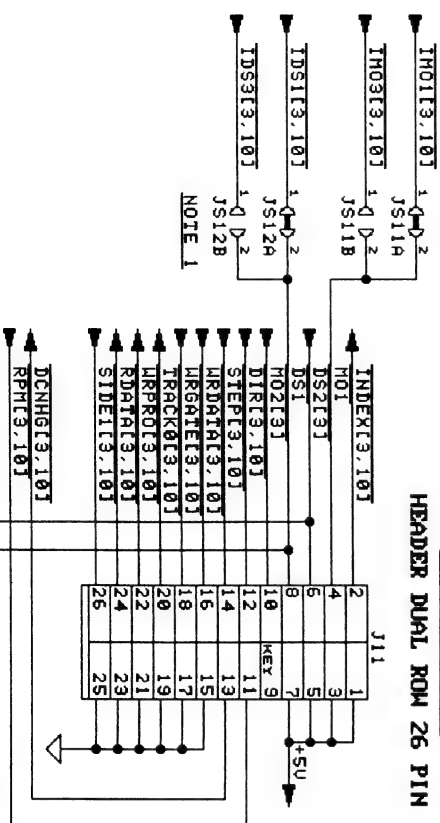

POWER CONNECTOR 1

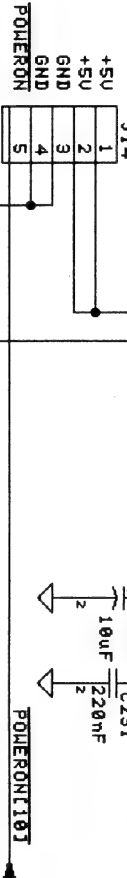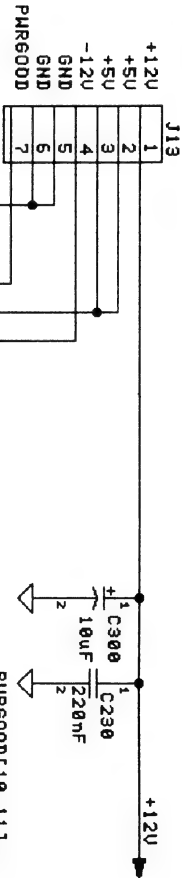


POWER CONNECTOR 2

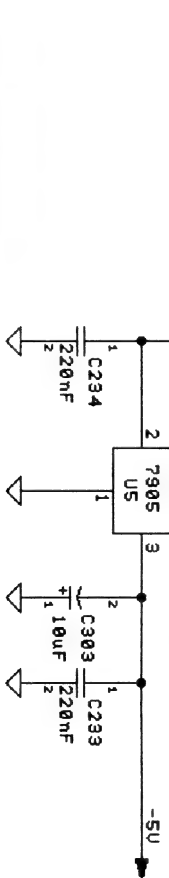

LED CONNECTOR

HEADER MICRO MATCH 6 PIN

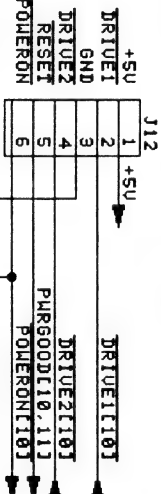

CONNECTORS II

Schneider

DRAWN BY:
H. ULRICH

APPROVED:

USED ON:

TOWER-AT

TITLE:
SCHEMATIC
TOWER-BGA/10

SIZE
A3

50 228

REV
8

DATE: 11-18-88

SHEET: 10 of 16

T10-810


A


B



C

D

1

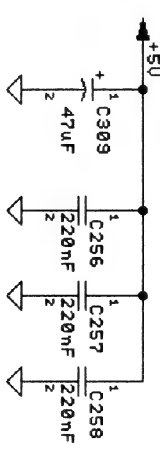

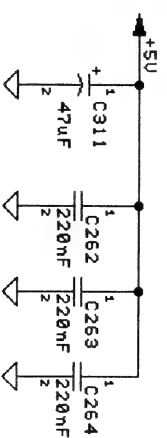

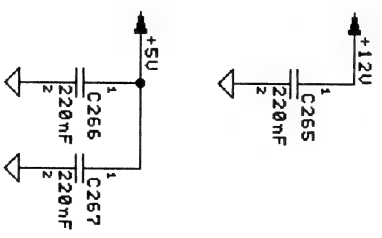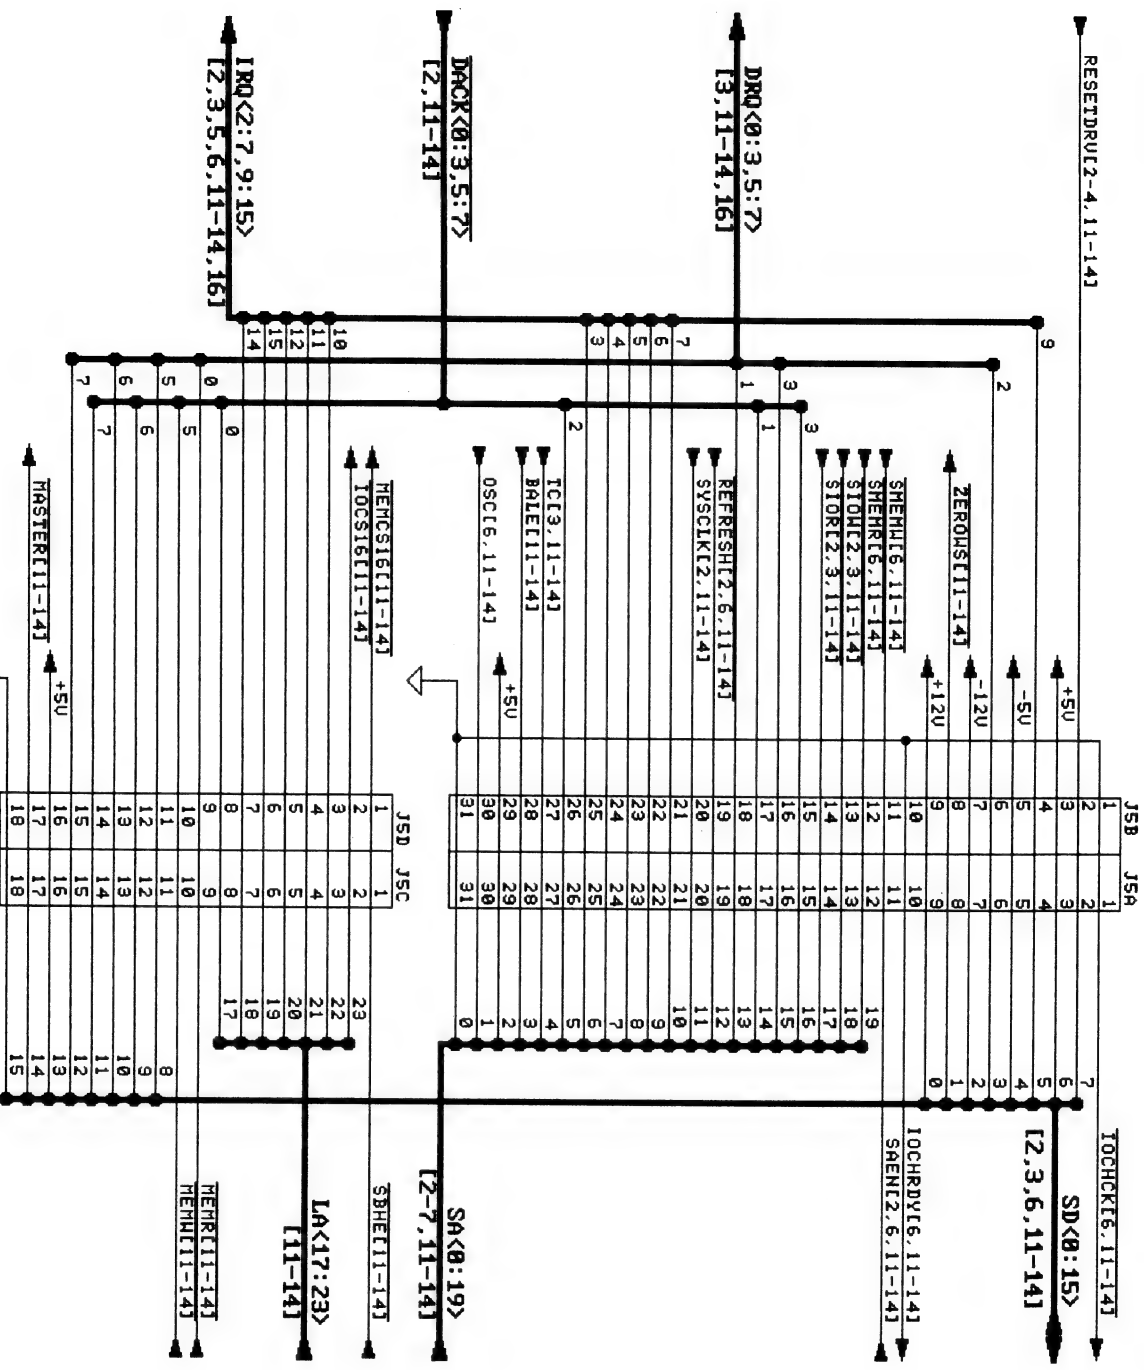

NORMAL SLOT


Schneider

DRAWN BY: H. ULRICH
 TITLE: SCHEMATIC
 APPROVED: TOWER-EGA/10


USED ON: TOWER-AT
 SIZE: A3
 50 228
 REV: 8

DATE: 11-18-88
 SHEET: 15 of 16


SPARE GATES

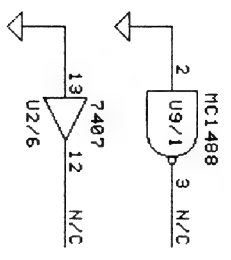


BLOCK CAPS +5V:

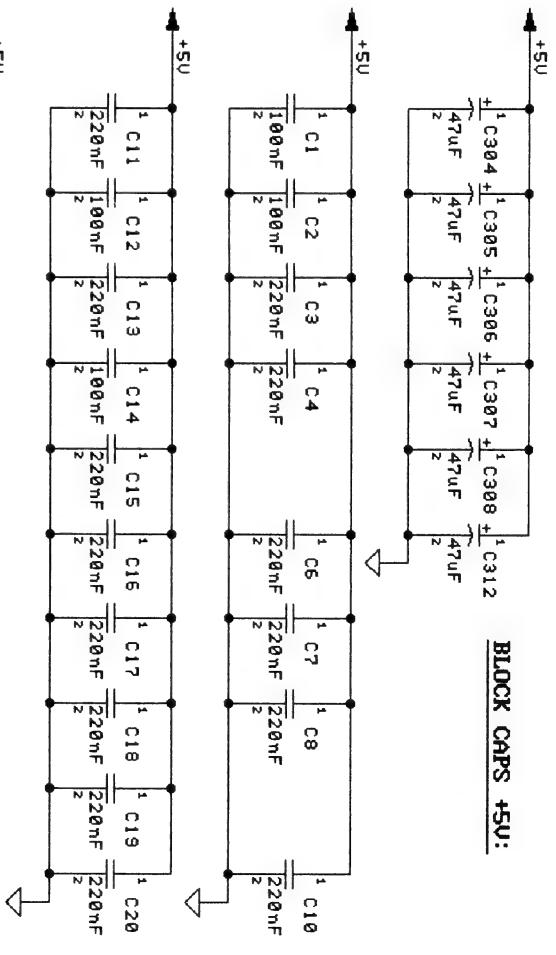

DRQ<0:3,5:7>[3,11-15]

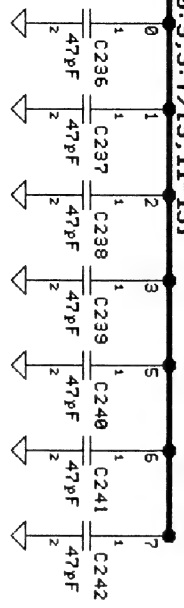

IRQ<2:7,9:15>[2,3,5,6,11-15]

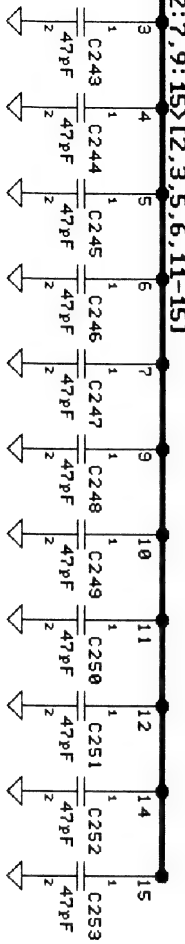

Schneider

DRAWN BY:
B. ASSMANN

APPROVED:

TITLE:
SCHEMATIC
TOWER-EGA/10

USED ON:

TOWER-AT

SIZE
A3


50 228

REV
8

DATE: 11-10-88


SHEET: 16 of 16

Schematic diagram
Power supply SCD-SNT 90/B03

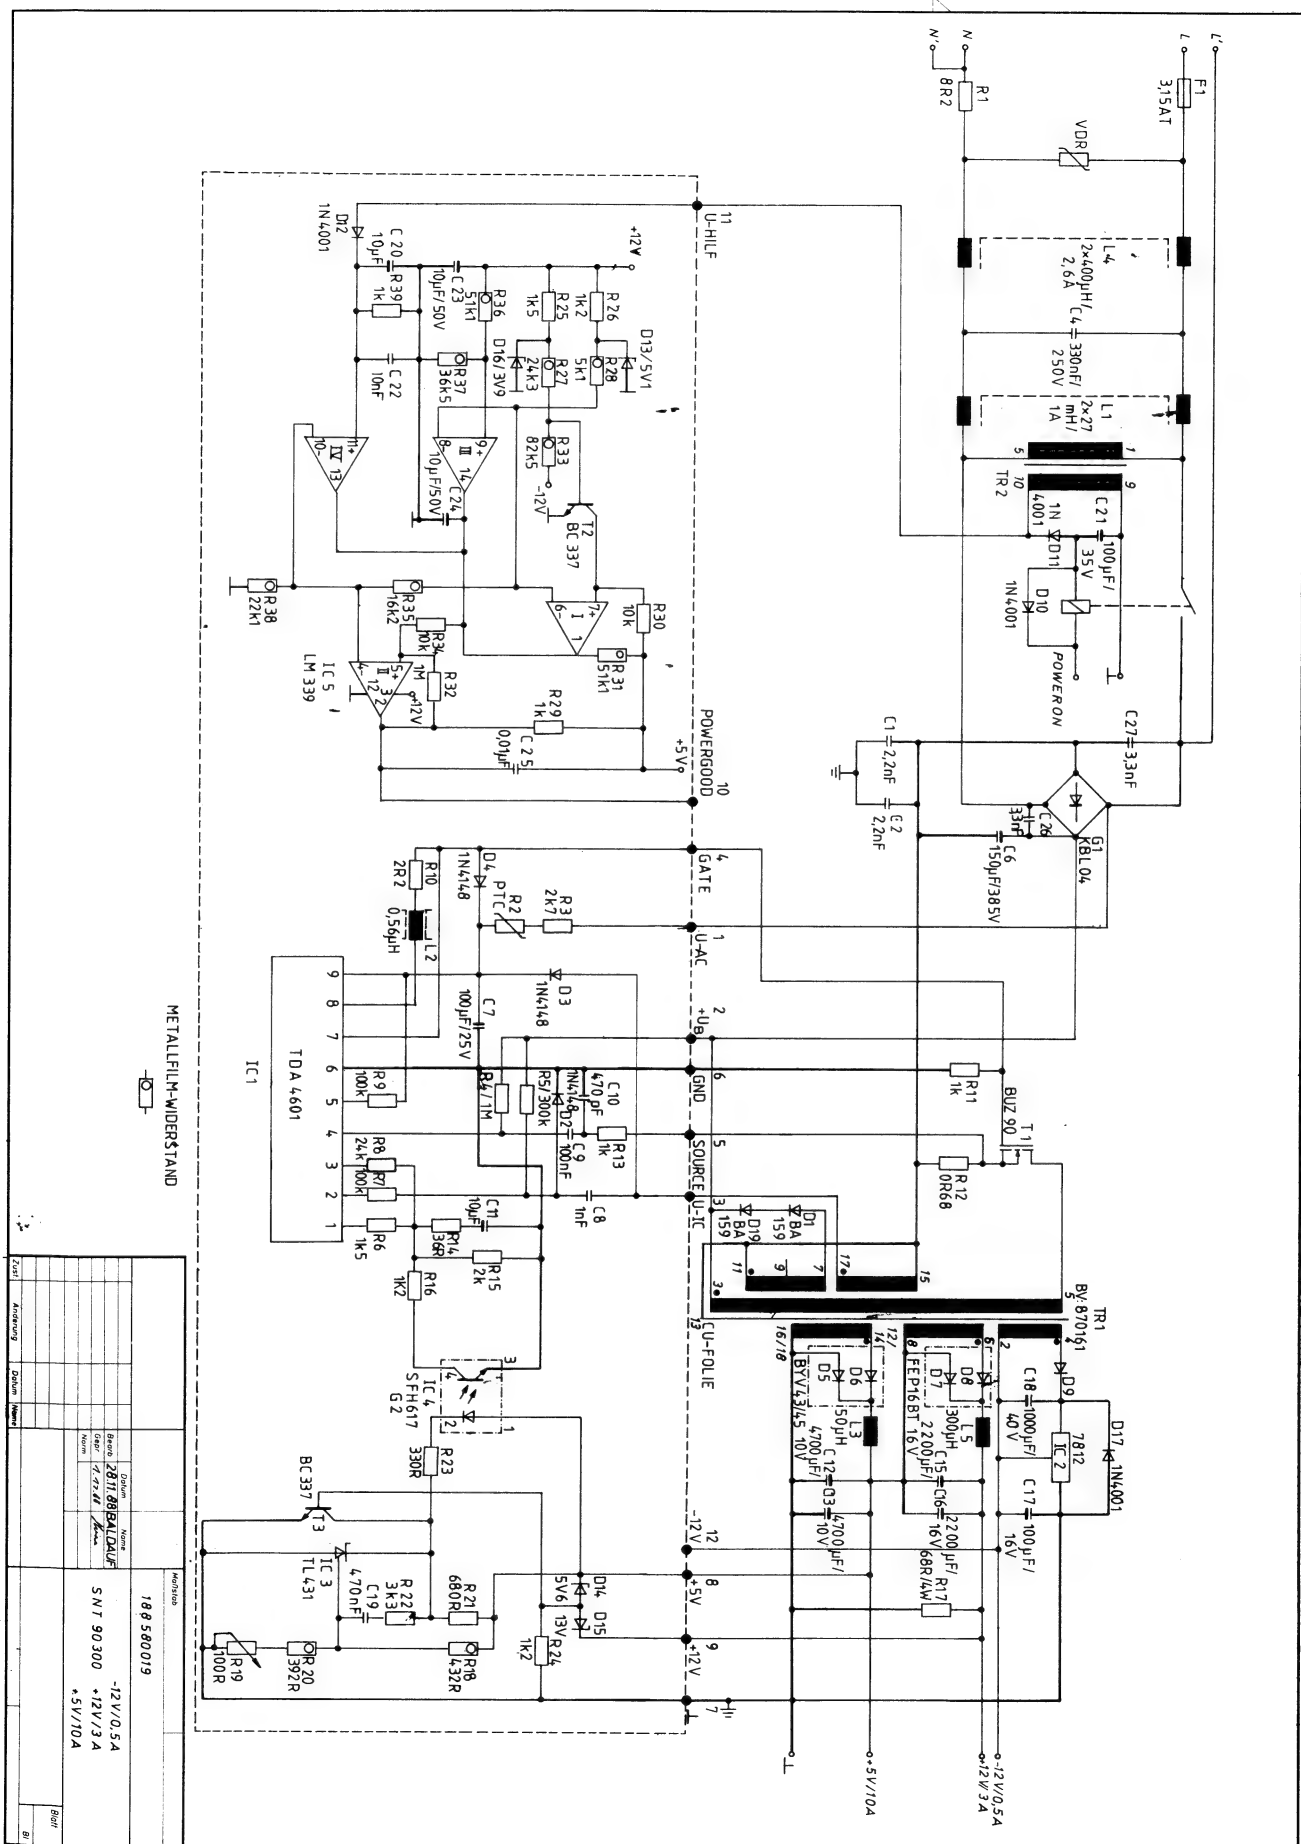


Power supply SCD-SNT 90/B03

Component side

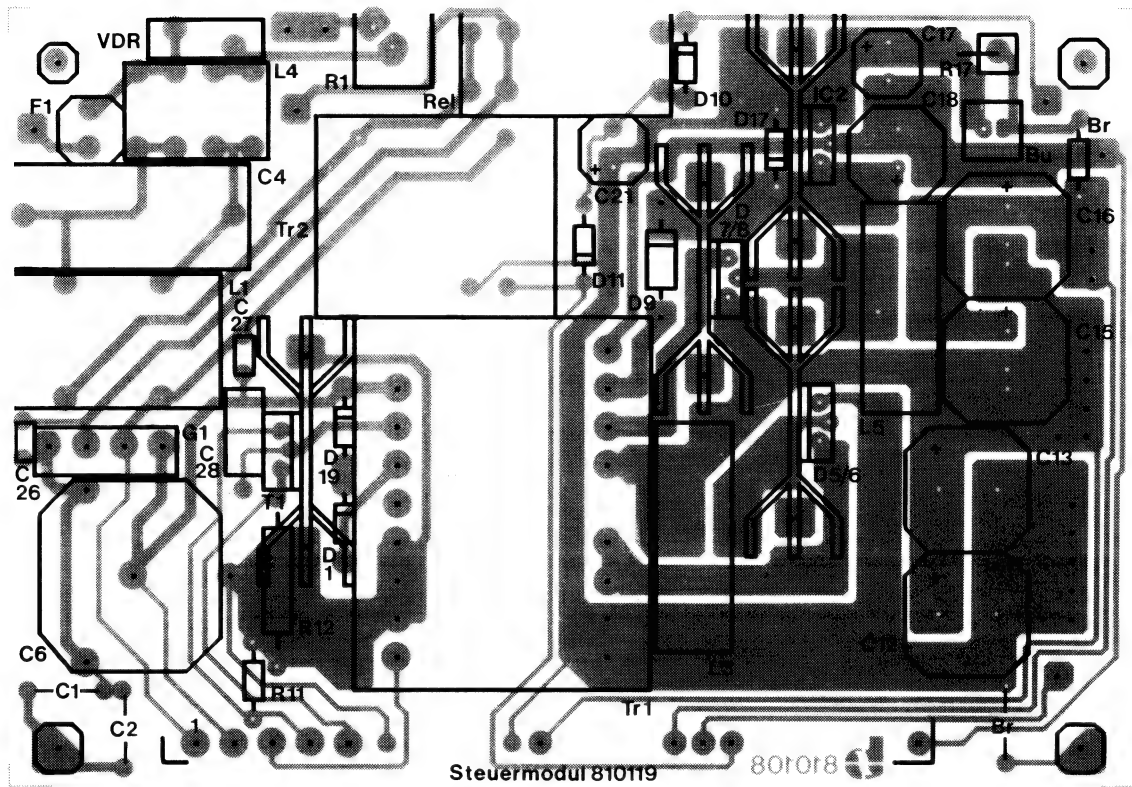


Schaltnetzteil „Tower” SCD-SNT 90/01 B03 Id.580018 Ident Nr.7270-50215

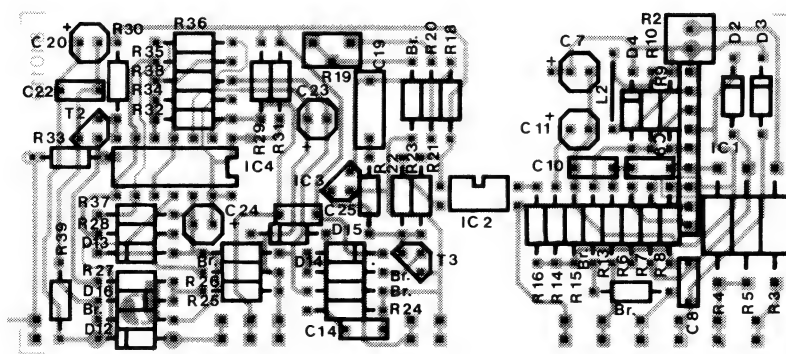


Steuermodul 810119

Power supply SCD-SNT 90/B03

Component side

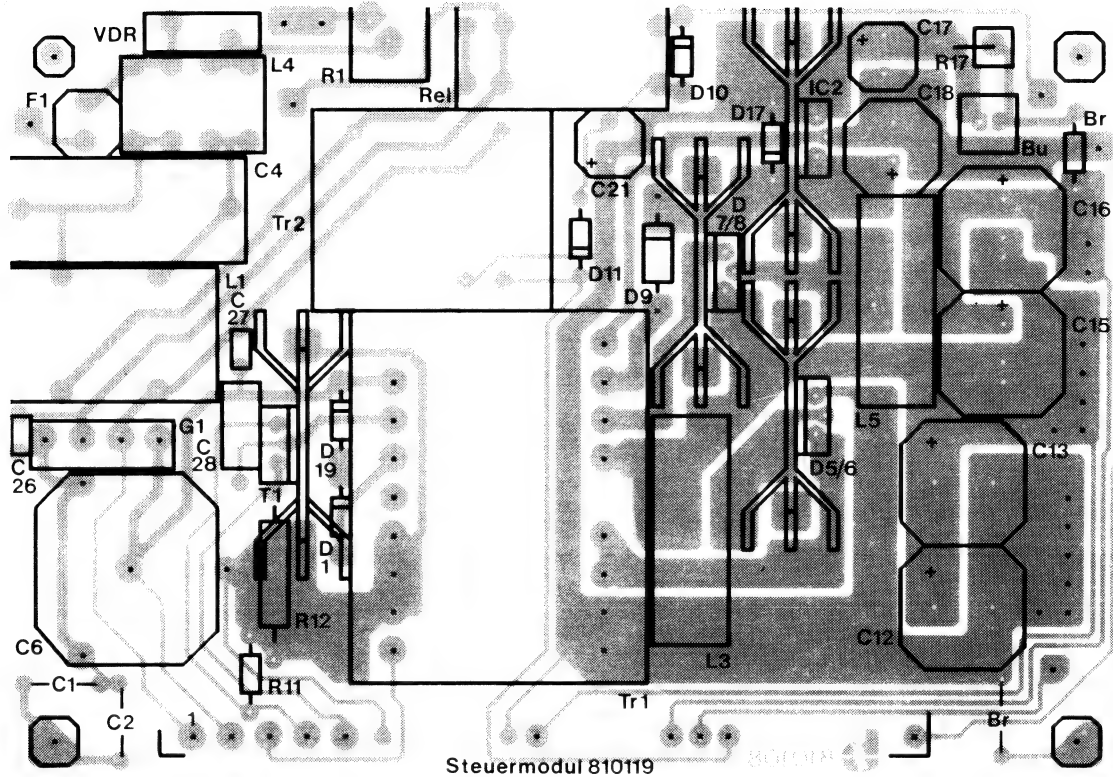


Schaltnetzteil „Tower“ SCD-SNT 90/01 B03 Id.580018 Ident Nr.7270-50215

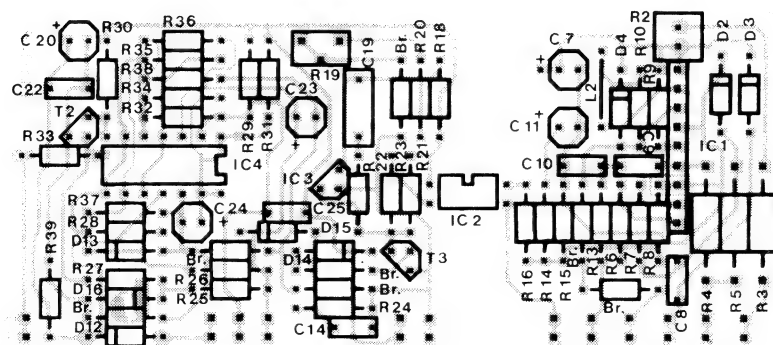


Steuermodul 810119

Schematic diagram
Power supply SCD-SNT 90/B03
Mainboard

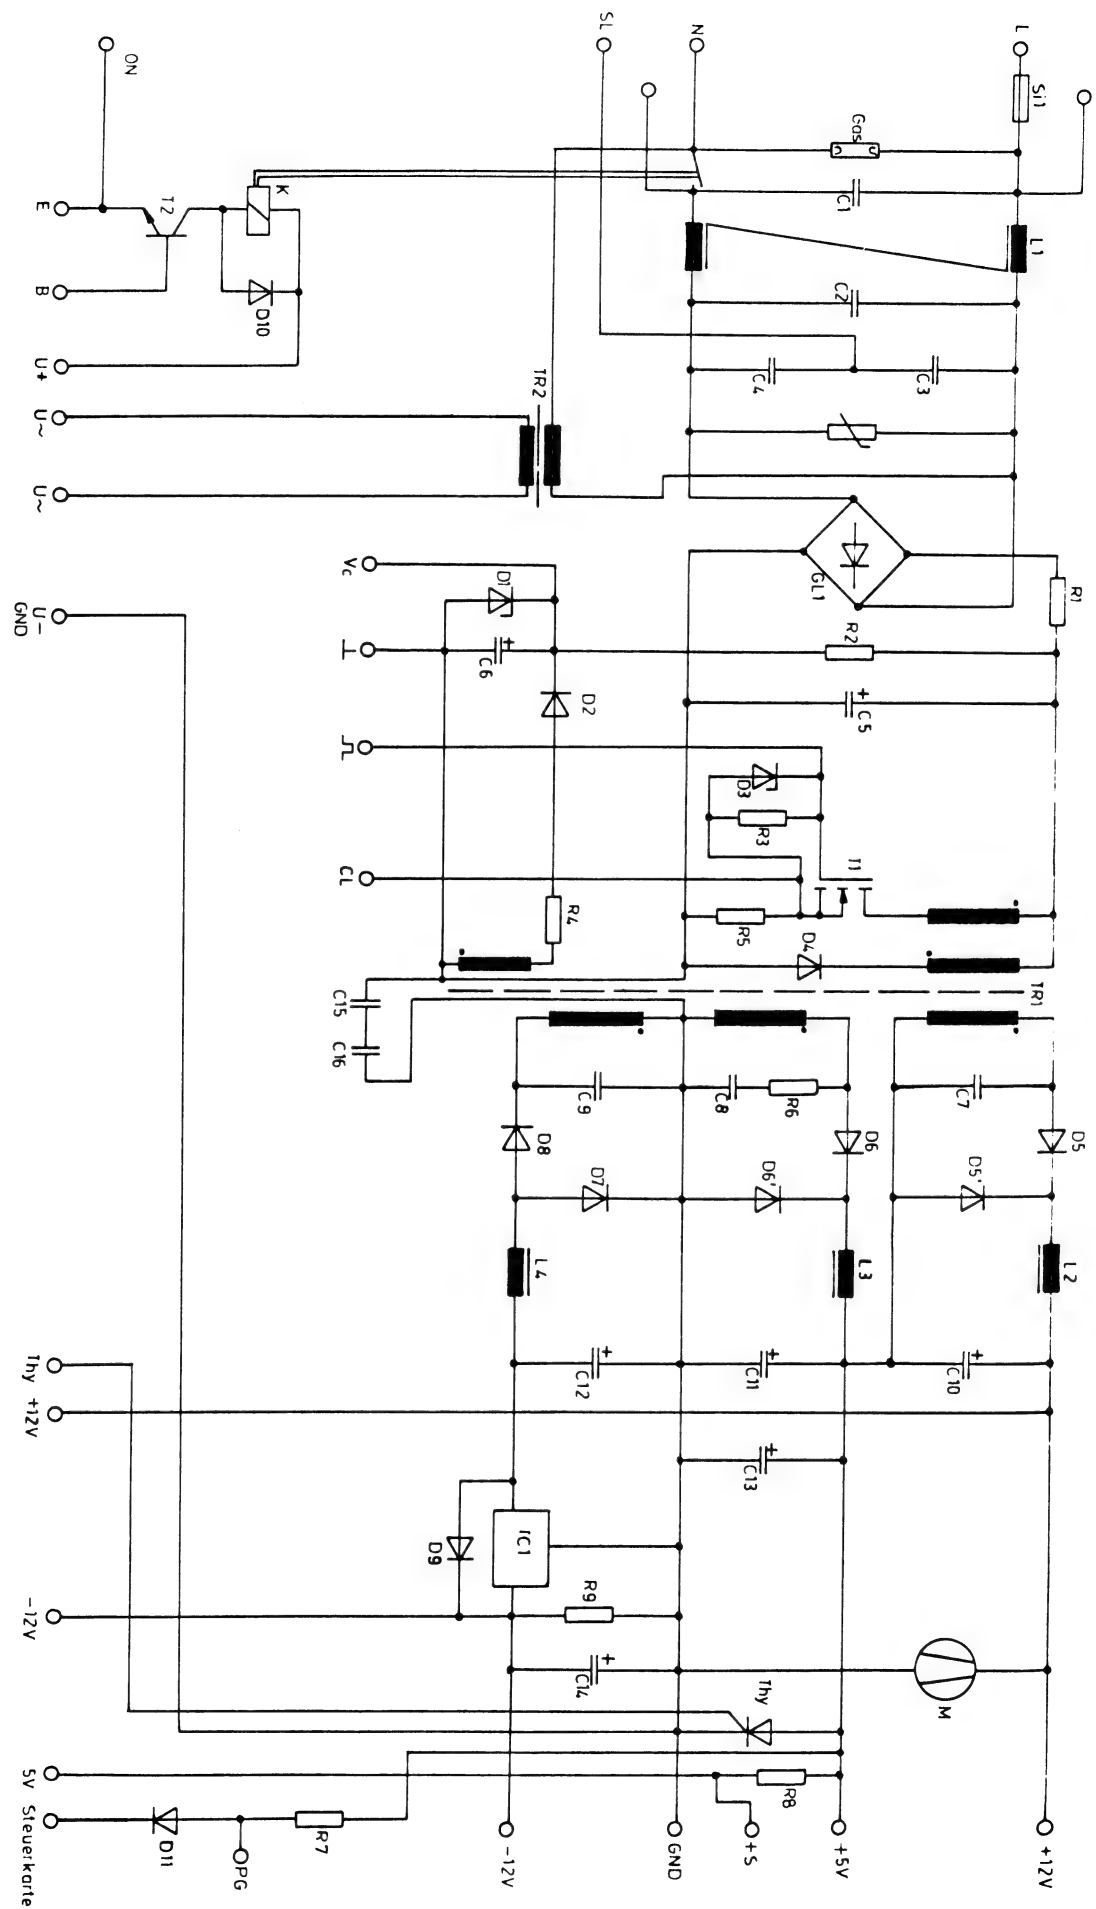


Schematic diagram
Power supply SCD-SNT 90/E02
Controlboard


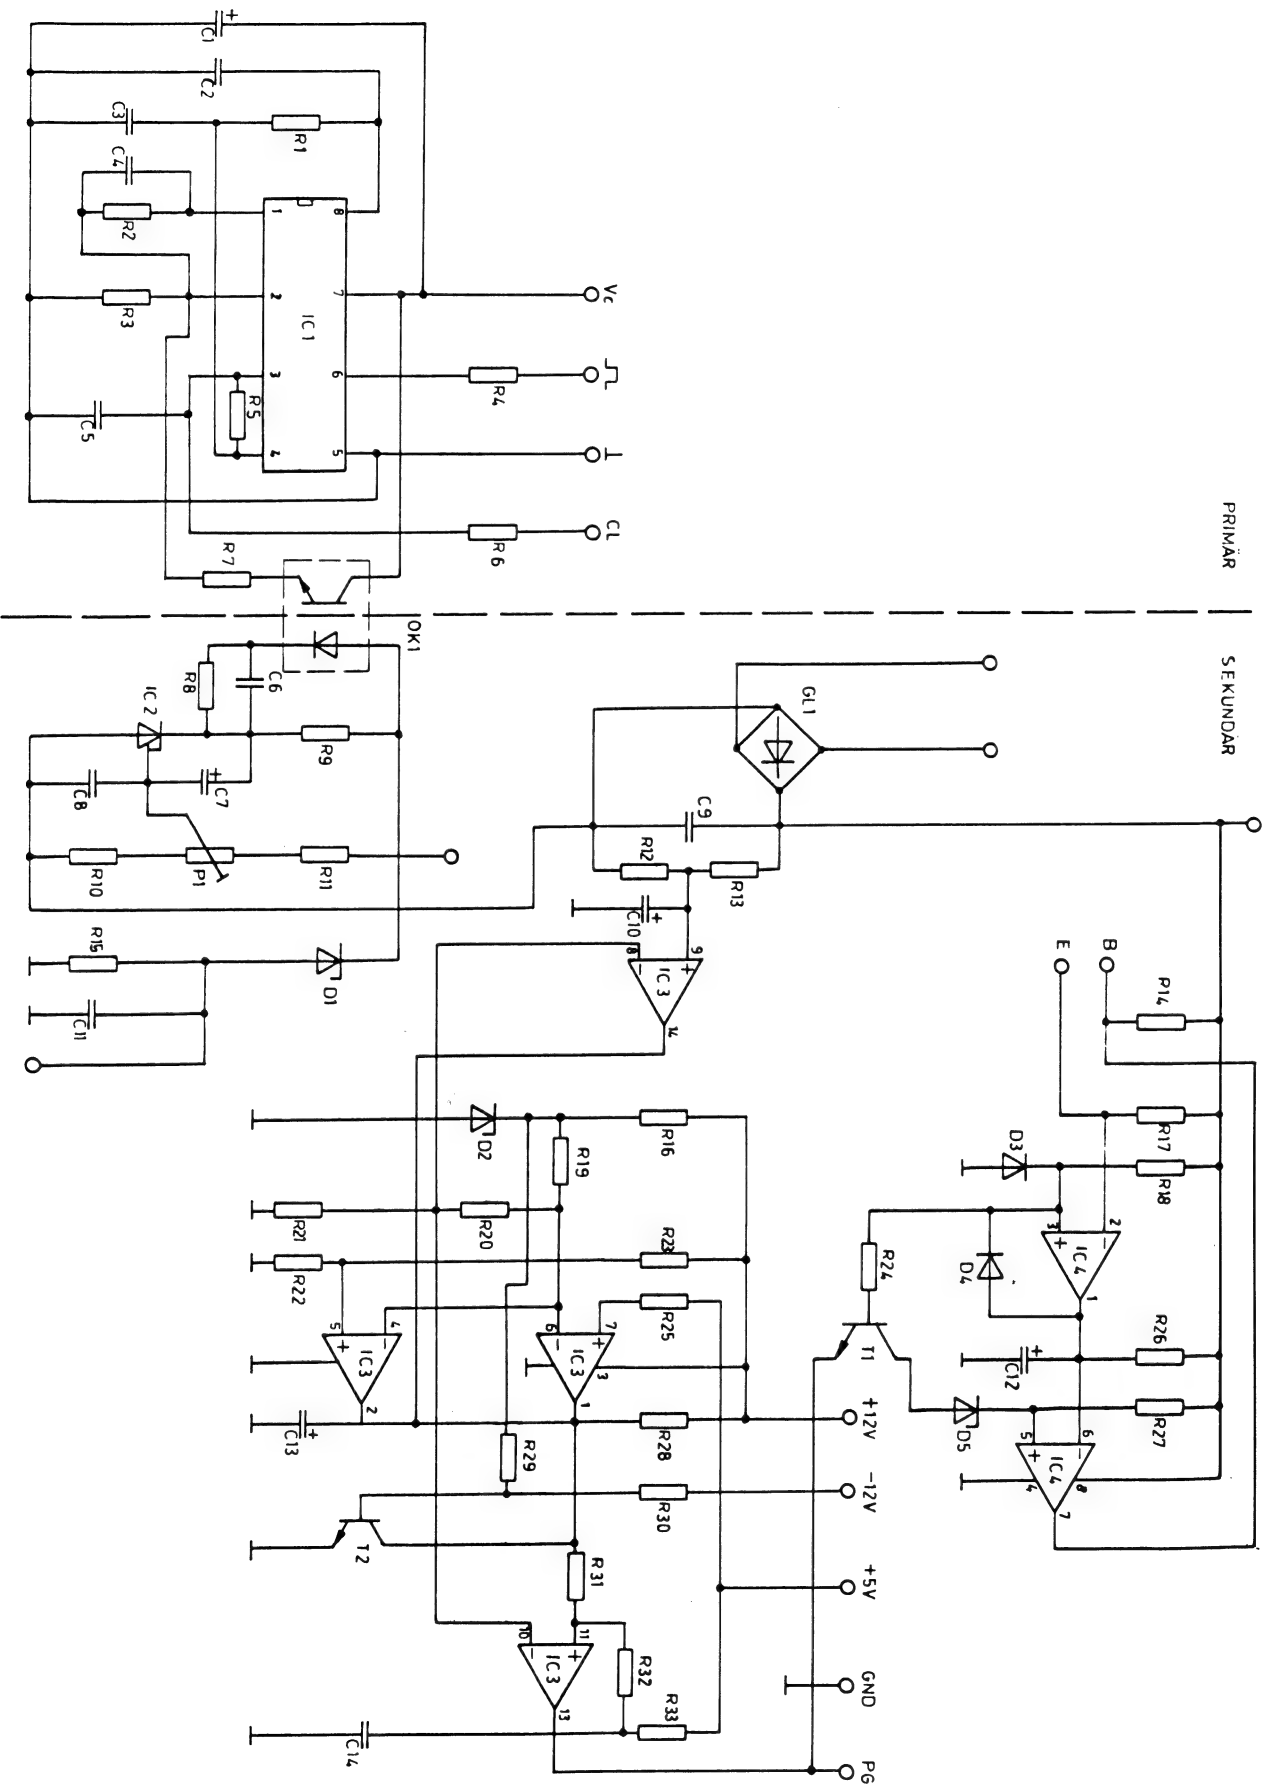


Power supply SCD-SNT 90/E02



Component side

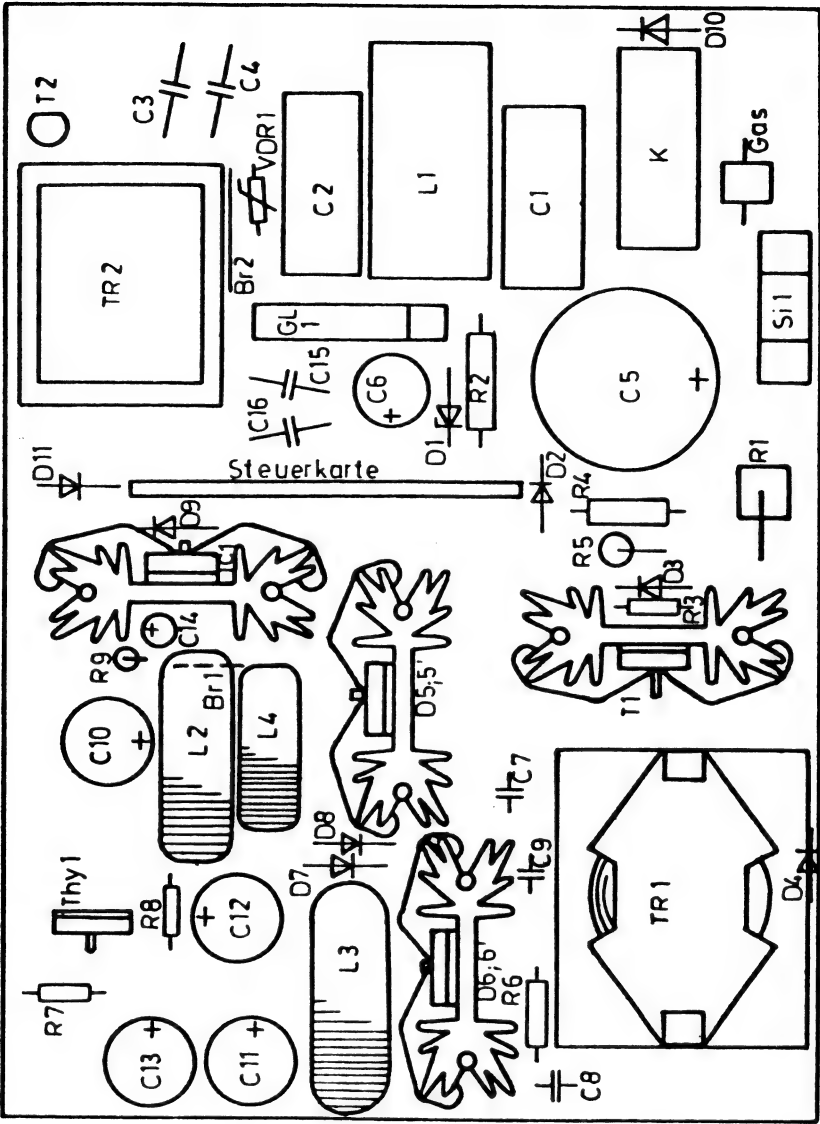

Pin assignment

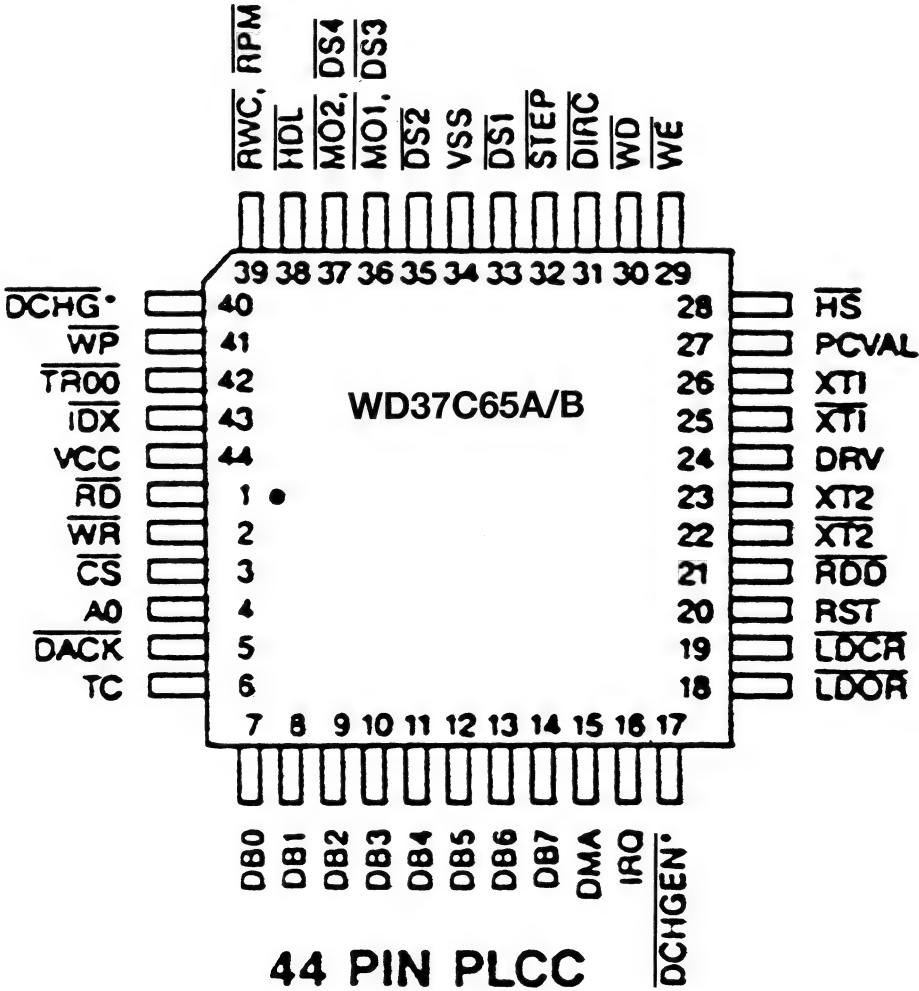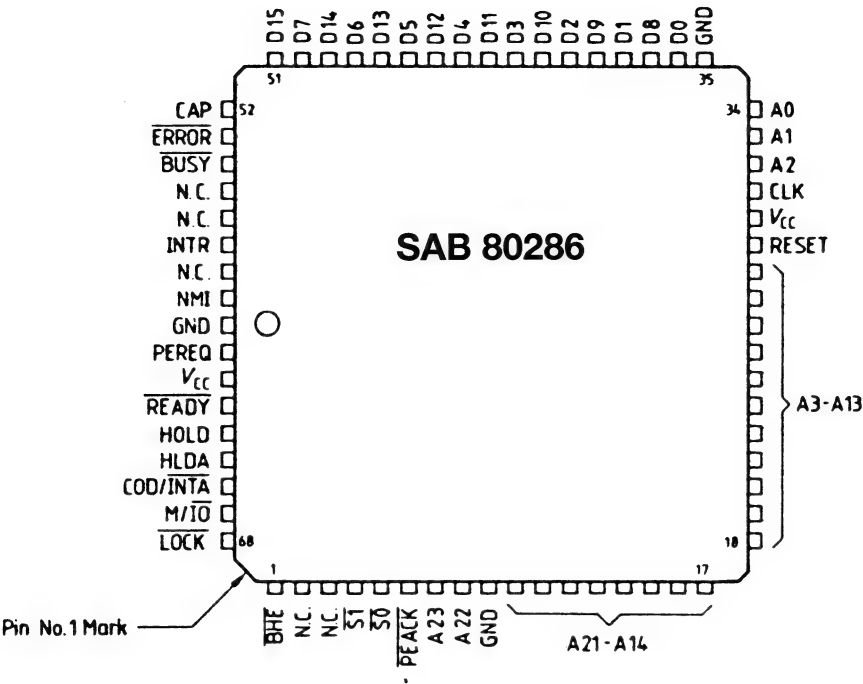

Pin assignment

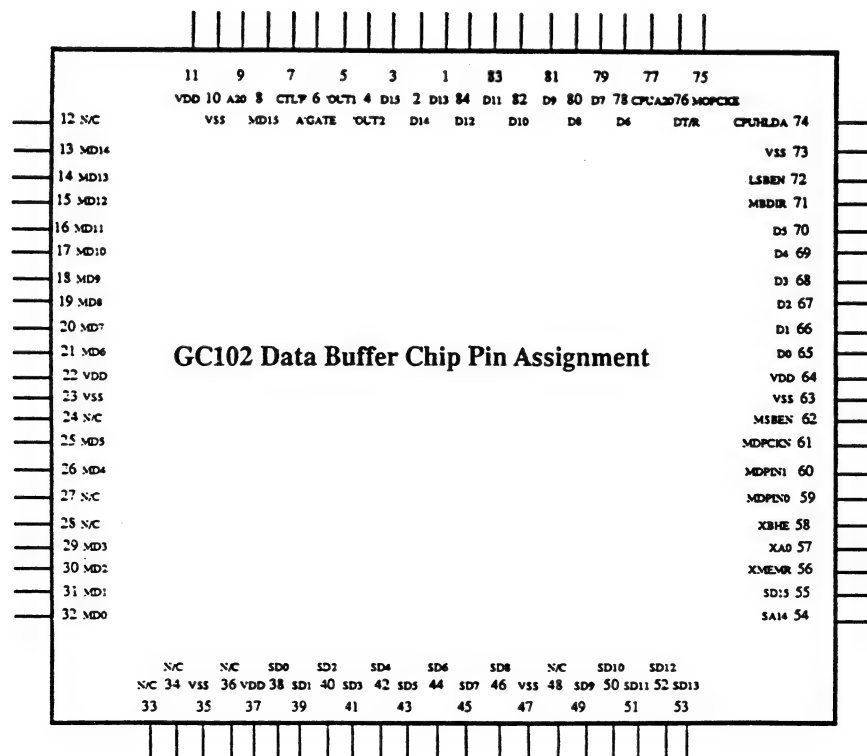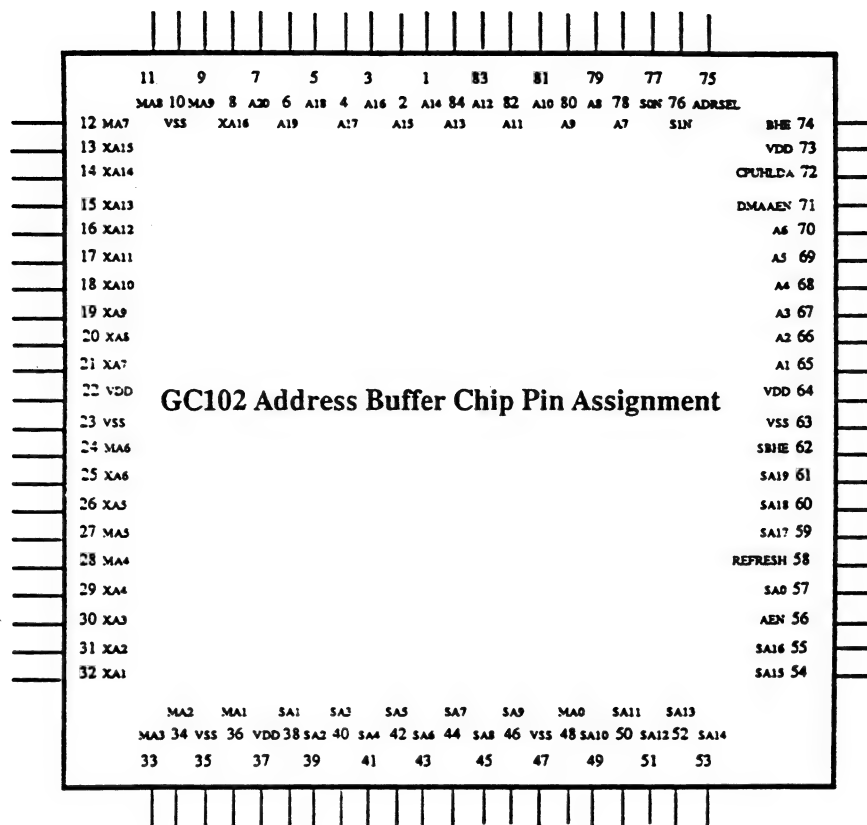

Pin assignment



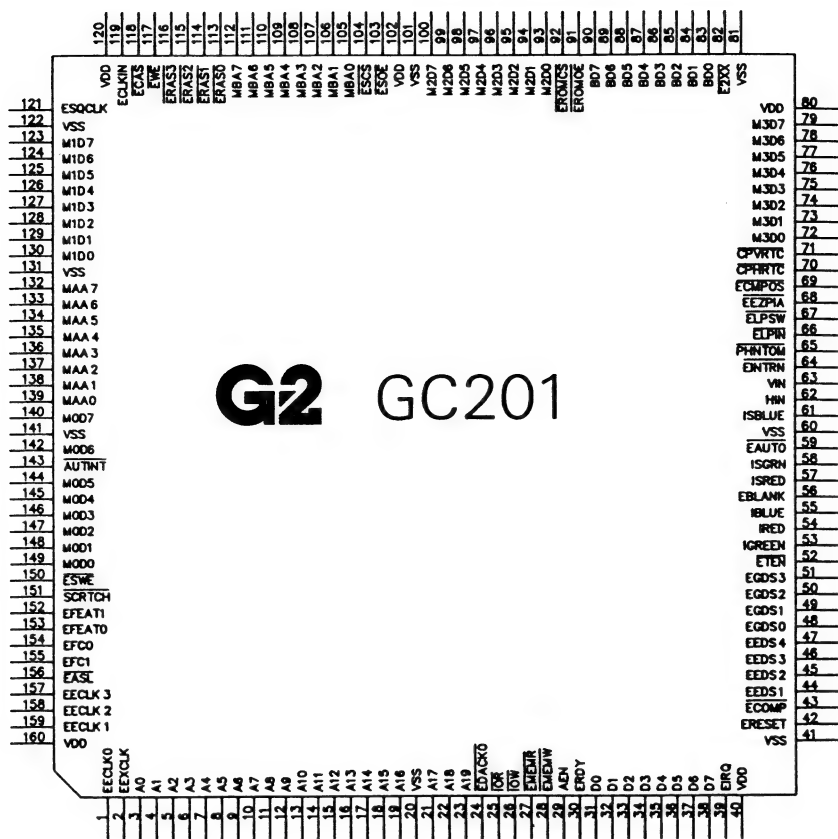


Figure 2 Pin Assignment

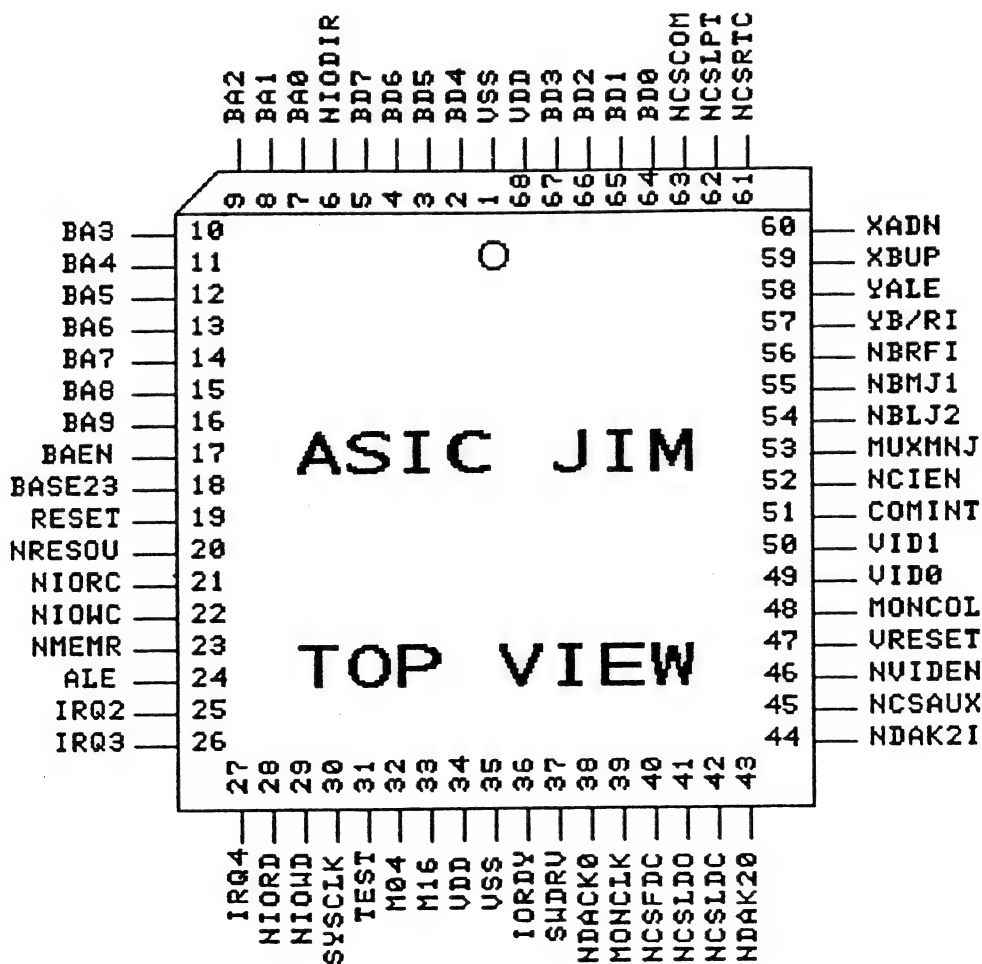







Pin assignment

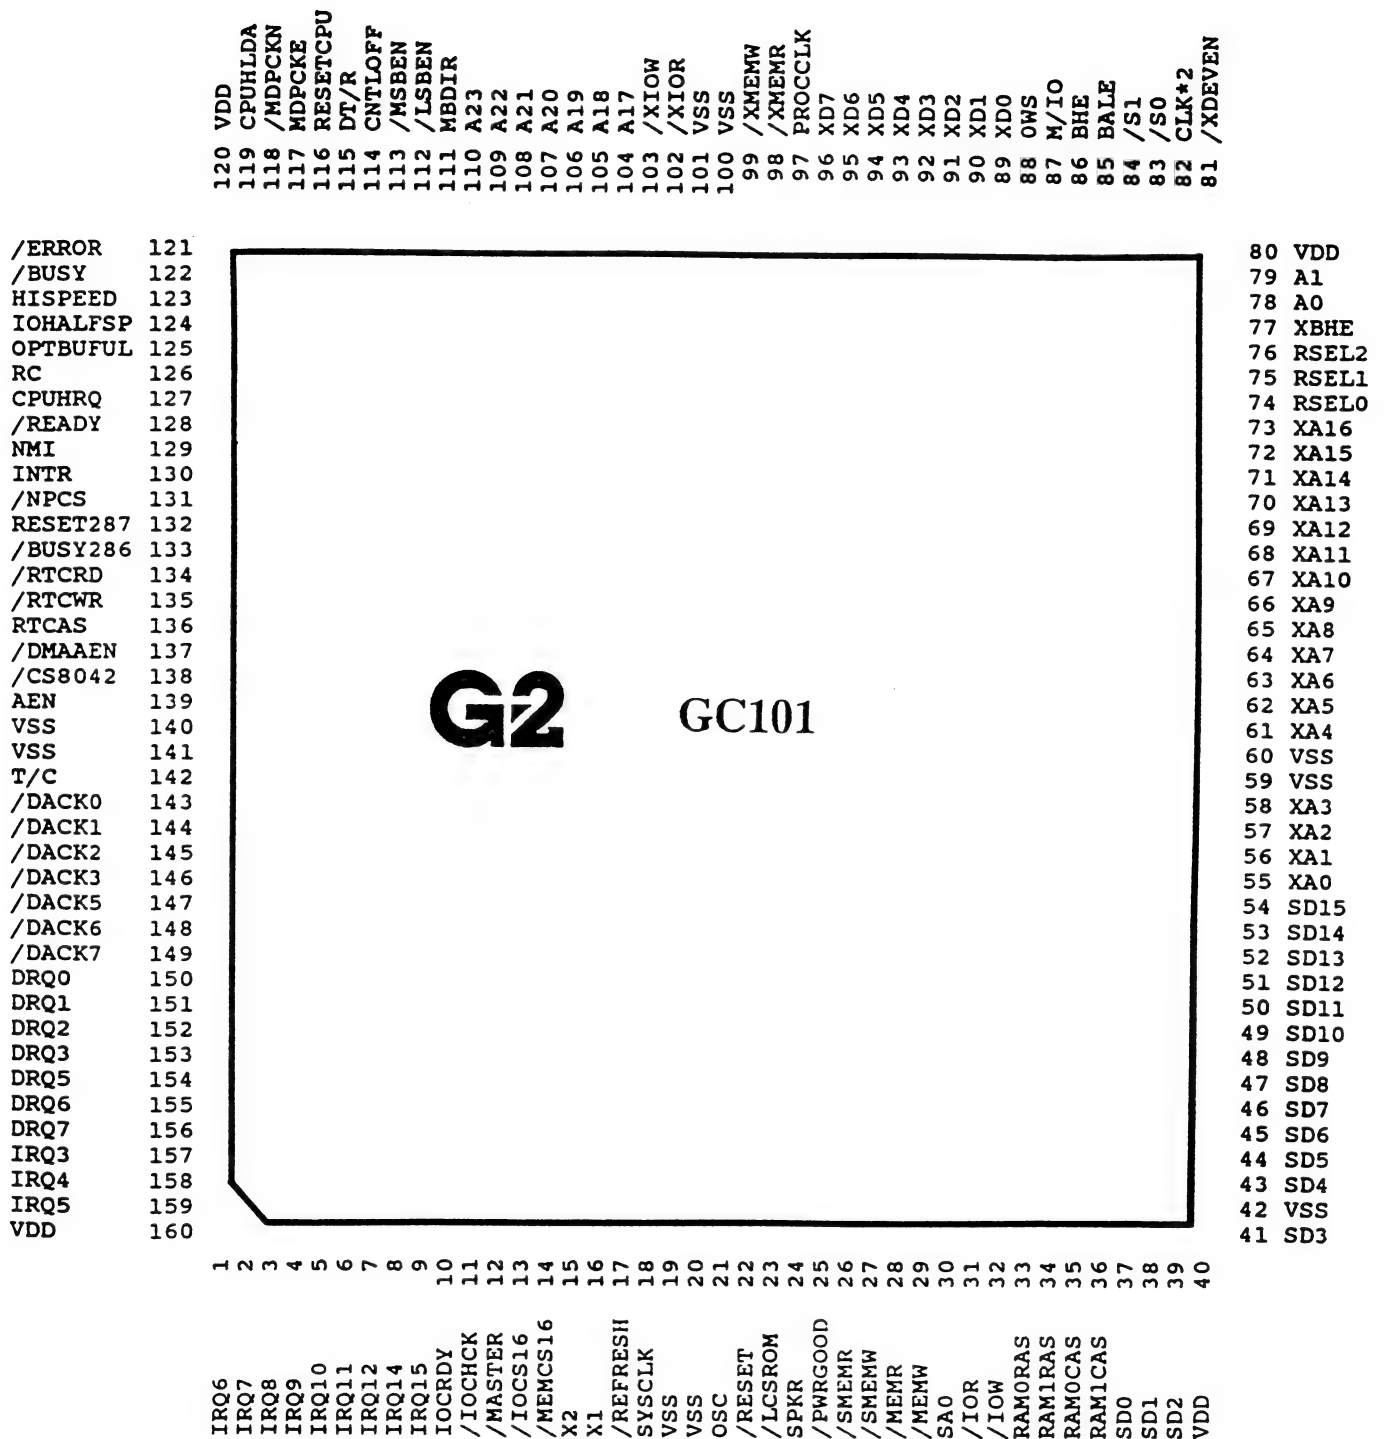

Appendix A:

Different schematics CPU Rev. 8 – Rev. 7 (Layout Rev. 3)

XA<0:16>[2,3,5,7,8]
CPU-ADDR<0:23>[2,7]

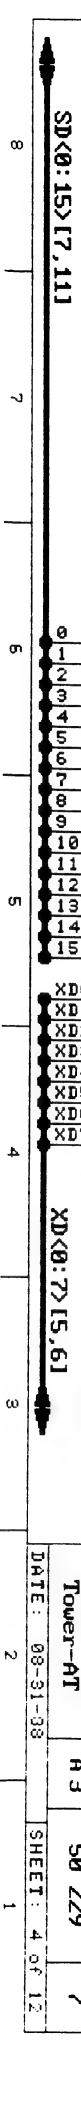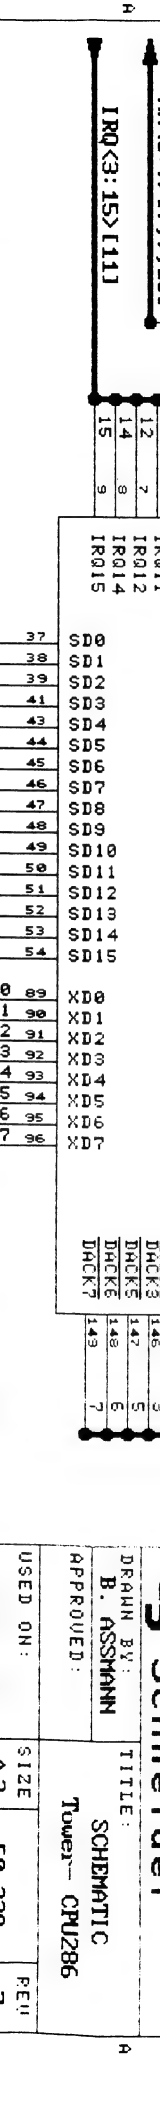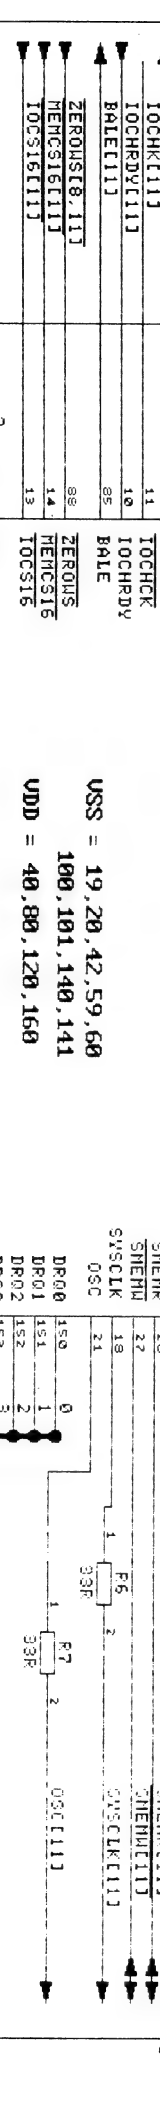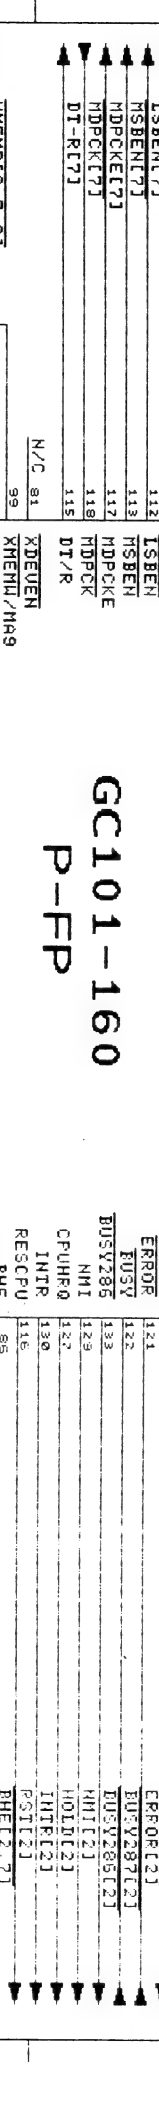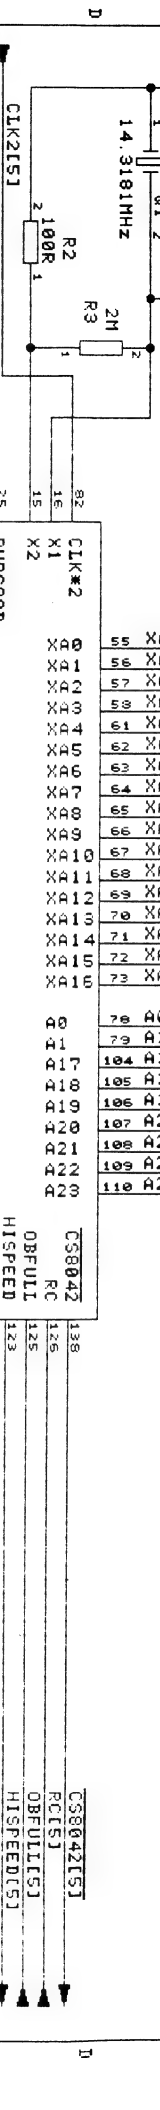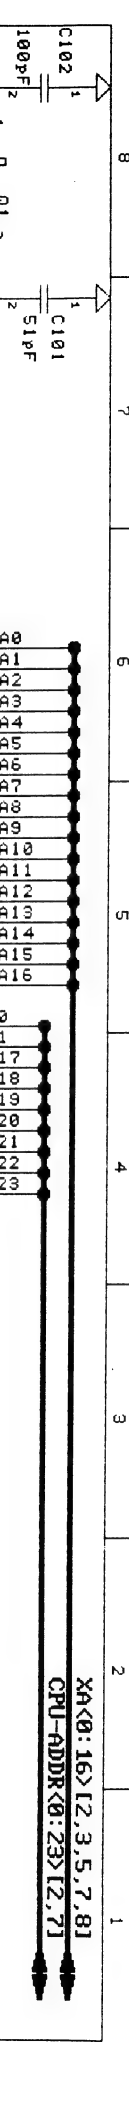


GC101-160

P-FP

US

USS = 19,20,42,59,60
100,101,140,141
UDD = 40,80,120,160

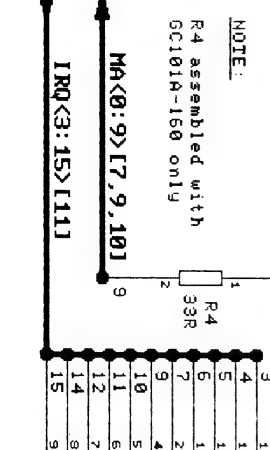

NOTE:
R4 assembled with GC101A-160 only

MA<0:9>[7,9,10]	1	2	3	4	5	6	7	8	9
IR0<3:15>[11]	1	2	3	4	5	6	7	8	9


CS042[5]	138	CS042[5]	137
RC	126	RCISJ	125
DBFULL	125	DBFULL[5]	124
HISPEED	123	HISPEED[5]	122
RTCMR	134	RTCMR[5]	133
RTCMR	135	RTCMR[6]	134
RTCMR	136	RTCMR[7]	135
IR08	3	IR08[6]	3
DMHREN	137	DMHREN[7]	136
CPUHLD4	119	CPUHLD2[7,8]	118
50	83	50[2,8]	82
51	84	51[2,8]	83
N/10	87	N/10[2]	86
PROCLK	97	CLK[2,9]	96
READY	129	RDY[2]	128
NPCS	131	NPCS[2]	130
RES287	132	RESET287[2]	131
ERRRD	121	ERRRD[2]	120
FUSY	122	FUSY287[2]	121
BUSY286	133	BUSY286[2]	132
NMI	129	NMI[2]	128
CPUH0	130	CPUH0[2]	129
INTR	116	INTR[2]	115
RESCPU	116	RESCPU[2]	115
BME	85	BME[2,7]	84
MASTER	12	MASTER[7,11]	11
RESET	22	RESET[5,9]	21
REN	139	REN[7,11]	138
REFRESH	17	REFRESH[6,11]	16
TOR	31	TOR[11]	30
IOH	32	IOH[11]	31
SHENR	26	SHENR[11]	25
SHENR	27	SHENR[11]	26
SVCLK	19	SVCLK[11]	18
OSC	21	OSC[11]	20
DR00	150	DR00[11]	149
DR01	151	DR01[11]	150
DR02	152	DR02[11]	151
DR03	153	DR03[11]	152
DR04	154	DR04[11]	153
DR05	155	DR05[11]	154
DR06	156	DR06[11]	155
DR07	157	DR07[11]	156
DACK0	143	DACK0[11]	142
DACK1	144	DACK1[11]	143
DACK2	145	DACK2[11]	144
DACK3	146	DACK3[11]	145
DACK4	147	DACK4[11]	146
DACK5	148	DACK5[11]	147
DACK6	149	DACK6[11]	148
DACK7	150	DACK7[11]	149

Schneider

DRAWN BY: B. ASSMANN
APPROVED: Tower-CPU286

USED ON: Tower-AT
DATE: 08-31-88
SIZE: A3
SHEET: 4 of 12

NOTE:
 For use with U8=MC146818, omit R13 and assemble Q3, R14, R16-R18, D4, T1, T2, C105, and C302.
 D2 and D3 for optionally external battery.
 For use with U8=DS1287, omit Q3, R14, R16-R18, D2, D3, D4, T1, T2, C105, and C302 and assemble R13.

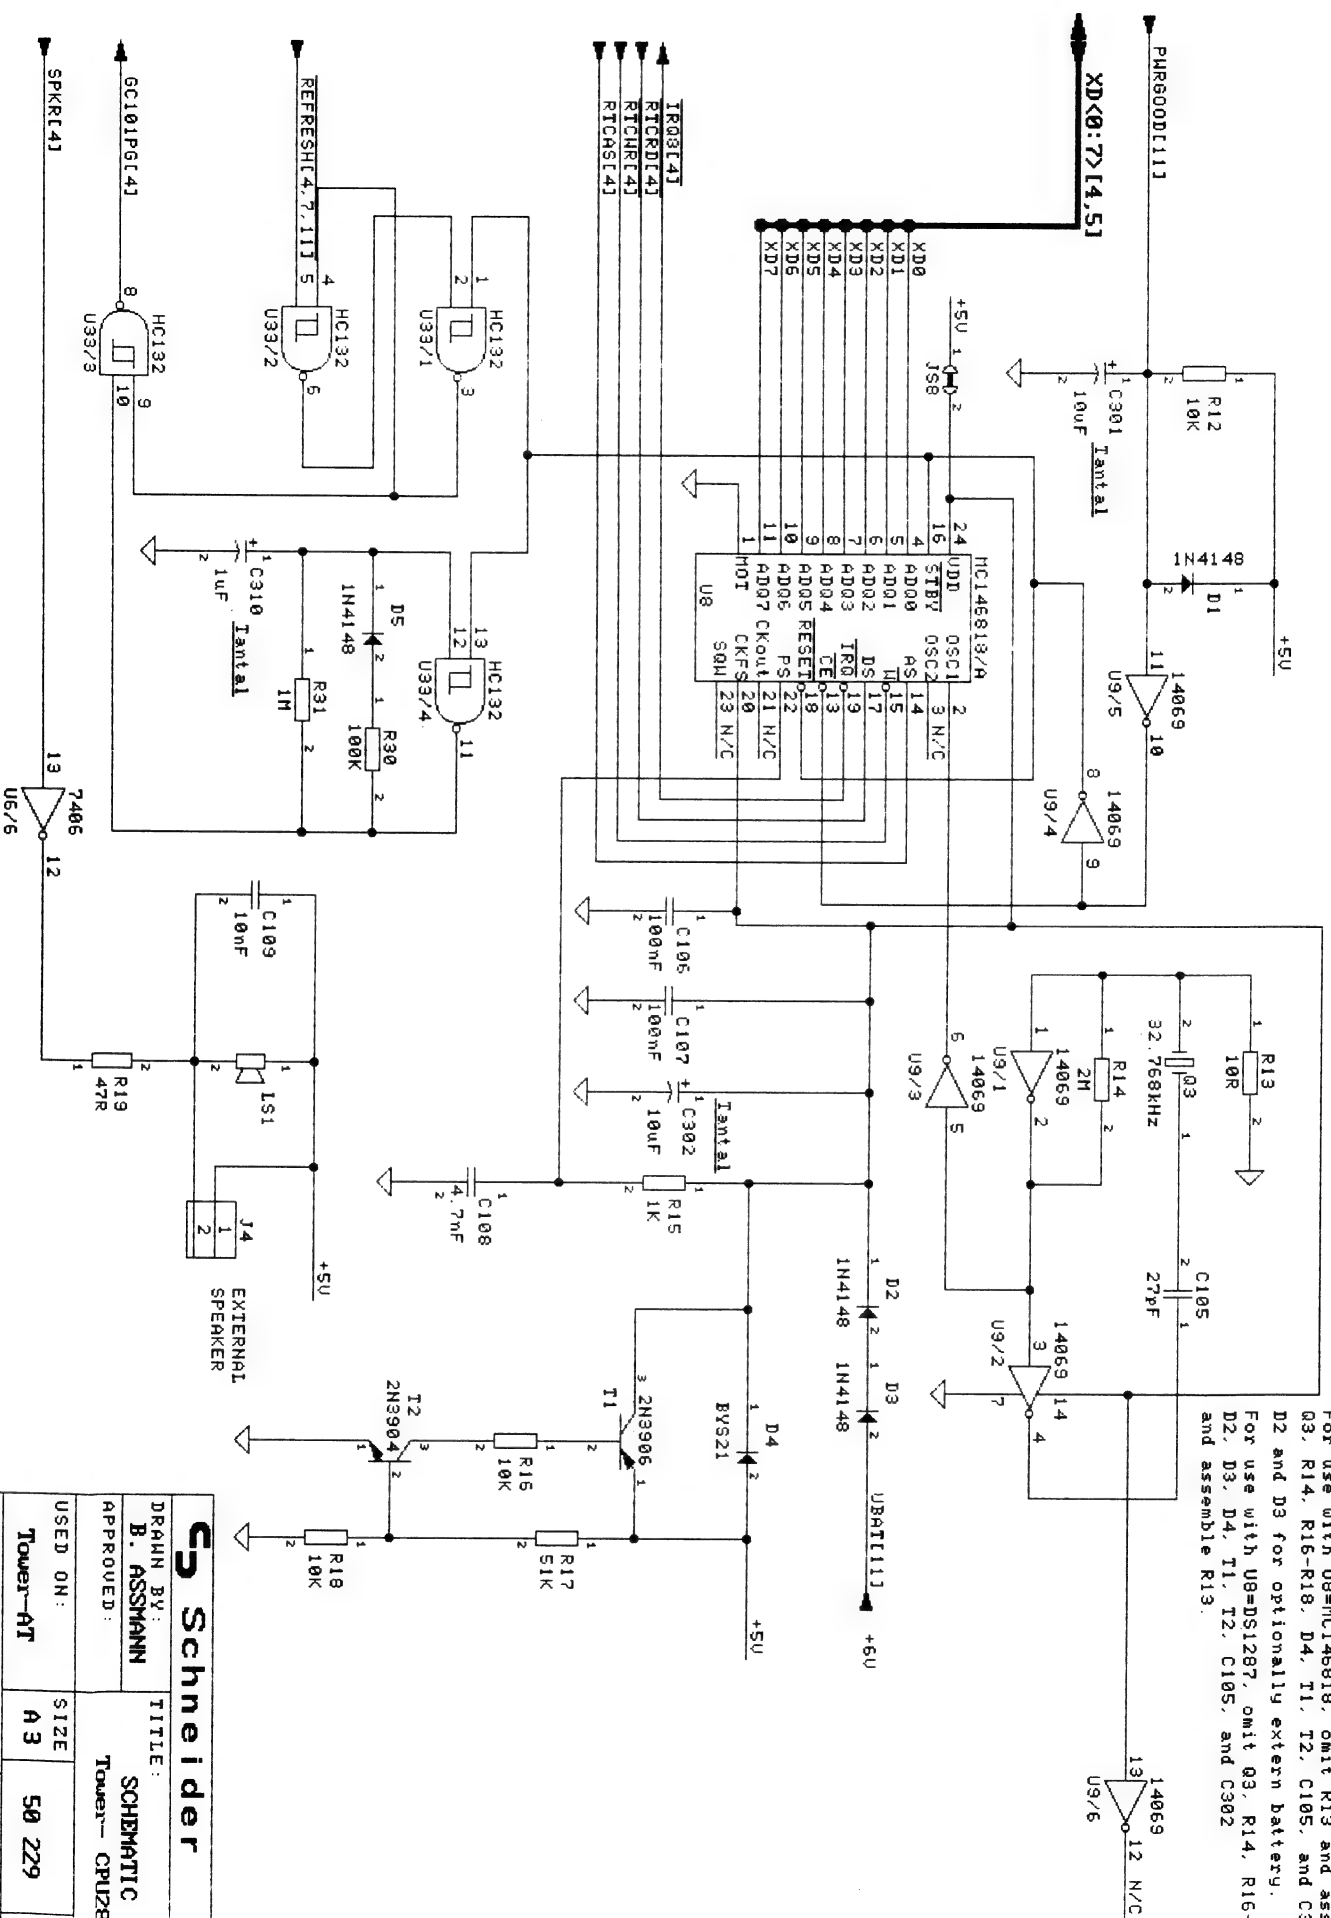

Schneider

TOM-76

DRAWN BY: B. ASSMANN
 APPROVED: Tower-CPUZ86

USED ON: Tower-AT
 SIZE: A3
 SHEET: 50 229
 REV: 7

DATE: 08-31-88

SHEET: 6 of 12

Appendix B:


Different schematics EGA I/O Rev. 8 – Rev. 7 (Layout Rev. 2 without Reworks)

၁
 ၂
 ၃
 ၄
 ၅
 ၆
 ၇
 ၈
 ၉
 ၁၀
 ၁၁
 ၁၂
 ၁၃
 ၁၄
 ၁၅
 ၁၆
 ၁၇
 ၁၈
 ၁၉
 ၂၀
 ၂၁
 ၂၂
 ၂၃
 ၂၄
 ၂၅
 ၂၆
 ၂၇
 ၂၈
 ၂၉
 ၃၀
 ၃၁
 ၃၂
 ၃၃
 ၃၄
 ၃၅
 ၃၆
 ၃၇
 ၃၈
 ၃၉
 ၄၀
 ၄၁
 ၄၂
 ၄၃
 ၄၄
 ၄၅
 ၄၆
 ၄၇
 ၄၈
 ၄၉
 ၅၀
 ၅၁
 ၅၂
 ၅၃
 ၅၄
 ၅၅
 ၅၆
 ၅၇
 ၅၈
 ၅၉
 ၆၀
 ၆၁
 ၆၂
 ၆၃
 ၆၄
 ၆၅
 ၆၆
 ၆၇
 ၆၈
 ၆၉
 ၇၀
 ၇၁
 ၇၂
 ၇၃
 ၇၄
 ၇၅
 ၇၆
 ၇၇
 ၇၈
 ၇၉
 ၈၀
 ၈၁
 ၈၂
 ၈၃
 ၈၄
 ၈၅
 ၈၆
 ၈၇
 ၈၈
 ၈၉
 ၉၀
 ၉၁
 ၉၂
 ၉၃
 ၉၄
 ၉၅
 ၉၆
 ၉၇
 ၉၈
 ၉၉
 ၁၀၀





CS				Schneider	
DRAWN BY: H. ULLRICH		TITLE: SCHEMATIC TUMER-BGA/10			
APPROVED:					
USED ON: TUMER-PC		SIZE A 3	50 Z28	REV 7	
DATE: 08-10-88		SHEET: 2 of 16			


SPARE GATES

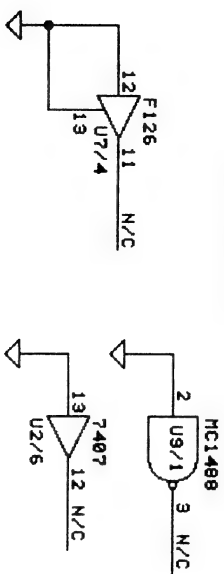


BLOCK CAPS +5V:

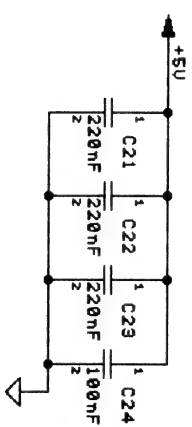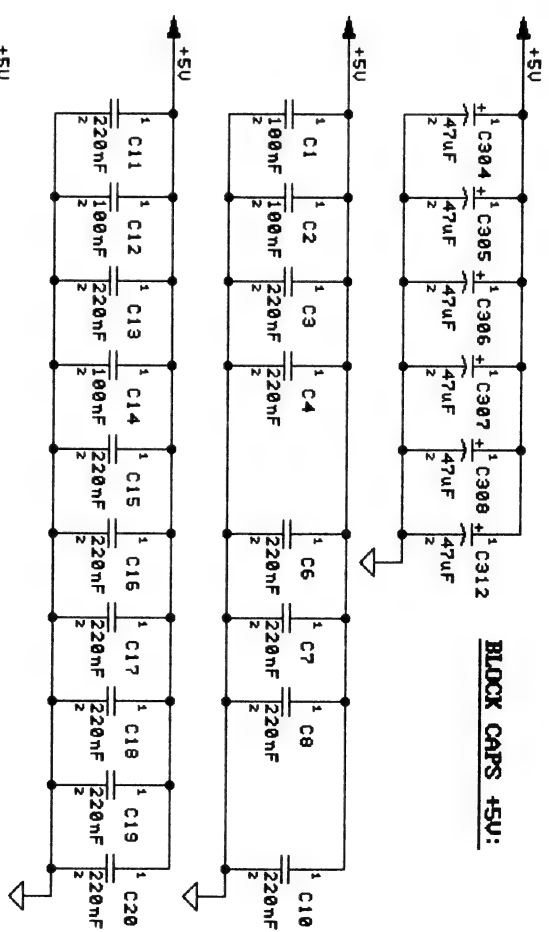

DRQ<0:3,5:7>[3,11-15]

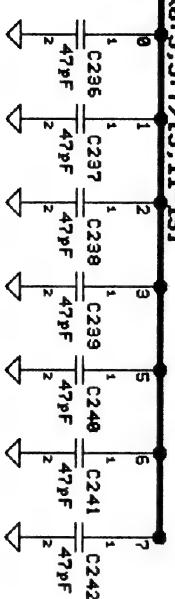

IRQ<2:7,9:15>[2,3,5,6,11-15]

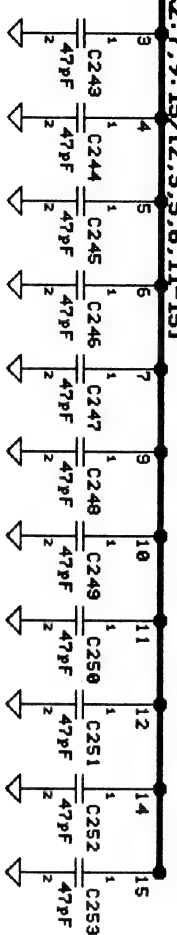

Schneider

DRAWN BY:
H. ULRICH

APPROVED:

TITLE:

SCHEMATIC
TIMER-PC/10

USED ON:

TIMER-PC

SIZE

A3

NO Z28

7

REV

7

DATE: 08-11-08

SHEET: 16 of 16

Appendix C:

Schematics CPU Rev. 9 (Layout Rev. 5)

REVISONS

LTR	DESCRIPTION	DATE	APPROVED
1	ADVANCED ENGINEERING RELEASE	05-13-88	SCHLAGE
2		05-18-88	ASSMANN
3		06-01-88	SCHLAGE
4	First Layout	06-22-88	SCHLAGE
5	Layout REV 2	08-06-88	ASSMANN
6	Layout REV 2 CORRECTIONS	08-22-88	ASSMANN
7	PCB REV 2A FIX OF BUS 'MASTER'	08-31-88	ASSMANN
8	PCB REV 4. LAYOUT: ADDITIONAL RESET LOGIC ELIMINATED	11-02-88	ULLRICH
9	PCB REV 5. LAYOUT: WITH GC 101 D	11-07-88	ASSMANN

DRAWING FILES:

TDM_91.DWG	THIS SHEET
TDM_92.DWG	CPU SECTION
TDM_93.DWG	BIOS EPROMS
TDM_94.DWG	GC 101 D
TDM_95.DWG	KEYBOARD / CLOCKS
TDM_96.DWG	REAL TIME CLOCK
TDM_97.DWG	ADDRESS / DATA BUFFERS
TDM_98.DWG	TIMING FOR MEMORY
TDM_99.DWG	MEMORY ON SIL- MODULE
TDM_910.DWG	MEMORY ON BOARD
TDM_911.DWG	CONNECTORS
TDM_912.DWG	BLOCK CAPS

Schneider

DRAWN BY:
B. ASSMANN


APPROVED:

TITLE:
SCHEMATICS
TDMER CPU286


USED ON:	SIZE	50 229	REV
TDMER-AT	A 3		9
DATE: 11-07-88	SHEET: 1 of 12		

MD<0:15>[7,9,10]
XA<0:15>[2,4,5,7,8]

BIOS-EPROM 0

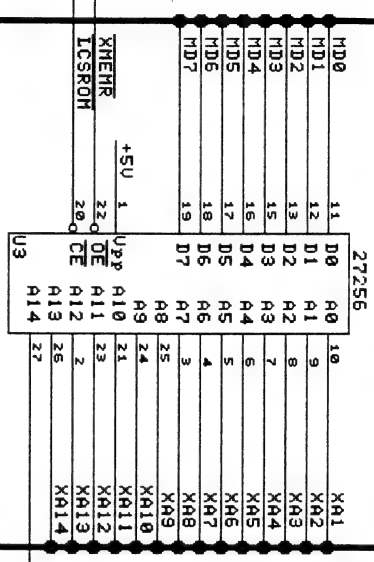

BIOS-EPROM 1

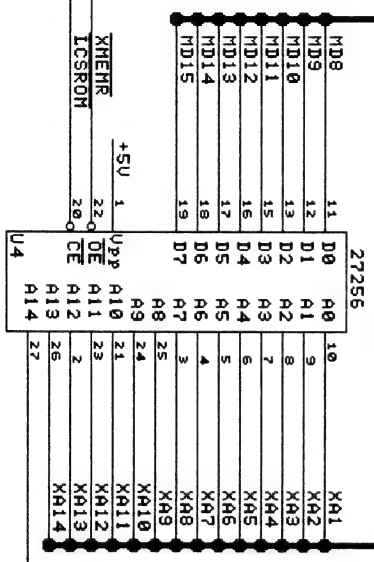


Schneider

DRÄHN BY: B. ASSMANN
APPROVED: TUMER-AT

USED ON: TUMER-AT
DATE: 11-07-88

TITLE: SCHEMATIC
TUMER CPU286
SIZE: A3
SHEET: 3 of 12

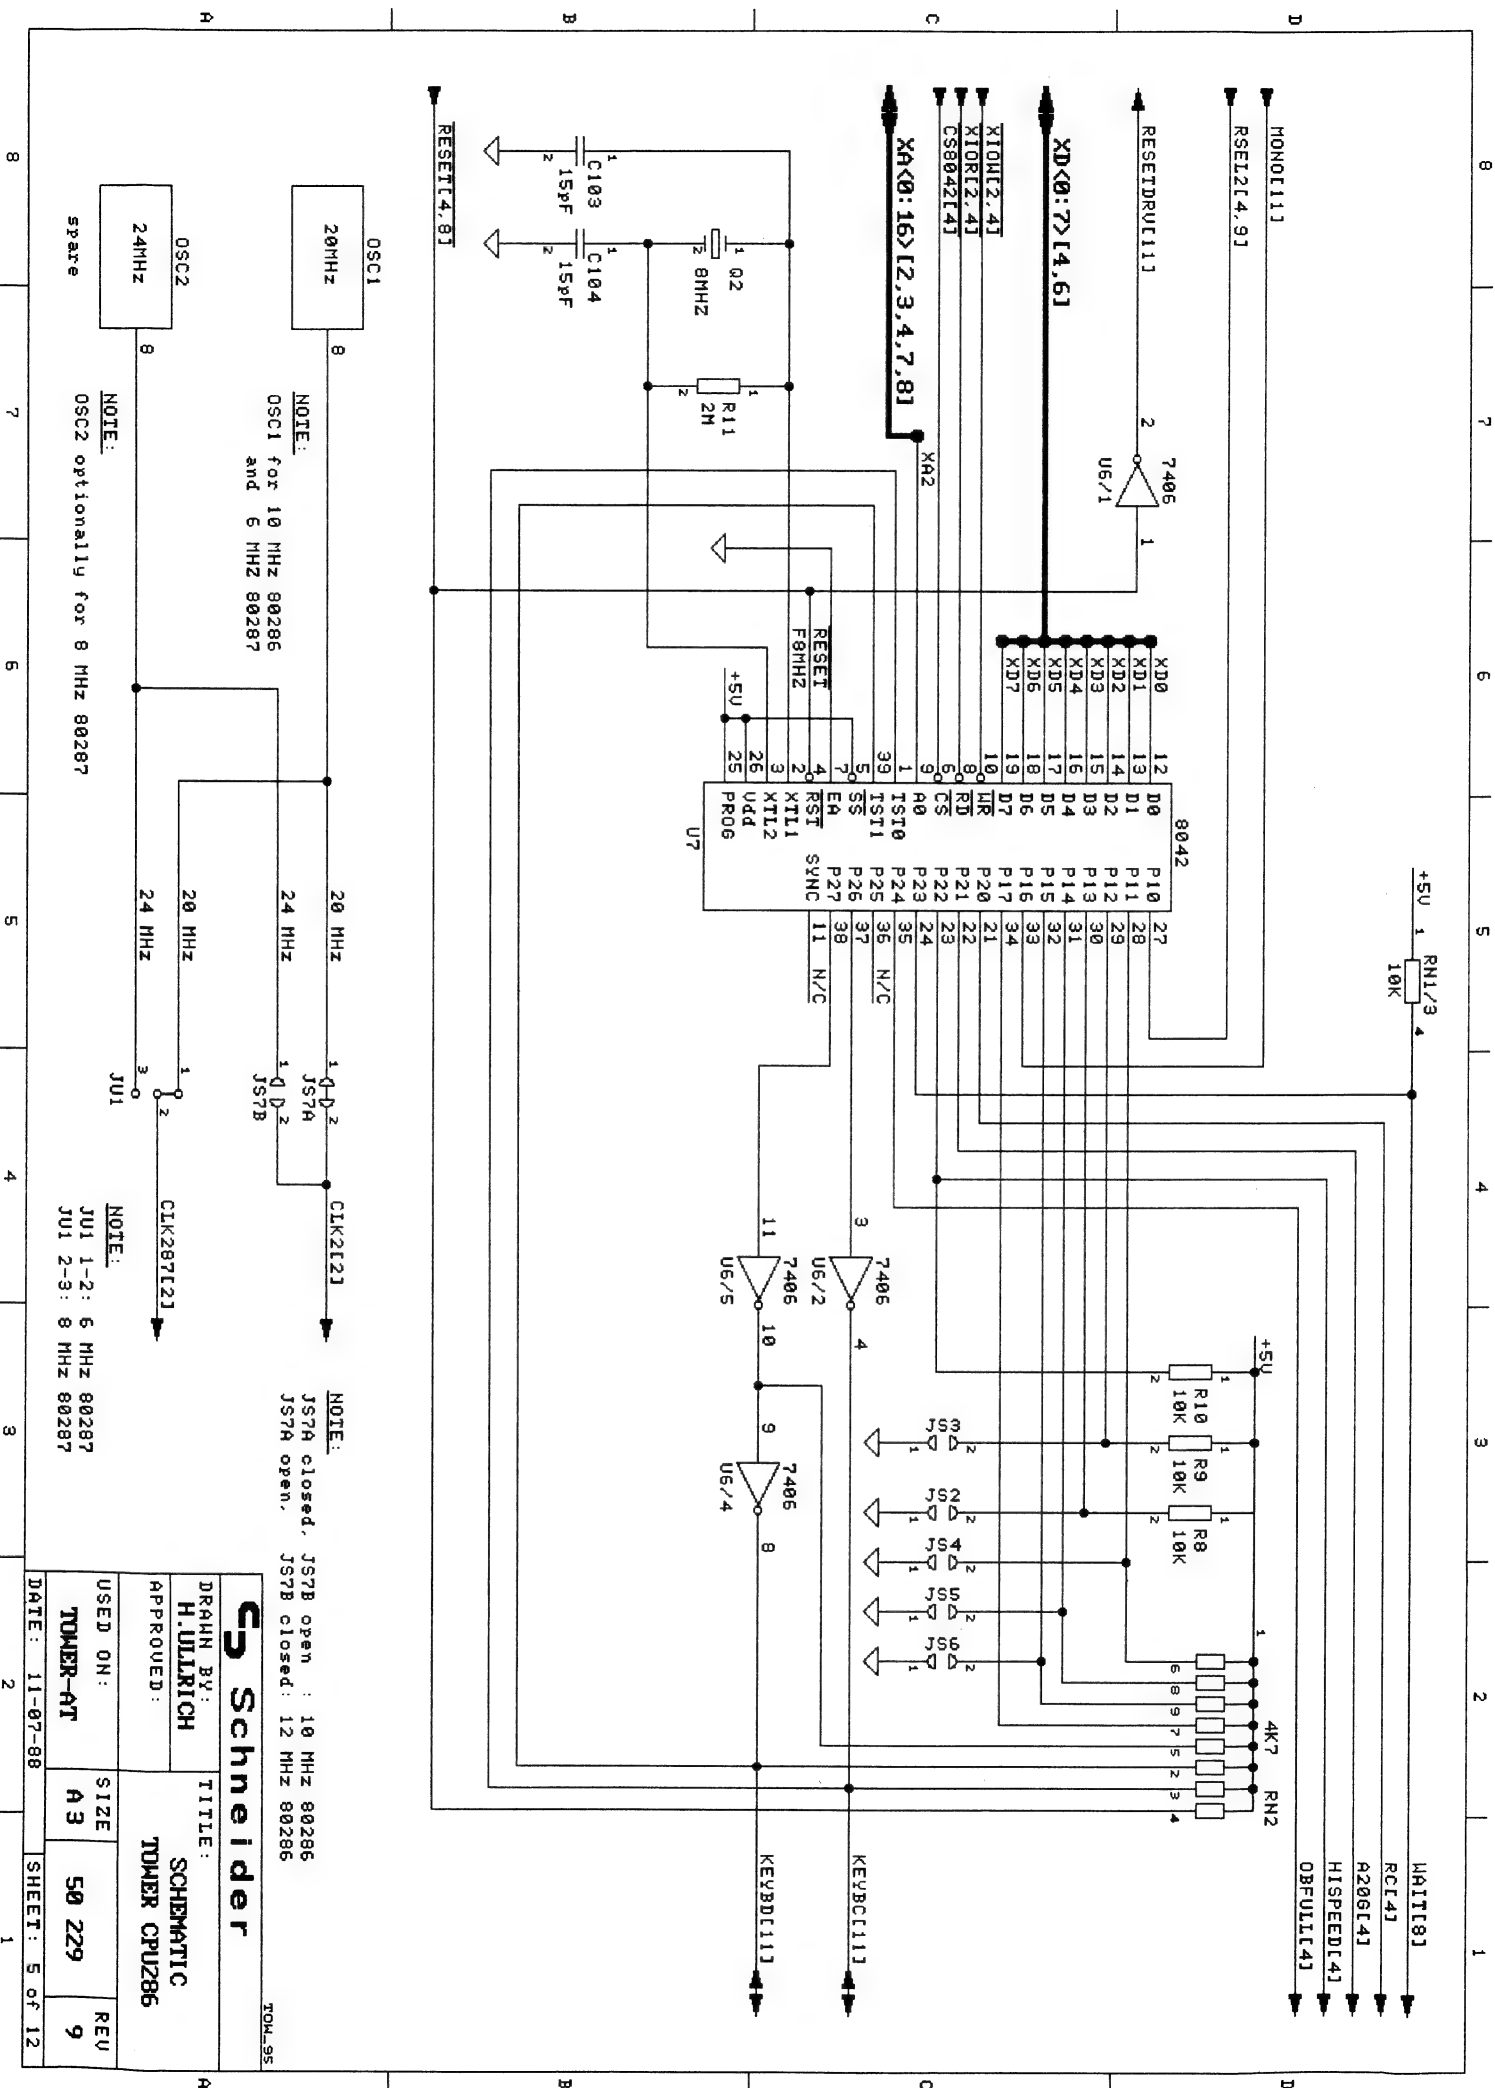


Schneider

DRAWN BY: H. ULLRICH
APPROVED: TITLE: SCHEMATIC
TOWER CPU286

USED ON: SIZE: 50 229 REV: 9

TOWER-AT

DATE: 11-07-88 SHEET: 5 of 12

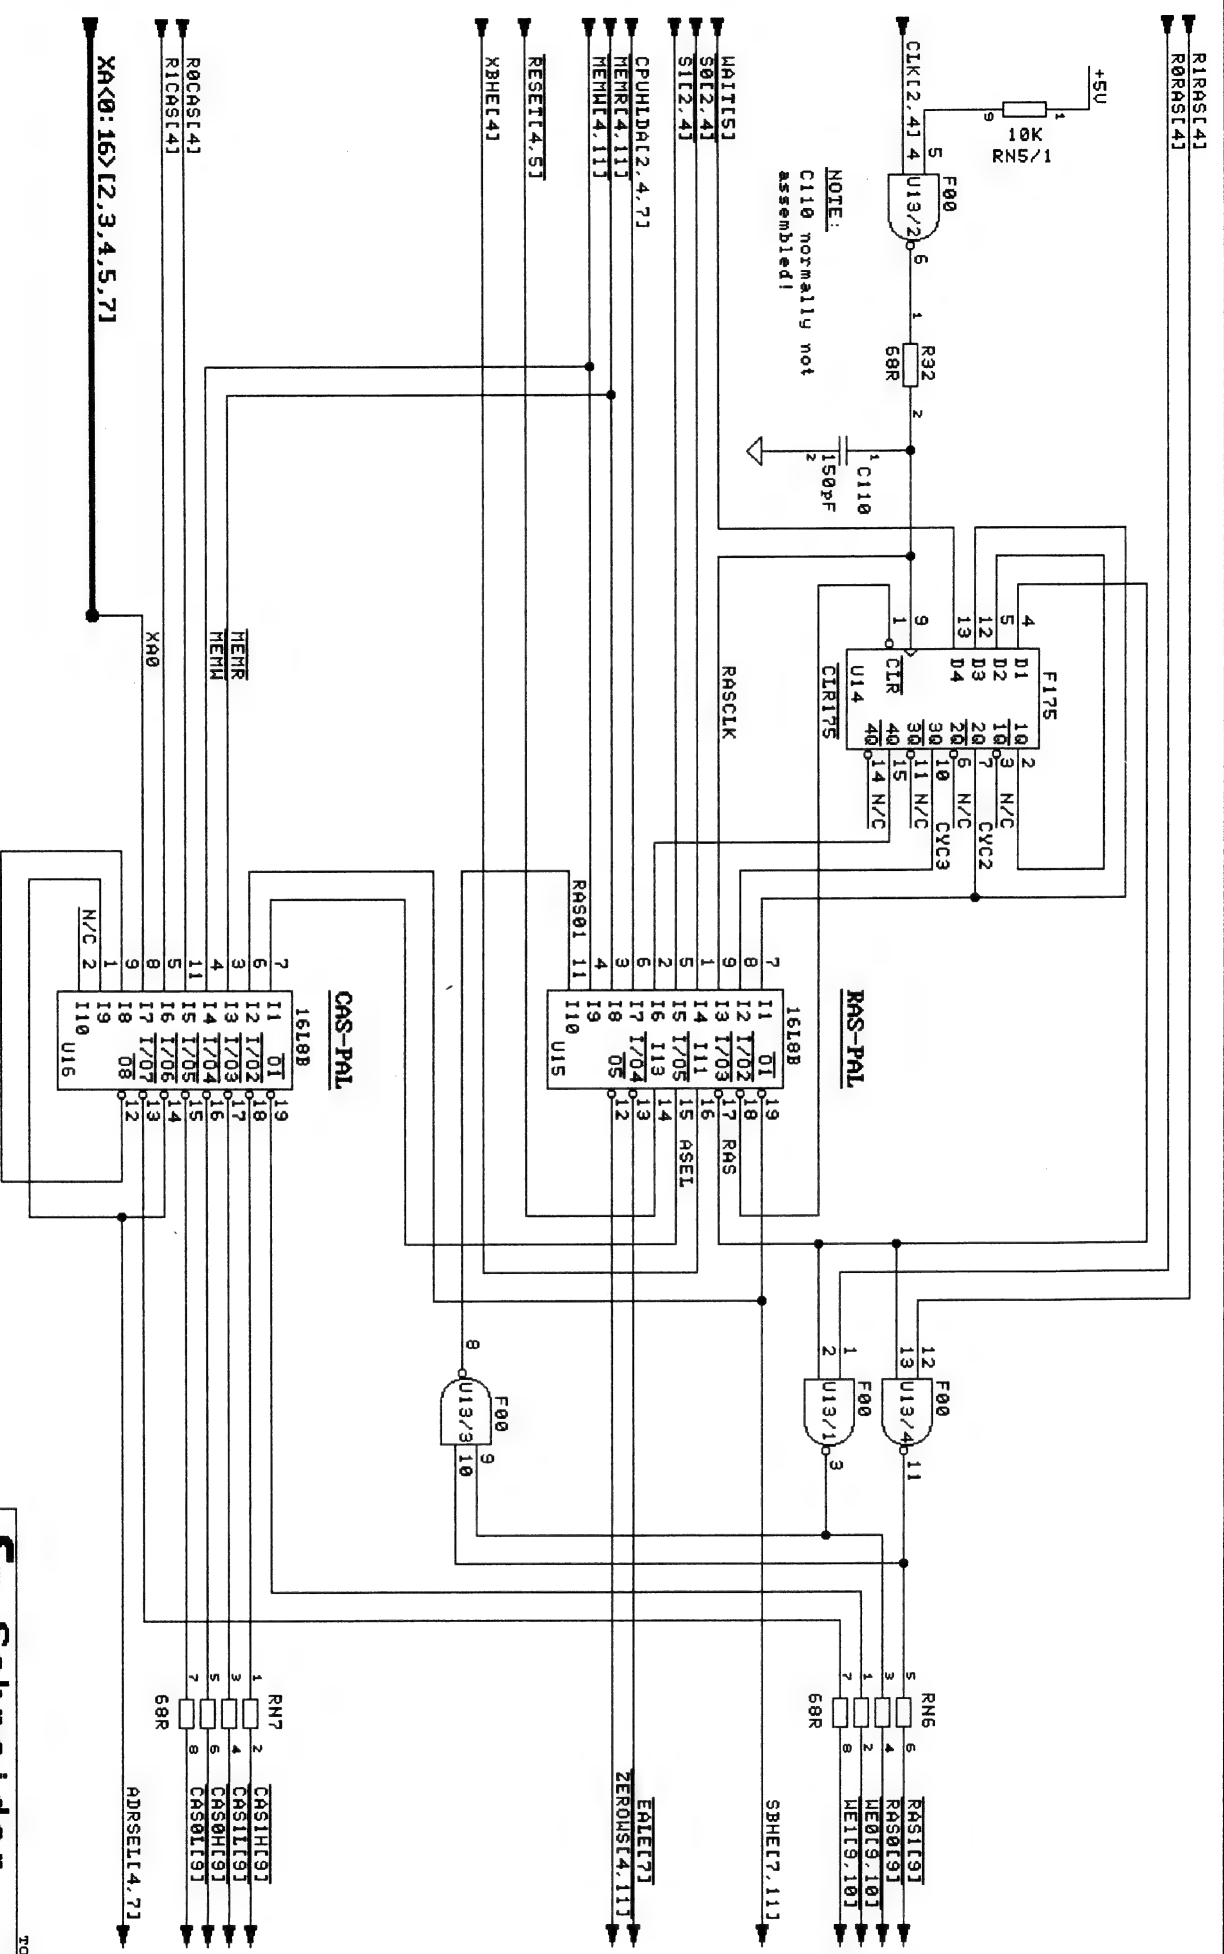

NOTE:
C110 normally not
assembled!

Schneider

TOM-98

DRAWN BY: B. ASSMANN

APPROVED:

TITLE: SCHEMATIC

TOWER CPU286



USED ON: TOWER-AT

SIZE: A3

DATE: 11-07-88

SHEET: 8 of 12

REV: 9

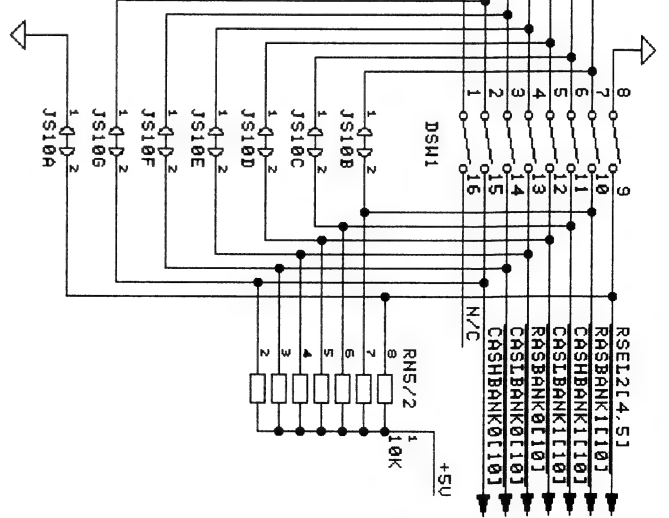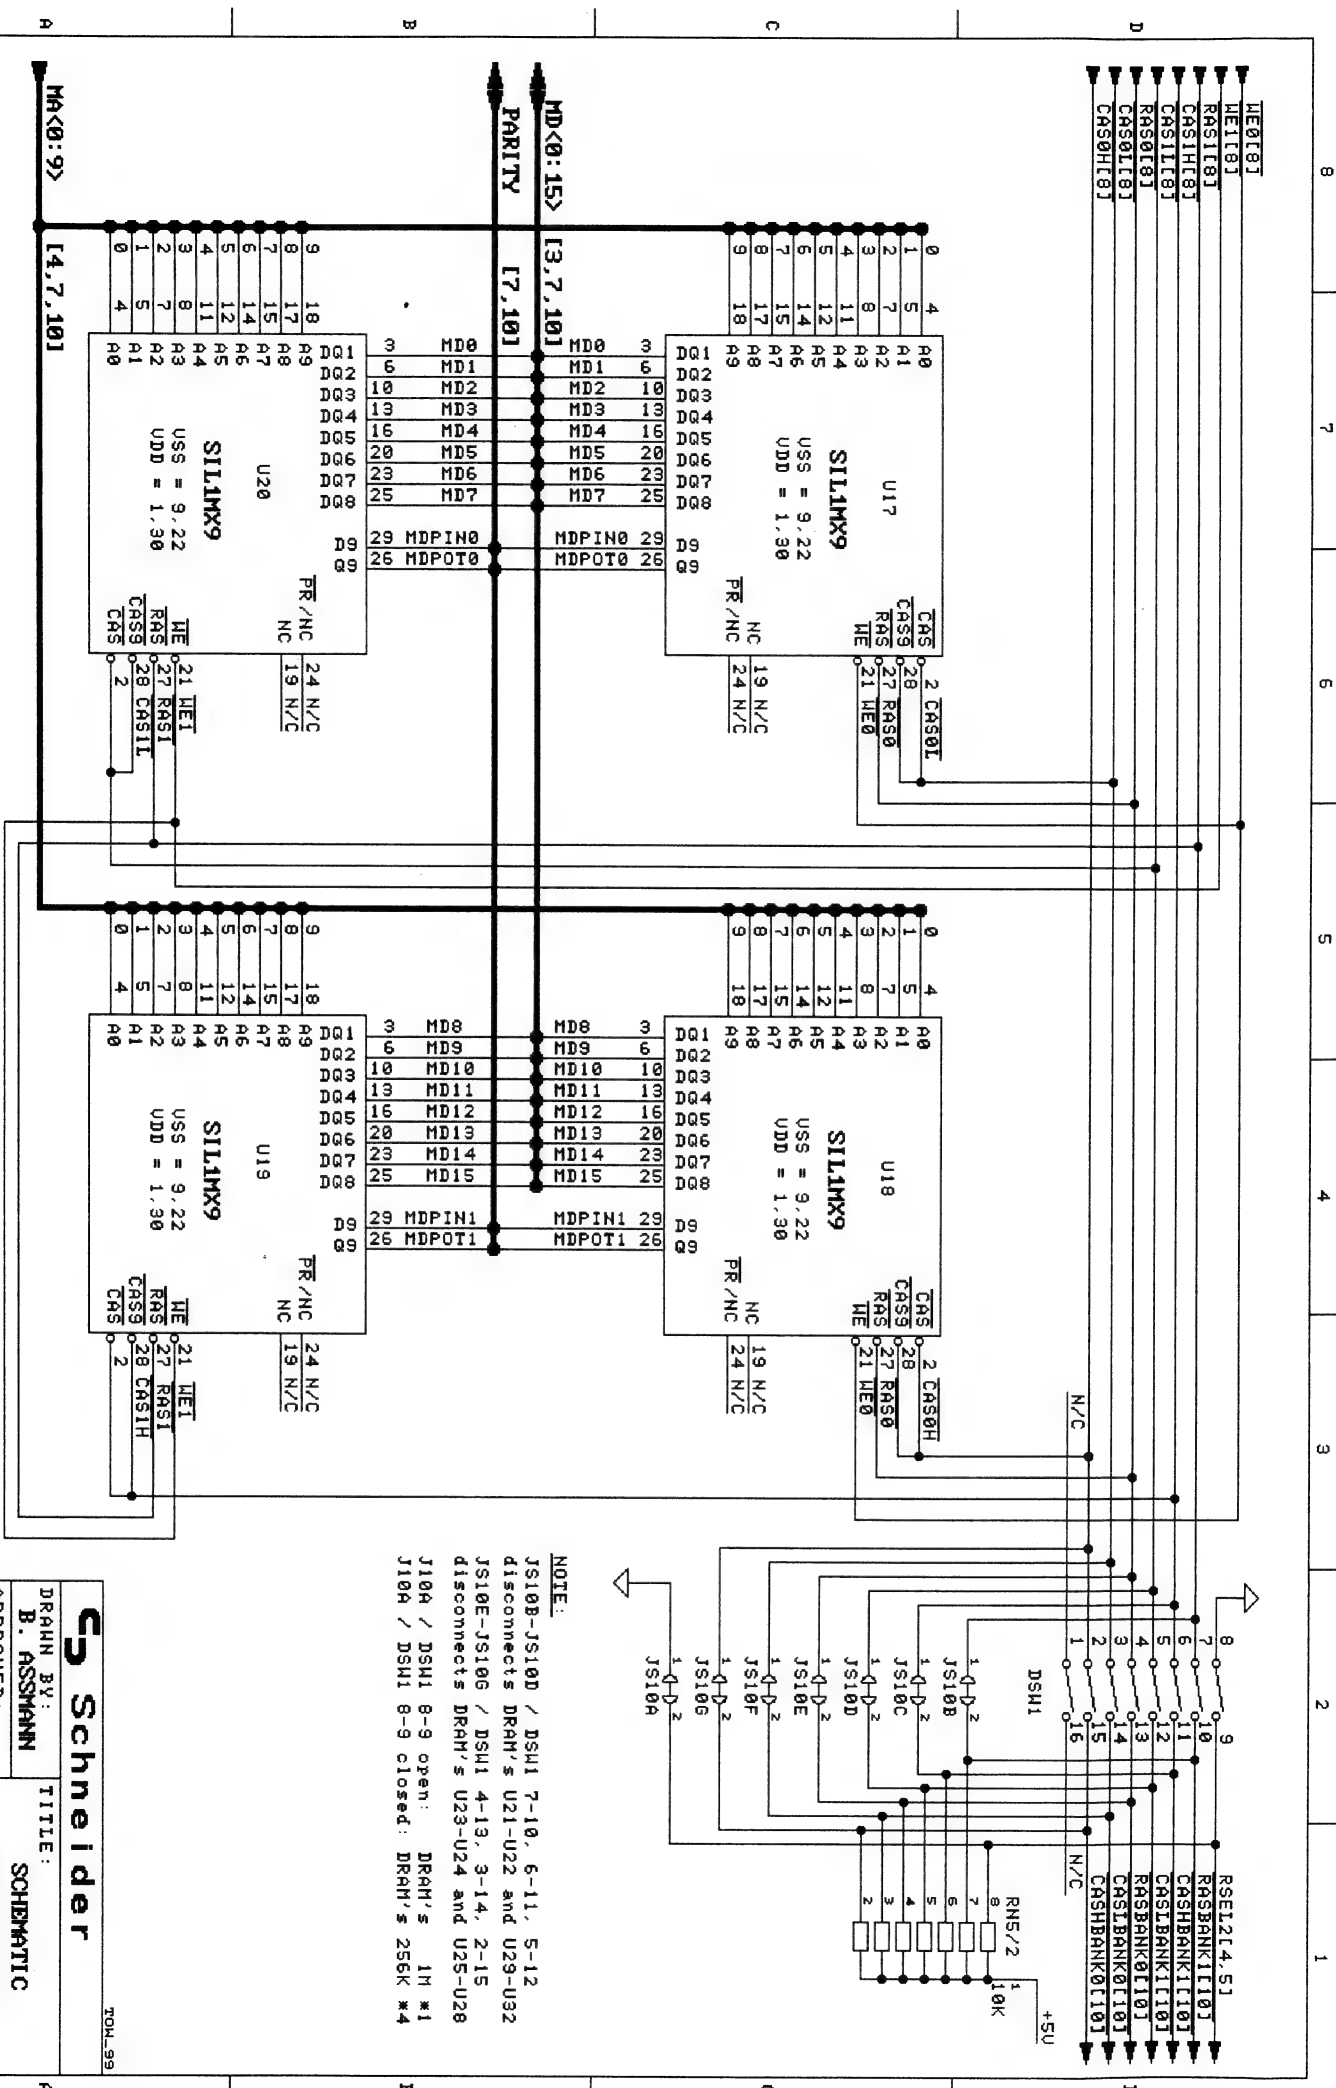

NOTE:





JS10B-JS10D / DSU1 7-10, 6-11, 5-12
 disconnects DRAM's U21-U22 and U23-U32
 JS10E-JS10G / DSU1 4-13, 3-14, 2-15
 disconnects DRAM's U23-U24 and U25-U28
 J10A / DSU1 8-9 open: DRAM's 1M *1
 J10A / DSU1 8-9 closed: DRAM's 256K *4

Schneider

TON-993

DRAMA BY: B. ASSMANN
 APPROVED:
 TITLE: SCHEMATIC
 TOWER CPU286
 USED ON: SIZE A3
 TOWER-AT 50 229
 REV 9
 DATE: 11-07-88
 SHEET: 9 of 12

MA<0:9>[7,9]
ME0[8,9]
ME1[8,9]

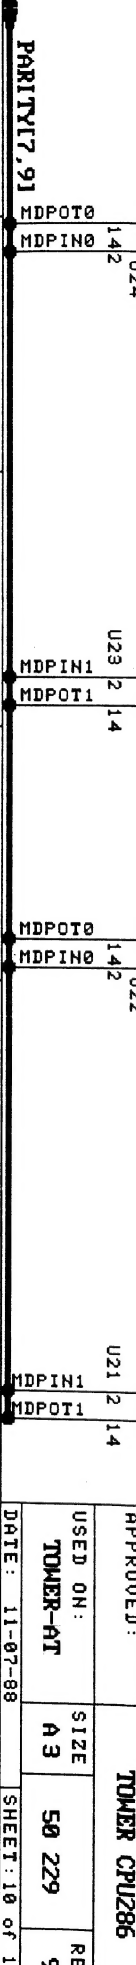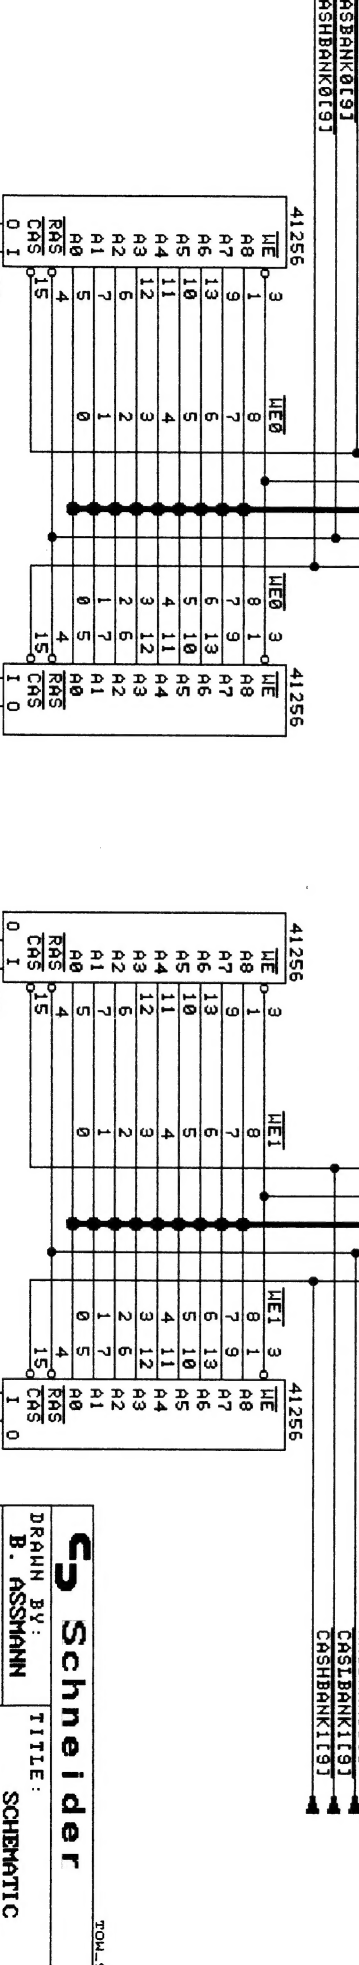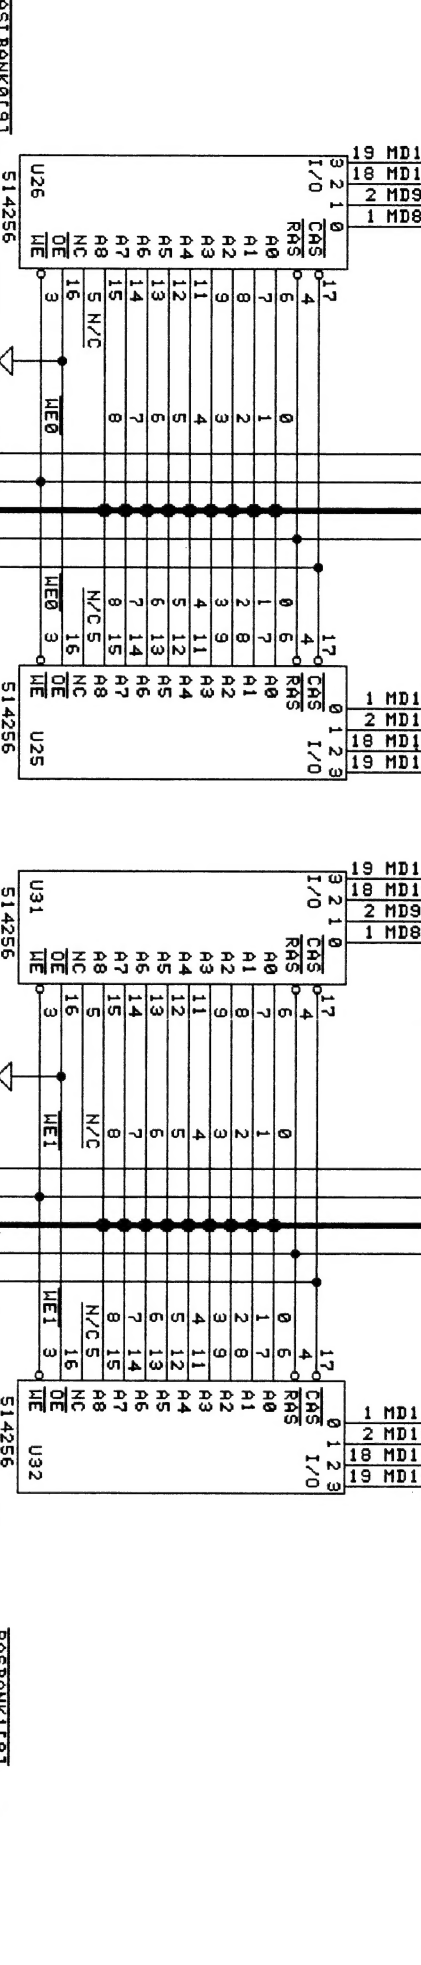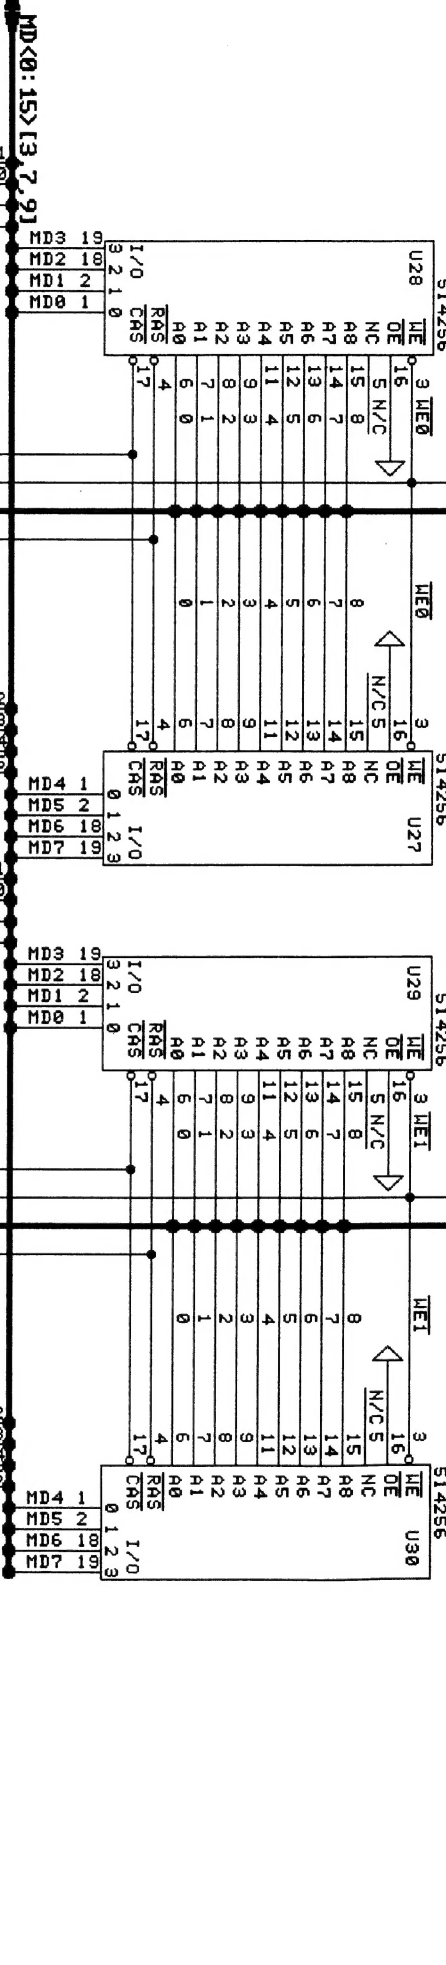

Schneider

DRAWN BY: B. ASSMANN
APPROVED: _____


TITLE: SCHEMATIC
TOWER CPU286

USED ON: TOWER-AT
DATE: 11-07-88


SIZE: A3
SHEET: 10 of 12

REV: 9


AT - Bus, 104 Pin Card Edge Connector

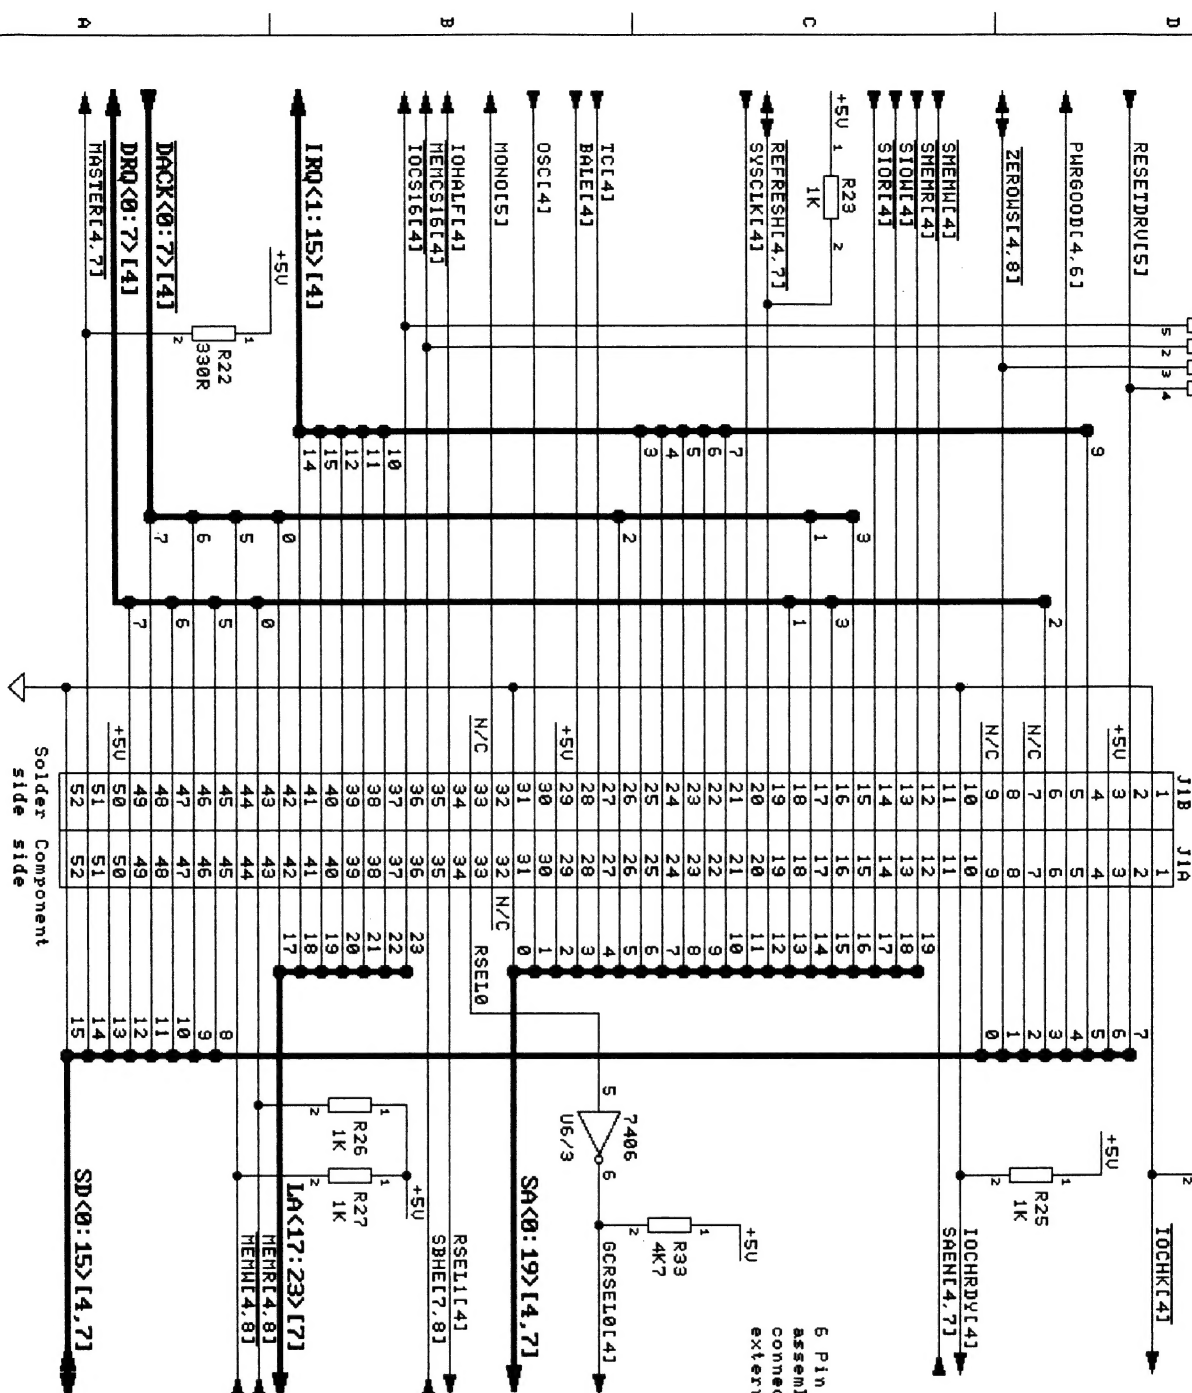

Battery- Connector +6V

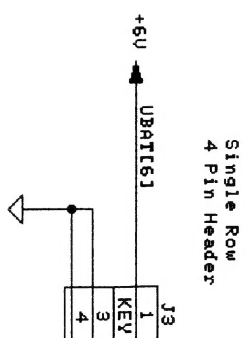

Keyboard- Connector

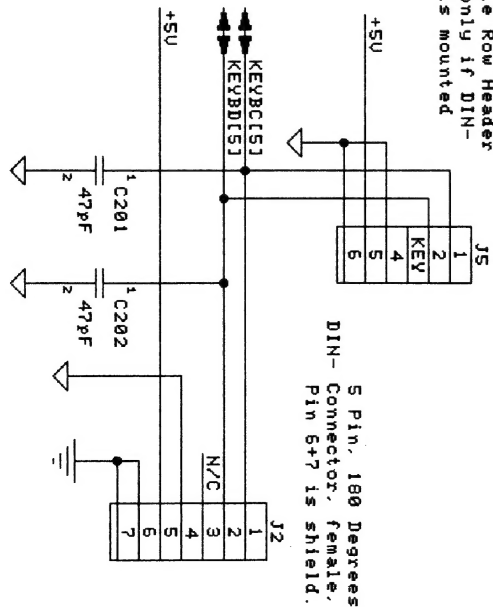


Schneider

DRAWN BY: H. ULLMICH
 APPROVED: TOMEI CPU286

USED ON: TOMEI-AT
 SIZE: A3
 50 229
 REV: 9

DATE: 11-07-88
 SHEET: 11 of 12

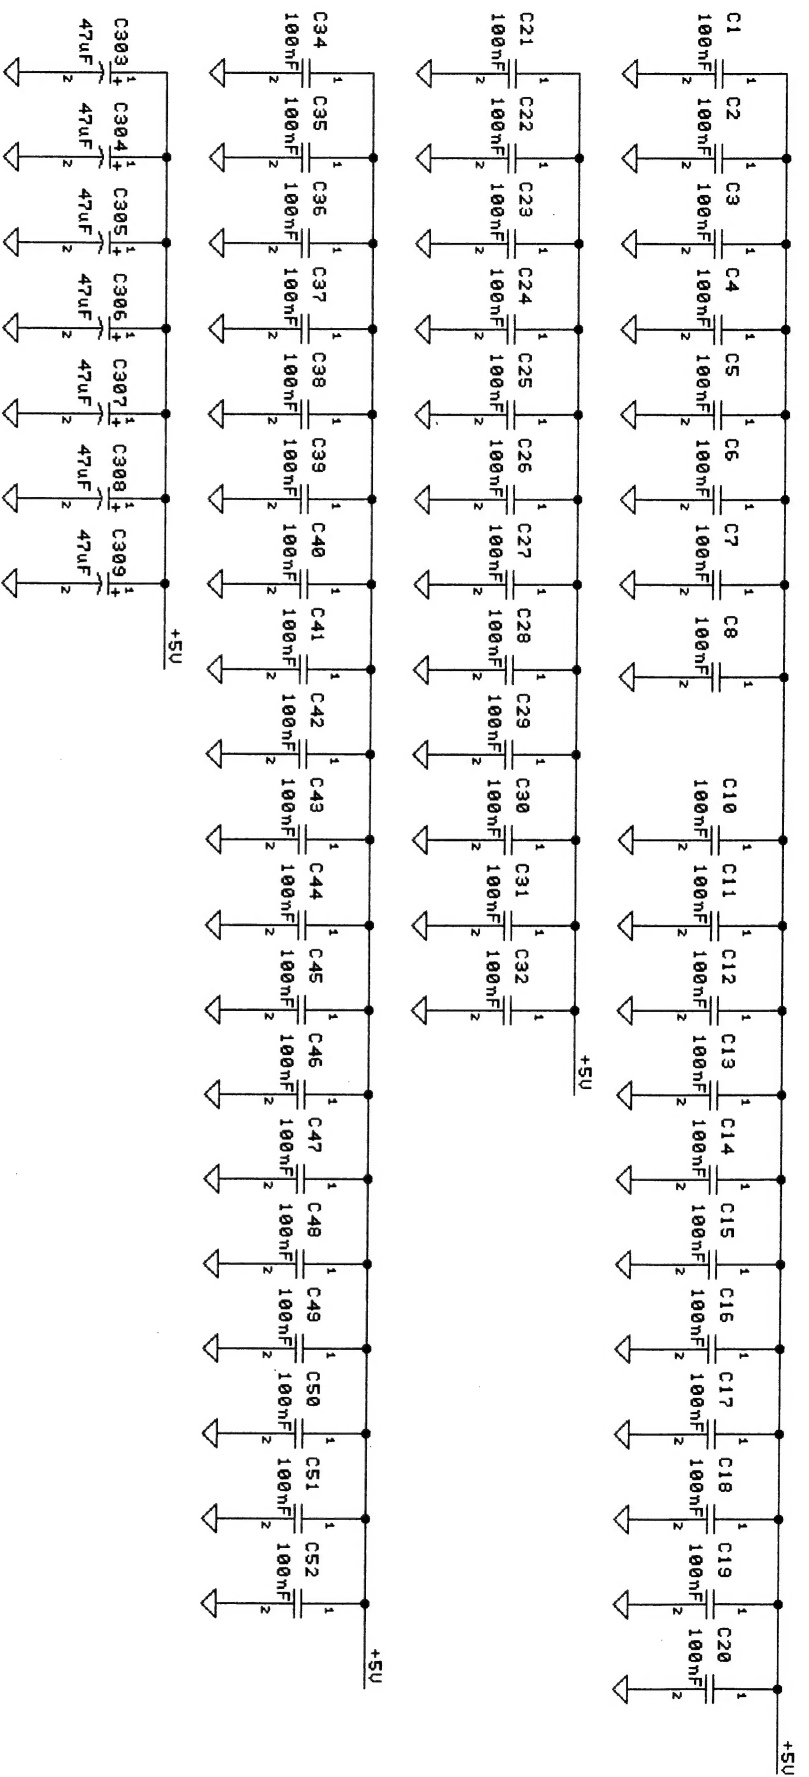

Schneider

TON-912

DRAWN BY:

B. ASSMANN

TITLE:

SCHEMATIC
TOWER CPU286

APPROVED:

USED ON:

TOWER-AT

SIZE

A3

REV

50 229
9

DATE: 11-07-88

SHEET: 12 of 12

Bitte bei Ersatzteilbestellung die genaue Bezeichnung und Ident-Nr. (siehe Typenschild) des Gerätes sowie Bestell-Nummer und Positions-Nummer des Ersatzteils angeben.

For ordering of spare parts please state exact description and ident.-no. of unit (see silver rating label on the backside of unit) as well as part no. and position no. of required spare parts.

Benutzen Sie:

Telex: 531516

oder



* 317298 #

oder

Telefax: 08245/51326